

Q-250

Wide angle 2D Imager



Serial Interface Specification Manual – Rev 1.2

The information in this document is subject to change without notice.

Document History

| | | | |
|---------------|------------|-----------------------|-----|
| Model Number: | Q-250 | Specification Number: | - |
| Edition: | 1.2 | Original Spec Number: | (-) |
| Date: | 7-may-2025 | | |

© 2025 Opticon. All rights reserved.

This manual may not, in whole or in part, be copied, photocopied, reproduced, translated or converted to any electronic or machine readable form without prior written consent of Opticon.

Limited Warranty and Disclaimers

Please read this manual carefully before installing or using the product.

Serial Number

A serial number appears on all Opticon products. This official registration number is directly related to the device purchased. Do not remove the serial number from your Opticon device. Removing the serial number voids the warranty.

Warranty

Unless otherwise agreed in a written contract, all Opticon products are warranted against defects in materials and workmanship for two years after purchase excluding batteries. Opticon will repair or, at its option, replace products that are defective in materials or workmanship with proper use during the warranty period. Opticon is not liable for damages caused by modifications made by a customer. In such cases, standard repair charges will apply. If a product is returned under warranty and no defect is found, standard repair charges will apply. Opticon assumes no liability for any direct, indirect, consequential or incidental damages arising out of use or inability to use both the hardware and software, even if Opticon has been informed about the possibility of such damages.

Packaging

The packing materials are recyclable. We recommend that you save all packing material to use should you need to transport your data collector or send it for service. Damage caused by improper packaging during shipment is not covered by the warranty.

Trademarks

Trademarks used are the property of their respective owners.

Opticon Inc. and Opticon Sensors Europe B.V. are wholly owned subsidiaries of OPTOELECTRONICS CO.,LTD., 12-17, Tsukagoshi 4-chome, Warabi-shi, Saitama, Japan 335-0002. TEL +81-(0) 48-446-1183; FAX +81-(0) 48-446-1184

SUPPORT

USA

Phone: 800-636-0090
Email: support@opticonusa.com
Web: www.opticonusa.com

Rest of World

Phone: +31235692728
Email: support@opticon.com
Web: www.opticon.com

Revision History

Document Name : Q-250

| Edition | Date | Section | Description of Changes | Supported Firmware |
|---------|------------|---------|------------------------|--------------------|
| Rev 1 | 2024/10/11 | - | Initial release | - |
| Rev 1.1 | 2025/04/21 | - | General updates | - |
| Rev 1.2 | 2025/05/7 | - | General updates | - |

Contents

| | | |
|----------|---|-----------|
| 1 | Abstract | 9 |
| 1.1 | Features of the Scan Engine..... | 9 |
| 1.2 | Flow to Integrate..... | 10 |
| 2 | Model details | 11 |
| 2.1 | Standard Product Specifications | 11 |
| 3 | Configurations | 12 |
| 3.1 | Configuring with Commands | 12 |
| 3.1.1 | Command Packet | 12 |
| 3.1.2 | Command Packet Sending Precautions..... | 13 |
| 3.2 | Command Packet Sending Precautions | 14 |
| 3.2.1 | Description of Settings..... | 14 |
| 3.2.2 | Interface Default Settings | 15 |
| 3.2.3 | Save Settings..... | 15 |
| 3.3 | Custom Command Line Settings (Change the Factory Default Settings)..... | 16 |
| 3.4 | Basic Commands | 17 |
| 3.4.1 | Trigger Command..... | 17 |
| 3.4.2 | Diagnostic Commands..... | 17 |
| 3.4.3 | ACK/NAK for Serial Commands | 17 |
| 3.4.4 | Reboot the Scan Engine..... | 18 |
| 3.4.5 | Enable/Disable 2D Menu Code | 18 |
| 3.4.6 | Enable/Disable 1D Menu Code | 18 |
| 3.4.7 | Image Settings..... | 19 |
| 3.4.8 | Disable Reading Operation..... | 19 |
| 3.4.9 | Buzzer and Indicators | 20 |
| 3.4.10 | Direct Numerical Input Command..... | 20 |
| 3.5 | Configuring with 2D Menu Codes..... | 21 |
| 3.6 | Configuring with 1D Menu Codes..... | 22 |
| 4 | Interface | 23 |
| 4.1 | UART..... | 23 |
| 4.1.1 | Switch the Interface to UART | 23 |
| 4.1.2 | UART Interface Signal | 24 |
| 4.1.3 | UART Basic Information | 25 |
| 4.1.4 | Baud Rate (Transfer Speed)..... | 25 |
| 4.1.5 | Character Format..... | 26 |
| 4.1.6 | Handshaking (Flow Control) | 26 |
| 4.1.7 | Inter Character Delay (UART) | 29 |
| 4.1.8 | Troubleshooting UART | 29 |
| 4.2 | USB-COM..... | 30 |
| 4.2.1 | Switch the Interface to USB..... | 31 |

| | | |
|----------|---|-----------|
| 4.2.2 | USB Interface Signal | 31 |
| 4.2.3 | USB-COM Basic Information | 32 |
| 4.2.4 | Integration (USB Driver) | 32 |
| 4.2.5 | Confirm the USB-COM Connection | 33 |
| 4.2.6 | Fixed USB-COM Port..... | 33 |
| 4.2.7 | Connect to the Host PC | 34 |
| 4.2.8 | Troubleshooting USB-COM..... | 34 |
| 4.3 | USB-HID..... | 35 |
| 4.3.1 | Switching the Interface to USB-HID..... | 36 |
| 4.3.2 | USB Interface Signal | 36 |
| 4.3.3 | USB-HID Basic Information | 37 |
| 4.3.4 | Confirm the USB-HID Connection | 38 |
| 4.3.5 | NumLock and CapsLock Control | 38 |
| 4.3.6 | Data Output Speed (USB-HID)..... | 39 |
| 4.3.7 | Inter Character Delay (USB-HID) | 39 |
| 4.3.8 | Keyboard Language | 40 |
| 4.3.9 | Multi-Byte Character Output | 41 |
| 4.3.10 | Troubleshooting (USB-HID)..... | 42 |
| 4.3.11 | Precautions | 42 |
| 4.4 | Data Buffer Mode | 43 |
| 5 | Power Management and Timing | 44 |
| 5.1 | Power Mode Transition | 45 |
| 5.2 | Current Consumption | 46 |
| 5.2.1 | Absolute Maximum Ratings | 46 |
| 5.2.2 | Recommended Operating Conditions..... | 46 |
| 5.2.3 | Peak Current Consumption | 46 |
| 5.3 | Low Power..... | 47 |
| 5.3.1 | Enable/Disable Low Power..... | 47 |
| 5.3.2 | Transition Time | 47 |
| 5.3.3 | USB Low Power Mode Transition Condition | 48 |
| 5.3.4 | USB Low Power Mode Communication Sequence | 49 |
| 5.4 | Recovery from Low Power Mode | 50 |
| 5.4.1 | Recovery from Low Power Mode by Signal (UART) | 50 |
| 5.4.2 | Recovery from Low Power Mode by Command (UART)..... | 51 |
| 5.4.3 | Recovery from Low Power Mode (USB)..... | 52 |
| 5.5 | Power ON/OFF Timing..... | 53 |
| 5.5.1 | Power-On Timing..... | 53 |
| 5.5.2 | Power-Off Timing..... | 54 |
| 5.6 | Read Timing | 55 |
| 5.6.1 | Read Effective Time..... | 56 |
| 5.6.2 | Trigger Signal Control..... | 57 |

| | | |
|----------|---|-----------|
| 5.6.3 | Command Trigger Control | 58 |
| 5.6.4 | Trigger Delay | 59 |
| 5.6.5 | Decode Timeout..... | 59 |
| 6 | Code Options..... | 60 |
| 6.1 | Setting Readable Codes | 61 |
| 6.1.1 | 1D Bar Codes | 61 |
| 6.1.2 | Postal Code | 62 |
| 6.1.3 | GS1 DataBar..... | 62 |
| 6.1.4 | GS1 Composite Code..... | 63 |
| 6.1.5 | 2D Codes | 64 |
| 6.1.6 | OCR..... | 64 |
| 6.1.7 | Code Type Settings | 65 |
| 6.2 | Setting Code Common Options..... | 66 |
| 6.2.1 | GS1 Convert | 66 |
| 6.2.2 | Positive and Negative Image of Bar Codes (1D Code Common) | 67 |
| 6.2.3 | Smart Quiet Zone (1D Code)..... | 68 |
| 6.2.4 | Redundancy (1D Code Common) | 69 |
| 6.2.5 | Add-On Waiting Time | 69 |
| 6.2.6 | ECI Protocol Output..... | 70 |
| 6.2.7 | OCR Free Edit | 71 |
| 6.2.8 | DPM (Dot Peen Making) Code Reading..... | 72 |
| 6.3 | Setting Code Specific Options..... | 73 |
| 6.3.1 | UPC | 73 |
| 6.3.2 | EAN/JAN..... | 76 |
| 6.3.3 | Code 39 and It. Pharm..... | 80 |
| 6.3.4 | Codabar | 82 |
| 6.3.5 | Interleaved 2 of 5 and S-Code..... | 84 |
| 6.3.6 | Code 128 | 85 |
| 6.3.7 | IATA | 86 |
| 6.3.8 | MSI/Plessey | 86 |
| 6.3.9 | UK/Plessey | 86 |
| 6.3.10 | Telepen | 87 |
| 6.3.11 | Code 11 | 87 |
| 6.3.12 | Korean Postal Authority | 87 |
| 6.3.13 | GS1 DataBar..... | 88 |
| 6.3.14 | Composite GS1 DataBar | 89 |
| 6.3.15 | PDF417 | 90 |
| 6.3.16 | QR Code | 91 |
| 6.3.17 | Data Matrix..... | 93 |
| 6.3.18 | Aztec Code | 94 |
| 6.4 | Setting Number of Characters..... | 95 |

| | | |
|-----------|--|------------|
| 6.4.1 | Fixed Length ON, Minimum/Maximum Length for Selected Codes | 95 |
| 6.4.2 | Command List: Fixed Length ON/Minimum/Maximum Length..... | 96 |
| 7 | String Options | 97 |
| 7.1 | Case Conversion..... | 98 |
| 7.2 | Prefix/Suffix (Appending Character Function)..... | 99 |
| 7.2.1 | Set Prefix/Suffix | 100 |
| 7.2.2 | Prefix/Suffix Settings..... | 101 |
| 7.2.3 | ASCII (Prefix/Suffix Values)..... | 103 |
| 7.2.4 | Code ID..... | 104 |
| 7.2.5 | Code Length | 104 |
| 8 | Read Options | 105 |
| 8.1 | Read Modes | 106 |
| 8.1.1 | Read Modes..... | 106 |
| 8.2 | Auto Trigger..... | 107 |
| 8.2.1 | Normal Auto Trigger | 107 |
| 8.2.2 | Auto Trigger Sensitivity..... | 107 |
| 8.2.3 | Double Read Reset Time | 107 |
| 8.3 | Illumination and Aiming | 108 |
| 8.3.1 | Reading LED Illumination | 108 |
| 9 | Indicator Options | 109 |
| 9.1 | Buzzer (BUZZERn Signal) | 110 |
| 9.1.1 | Buzzer Loudness | 110 |
| 9.1.2 | Good Read Buzzer | 110 |
| 9.1.3 | Start-Up Buzzer | 111 |
| 9.1.4 | Intermediate Buzzer..... | 111 |
| 9.2 | Good Read LED (GR_LEDn Signal)..... | 112 |
| 9.2.1 | Good Read LED..... | 112 |
| 9.3 | Indicator in General | 112 |
| 9.3.1 | Indicator Timing | 112 |
| 10 | Appendix..... | 113 |
| 10.1 | Code ID Table | 114 |
| 10.1.1 | Opticon Code ID Prefix/Suffix Values..... | 114 |
| 10.1.2 | Code Option AIM/ISO15424 Code ID Prefix/Suffix Values | 115 |
| 10.2 | Q-250 Specification Overview | 119 |
| 10.2.1 | Common Specification Overview..... | 119 |
| 10.2.2 | Technical Specifications | 122 |
| 10.2.3 | Q-250 Detailed View..... | 123 |
| 10.3 | Sample Codes..... | 124 |
| 10.3.1 | 1D Code..... | 124 |
| 10.3.2 | Postal Code | 128 |
| 10.3.3 | GS1 DataBar..... | 129 |

| | | |
|--------|--|-----|
| 10.3.4 | GS1 Composite Code | 130 |
| 10.3.5 | 2D Code | 132 |
| 10.3.6 | OCR Font (Machine Readable Travel Document)..... | 134 |

1 Abstract

This document provides the serial interface specifications for the Q-250 scan engine.


1.1 Features of the Scan Engine

The Q-250 is a module, imager based, 2D barcode presentation scanner that enables high speed scanning of 1D (linear) and 2D barcodes. The main features of the Q-250 are as follows:

- **360° high speed reading:** The extremely high-performance decoder and electronics used in this product ensures stress-free scanning and fast response without being affected by hand movement and poor lighting conditions. It has full spectrum illumination suitable for on and off screen scanning.
- **Wide Angle Lens:** Provides a broad field of view, enhancing the scanner's ability to capture barcodes at small distances and at various angles and positions.
- **Fast, global shutter, highly sensitive CMOS sensor:** The camera inside the Q-250 uses a very fast 120 frames/second sensor with a global shutter with auto exposure. This results in an exceptionally high movement tolerance. The CMOS sensor has a very high sensitivity which means that the scanner can usually work without having the illumination LEDs on most of the time. This greatly improves the reading of LCD screens such as those on smart phones.
- **Editing function:** This scanner features a unique function called "Data Editing Program" which gives a user an almost unlimited flexibility to format the scanned data before it is sent out. Up to 16 barcodes can be (partially) combined and fixed parts can be added before it is output in one go. The output editing process, such as GS1 format, can also be configured easily.
- **Flexible interface:** The scanner comes with a dual interface that can accommodate RS232 and USB. When the USB interface is used, the scanner will be recognized as two device ports on the host computer. The first device port can be configured as keyboard (USB_HID) or as a serial port (USB-COM) over which the scanned barcode data is sent. The second port is for sending configuration commands. This allows configuring the scanner with serial commands even when it is configured as keyboard scanner. No drivers need to be installed in modern versions of Windows and Mac OS. The USB interface can be used via either a standard cable with a USB-C plug, or via a cable that is connected to the 12-pin board-to-cable header on the scanner. This header also provides the RS232 interface.

1.2 Flow to Integrate

This section describes the general flow to integrate.

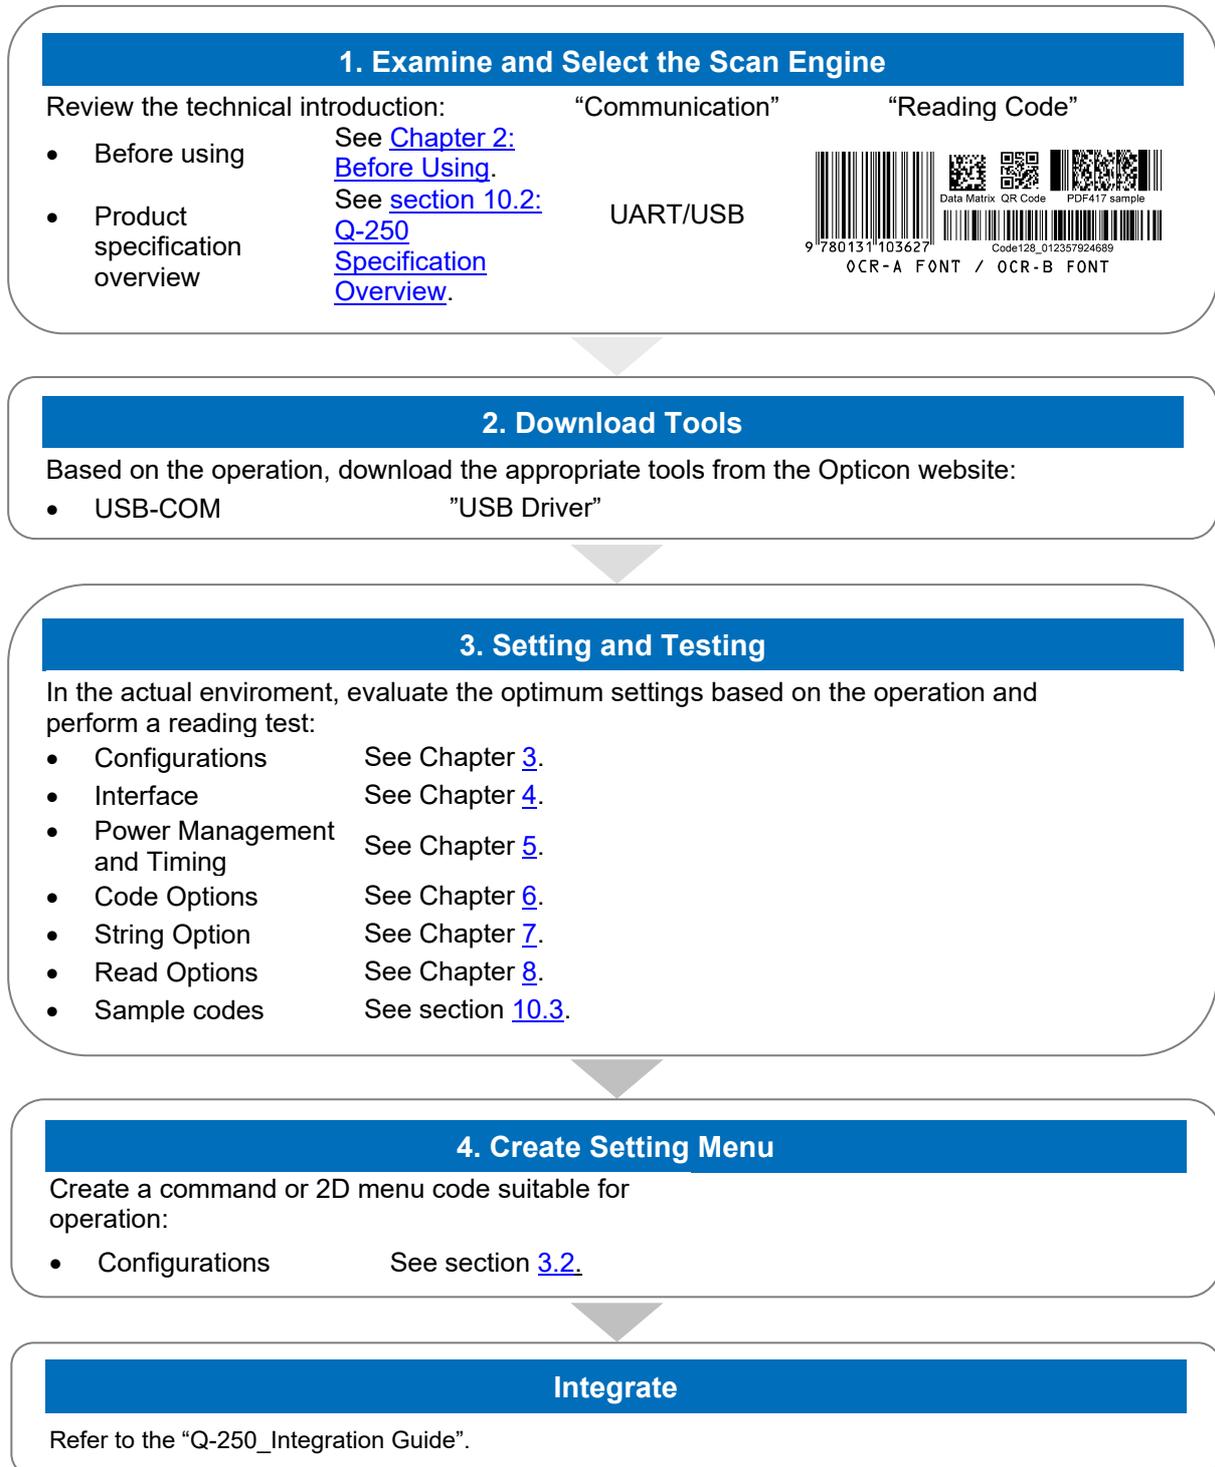

2 Model details

The scan engine model is a combination of model name and interface.

2.1 Standard Product Specifications

The scan engine model is a combination of model name and interface.

| Model name | Suffix | Standard model |
|------------|---------|----------------|
| Q-250_ | USB-HID | Standard |
| | USB-COM | On request |
| | RS232 | On request |

3 Configurations

This chapter describes the scan engine configuration, default setting and saving setting, and basic commands.

3.1 Configuring with Commands

The scan engine can be configured by sending commands via the serial interface or by reading 1D or 2D menu labels. This section describes the serial commands.

3.1.1 Command Packet

This section describes the command packet, from header to terminator.

| Command Header*2 | Command ID*1 | | Command Terminator* |
|------------------|--------------|----------------------|---------------------|
| <ESC> (0x1B) | None | 1 - 2 digits (ASCII) | <CR> (0x0D) |
| | [(0x5B) | 3 digits (ASCII) | |

*1 It is possible to send multiple command IDs between a single header and terminator, except for single digit IDs.

Input examples:

| | |
|------------------------|-----------------|
| 1-digit command | <ESC>Δ<CR> |
| 2-digit command | <ESC>ΔΔ<CR> |
| 3-digit command | <ESC>[ΔΔΔ<CR> |
| Two 2 digit commands | <ESC>ΔΔΔΔ<CR> |
| 2 and 3 digits command | <ESC>ΔΔ[ΔΔΔ<CR> |

The command can be sent via a serial monitor application.

3.1.2 Command Packet Sending Precautions

When sending packets of 32 or more characters, a transmission condition will occur under these conditions. The command may be missed.

| Power Mode (UART) | UART Baud Rate [bps] | | | | | | | |
|-------------------|----------------------|-------|-------|-------|--------|--------|--------|--------|
| | 9600 | 19200 | 38400 | 57600 | 115200 | 230400 | 460800 | 921600 |
| Standby | - | - | - | - | - | - | * | * |
| Low Power Standby | See section 5.4. | | | | | | | |

Note: When sending packets of 32 or more characters, there is command packet transmission condition.

Transmission Condition: Send "Null" Characters First, and Then Send the Command After 10 ms

The maximum length of any command packet is 1000 characters. When more than 1000 characters are sent, some characters may be lost and the execution will not be performed correctly.

When a multiple command packet is sent, a subsequent command will not be received while the previous command is still being executed. To workaround this issue and get the correct timing:

- Use a form of Handshake, BUSY/READY or MODEM, because then the RTS output will be in busy state while a command is executed making it possible to refer to this signal for the right timing. See section [4.1.6: Handshaking \(Flow Control\)](#).
- Use 'ACK/NAK for serial commands'. See section [3.5.3: ACK/NAK for Serial Commands](#). When ACK/NAK is enabled, the scan engine will send an ACK after a command is received and processed.

Settings configured by commands are not retained in non-volatile memory. Therefore, these settings will be lost when the power is turned off and on again, and the scan engine will be in the configuration state saved in non-volatile memory. To save the settings made with commands, end the configuration by sending the Z2 command to save all the parameters in non-volatile memory.

These interface settings may disrupt communication, so they will not be reflected until they are written in non-volatile memory using Z2: Baud Rate, Data Length, Parity, and Stop Bit.

Note: Settings made by reading 1D or 2D menu codes will be saved in non-volatile memory. Any previously made settings using commands will also be saved. See section [3.6: Configuring with 2D Menu Codes](#) and section [3.7: Configuring with 1D Menu Codes](#).

3.2.2 Interface Default Settings

The Active Settings can be returned to the factory default settings. Set the command that corresponds to the interface being used.

Factory Default Setting Commands

| Command | Interface | Description |
|---------|-----------|--|
| U2 | UART | Set back to UART Factory Default Settings |
| [C01 | USB-COM | Set back to USB-COM Factory Default Settings |
| SU | USB-HID | Set back to USB-HID Factory Default Settings |

3.2.3 Save Settings

The Active Settings can be written to the “Startup Settings.”

Save Settings Command

| Command | Description | Remark |
|---------|--|--------------|
| Z2 | Save the Active Settings as Startup Settings | Command only |

Notes:

- Add “Z2” to the end of command packet to be saved.
- Saving settings more than 30,000 times may destroy memory. Avoid saving every time.
- Some settings, such as Baud Rate, will not be enabled until “Save settings” is sent.

3.3 Custom Command Line Settings (Change the Factory Default Settings)

The Factory Default Settings the scan engine was shipped with can be permanently changed via Custom Command Line commands. These settings will even survive a firmware update. The new Factory Default Settings become active after a reboot and initialization of the scan engine.

Be careful with Custom Command Line commands, because they may corrupt flash memory if the power is turned off during the setting operation. Make sure your environment has a stable power source.

Recommended settings for Custom Command Line commands:

- Fast Boot Mode. See section [3.4: Fast Boot Mode](#).
- Image settings. See section [3.5.7: Image Settings](#).
- Baud Rate, Data Length, Parity, Stop Bit, etc. See section [4.1: UART](#).

| Command Header | Command | Separator | Command IDs ^(*) | Separator | Command Terminator |
|----------------|---------|-----------|----------------------------|-----------|--------------------|
| <ESC> | [EFY | , | Custom Commands | , | <CR> |
| | | (0x27) | | (0x27) | |

*1 Multiple commands are allowed.

To activate the new Factory Default Settings, the "RV" command must be sent or scanned, which will reset the scan engine. To load the new Factory Default Settings, send or scan the U2 command to save the new settings so that they will be loaded after a power on.

Custom Command Line settings examples:

- Set "Fast Boot Mode" enable. "[EFXQ1"
- Set "ACK/NAK" enable. "WC"
- Set "2D Menu Code" disable. "[D1Z"
- Set "Upside Down Image" enable. "[EFV[E8I"
- Set "Baud rate" to 115200bps. "SZ"
- Set "Low Power standby" enable. "[EB8"
- Set "Low Power standby Transition Time" to 2 seconds. "[EBAQ0Q0Q0Q2"
- Reboot the scan engine "RV"
- Initialize the scan engine "U2"

Packets sent to configure Custom Command Line settings examples:

- <ESC>[EFY'[EFXQ1WC[D1Z[EFU[E8ISZ[EB8[EBAQ0Q0Q0Q2'<CR>
- <ESC>RV<CR>
- <ESC>U2Z2<CR>

Output Configured Custom Command Line Commands

Currently configured commands in Custom Command Line settings can be output.

| Item | Command | Description |
|-----------------|---------|---|
| Output commands | [EFZ | Output configured commands in custom command line |

Example of output

[EFXQ1WC[D1Z[EFU[E8ISZ[EB8[EBAQ0Q0Q0Q2

Note: The scan engine will not send anything if no Custom Command Line commands have been configured.

3.4 Basic Commands

3.4.1 Trigger Command

The reading operation can be started and terminated by sending commands. When the read cycle timeout is set to 0 seconds (Y0 command), the read time with the Z command will be 'Indefinitely' and reading will continue until a Y command is received. For timeout limited reading, use the Yx commands. (See section [5.6: Read Timing.](#))

Trigger Command Commands

| Command | Description | Remark |
|---------|----------------------|--------------|
| Z | Start the read cycle | Command only |
| Y | Stop the read cycle | |

3.4.2 Diagnostic Commands

These commands can be used to get diagnostics information from the scan engine.

Diagnostics Commands

| Command | Description |
|---------|---------------------------------|
| Z1 | Transmit software version |
| ZA | Transmit ASCII printable string |
| YV | Transmit ASCII control string |

Device Information Commands

| Command | Description | Example | Possible Values | |
|---------|-------------|------------------|--------------------------------------|---|
| [EFK | Q0 | Model Number | Q-250 | N-250, L-250, P-250 |
| | Q1 | Firmware Version | ZFAV0003 | ZFAVxxxx, where xxxx=revision number. |
| | Q2 | Interface | USB-HID | UART = RS232 interface USB-HID = USB-HID (Keyboard) USB-COM = USB-Virtual COM |
| | Q3 | Focus type | SR | SR = Standard Range HD = High Density UD = Ultra-High Density |
| | Q4 | ID (32 digits) | 0829a4530000001515f1b 06b7e921f3d | Unique number for every scan engine |
| | Q5 | Serial number | 000001 | Serial number of the scan engine |

3.4.3 ACK/NAK for Serial Commands

When "ACK/NAK for serial commands" is enabled, the scan engine will send an ACK (0x06) when a command is received and accepted, and a NAK (0x15) when a command is rejected.

ACK/NAK Commands

| Command | Description |
|--------------|-------------------------------------|
| WC | Enable ACK/NAK for serial commands |
| WD (default) | Disable ACK/NAK for serial commands |

3.4.4 Reboot the Scan Engine

Use this command to restart the scan engine.

Note: The “Custom Factory Default Settings” operation requires a reboot.

Software Reboot Command

| Command | Description |
|---------|------------------------|
| RV | Reboot the scan engine |

3.4.5 Enable/Disable 2D Menu Code

To enable or disable processing 2D menu codes, use these settings. Setting ‘Disable 2D menu codes’ is recommended when 2D menu codes are not used.

Enable/Disable 2D Menu Code

| Command | Description |
|----------------|-----------------------|
| [D1Y (default) | Enable 2D menu code |
| [D1Z | Disable 2D menu code* |

* Disable indicates that 2D menu codes will be read as normal 2D codes. 2D menu code data will be output when reading is successful.

3.4.6 Enable/Disable 1D Menu Code

To enable or disable decoding 1D menu codes, use these settings. Setting ‘Disable 1D menu codes’ is recommended when 1D menu codes are not used.

Enable/Disable 1D Menu Code

| Command | | Description | Default |
|---------|-------|--|---------|
| [DFB | Q0 Q1 | Enable 1D menu code when using TRIGn signal. | ✓ |
| | Q0 Q0 | Disable 1D menu code when using TRIGn signal.* | |
| | Q2 Q1 | Enable 1D menu code when using software trigger. | |
| | Q2 Q0 | Disable 1D menu code when using software trigger.* | ✓ |

* Disable indicates that 1D menu code reading is prohibited.


3.4.7 Image Settings

When the scan engine is mounted upside down, the sensor data is rotated 180°. This configuration is required, especially for image acquisition and OCR reading.

When an external mirror is installed in front of the scan engine, the scan engine mirrors the sensor data. Two options are available: horizontal mirror and vertical mirror.

Mirrored Image Commands

| Item | Command | Description | Default |
|---------------------------|---------|---|---------|
| Horizontal mirrored image | [EFU | Disable horizontal mirrored image configuration | ✓ |
| | [EFV | Enable horizontal mirrored image configuration | |
| Vertical mirrored image | [E8J | Disable vertical mirrored image configuration | ✓ |
| | [E8I | Enable vertical mirrored image configuration | |

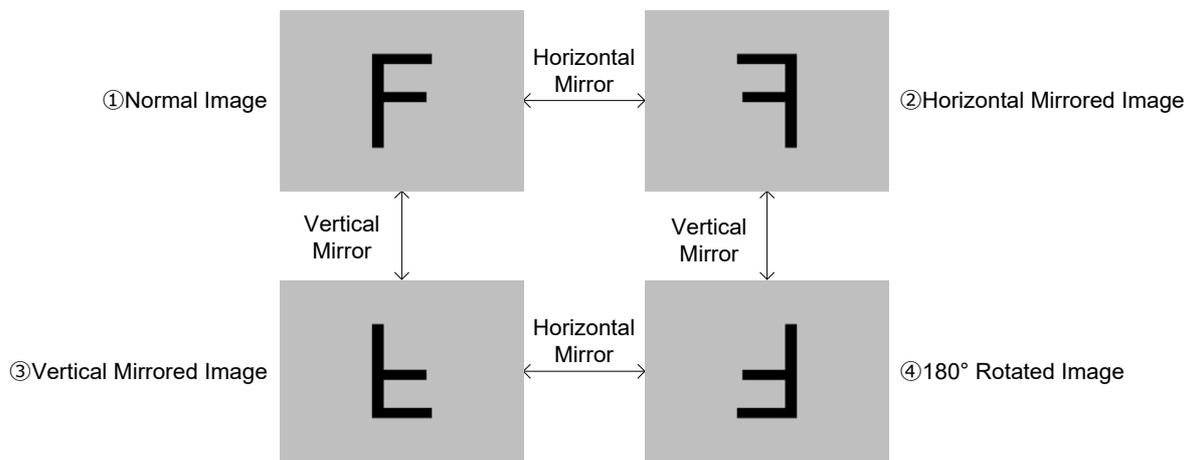

Mirrored Image Configuration Commands

| Style | Commands | Horizontal Mirror | Vertical Mirror |
|---------------------------|-----------|-------------------|-----------------|
| ① Normal image | [EFU][E8J | Disable | Disable |
| ② Horizontal mirror image | [EFV][E8J | Enable | Disable |
| ③ Vertical mirror image | [EFU][E8I | Disable | Enable |
| ④ 180°rotated image | [EFV][E8I | Enable | Enable |

3.4.8 Disable Reading Operation

Use these settings to enable or disable reading bar codes. When reading is disabled:

- Auto trigger and TRIGn signal operation are invalid.
- Menu labels cannot be read.
- Only commands via serial communication are supported.

Reading Operation Enable/Disable

| Command | Description | Remark |
|----------------|----------------------------------|--------------|
| [EAT (default) | Enable module reading operation | Command only |
| [EAU | Disable module reading operation | Command only |

3.4.9 Buzzer and Indicators

These commands describe the Buzzer and Status LED. See sections [9.1: Buzzer \(BUZZERn Signal\)](#) and [9.2: Good Read LED \(GR_LEDn Signal\)](#).

Buzzer and Status LED Commands

| Item | Command | Description | Remark |
|---------|---------|--|--------------|
| BUZZERn | B | Send the confirm buzzer signal from BUZZERn. | Command only |
| | E | Send the error buzzer signal from BUZZERn. | |
| GR_LED | L | Flash the GR_LEDn. | |

3.4.10 Direct Numerical Input Command

Use these commands when a command requires additional numerical input. Use the commands in one packet with the command that requires the numerical input.

Direct Numerical Input Commands

| Command | Description | Remark |
|---------|-------------|-----------------------------|
| Q0 | 0 | Input in a specified format |
| Q1 | 1 | |
| Q2 | 2 | |
| Q3 | 3 | |
| Q4 | 4 | |
| Q5 | 5 | |
| Q6 | 6 | |
| Q7 | 7 | |
| Q8 | 8 | |
| Q9 | 9 | |

3.5 Configuring with 2D Menu Codes

A single 2D menu code can contain multiple settings that will be processed in order, in one operation. Therefore, you can configure the scan engine with multiple settings by reading only one 2D menu code. Scanning a 2D menu code will always 'save settings' upon completion, so a Z2 command to save current settings is not needed.

Data Packet:

@MENU_OPTO@ZZ@MenuCommand 1@MenuCommand 2@ZZ@OTPO_UNEM@

| | | |
|--------------------|--------------|-------------------------|
| "@MENU_OPTO" | (Start key) | |
| "@" | (Separator) | |
| "ZZ" | (Start menu) | |
| "@" | (Separator) | ← Multiple sets allowed |
| "Any menu command" | (U2 etc) | |
| "@" | (Separator) | |
| "ZZ" | (END menu) | |
| "@" | (Separator) | |
| "OTPO_UNEM@" | (Stop key) | |

You can use "Opticonfigure" to create a 2D menu code. To use "Opticonfigure", go to <https://opticonfigure.opticon.com/>

3.6 Configuring with 1D Menu Codes

By scanning a series of 1D menu codes specifically designed to configure the required functions, you can set up the scan engine to optimize its performance for your situation.

Basic procedure:

Scan SET menu code (ZZ). The scan engine enters menu mode.



Scan one or more options.

Multiple menu codes can be read to configure more than one option.



Read END menu code (ZZ). All settings are saved in non-volatile memory.

Note: 1D menu codes encode an ID consisting of two to three alphanumeric characters. 1D menu codes are Code 39 bar code labels with modified start/stop characters, so the scan engine will not acknowledge a 1D menu code as a normal bar code.

You can use “Opticonfigure” to create a Menu bar code. To use “Opticonfigure”, go to <https://opticonfigure.opticon.com/>

4 Interface

The scan engine supports USB-COM, USB-HID, and UART interfaces.

4.1 UART

This chapter describes UART interface settings.

- 4.1.1 [Switch to UART](#)
- 4.1.2 [UART Interface Signal](#)
- 4.1.3 [UART Basic Information](#)
- 4.1.4 [Baud Rate \(Transfer Speed\)](#)
- 4.1.5 [Character Format](#)
- 4.1.6 [Handshaking \(Flow Control\)](#)
- 4.1.7 [Inter Character Delay \(UART\)](#)
- 4.1.8 [Troubleshooting \(UART\)](#)

4.1.1 Switch the Interface to UART

When switching the interface to UART from USB, send this command or read the 2D menu code. Make sure the 12-pin FFC cable is connected to UART signals when using the UART interface.

Caution: UART is standard in the scan engine's factory default setting. If the host side is a USB connection circuit, communication will fail.

Change to UART

| Item | Command | Menu Code | Remark |
|-----------------------------|--------------|--|--------|
| Switching Interface to UART | [X.ZU2[X.ZZ2 |  @MENU_OPTO@ZZ@X.Z@U2@X.Z@ZZ@OTPO_UNEM@ | * |

* This setting will survive a firmware update.

4.1.2 UART Interface Signal

A JST BM12B-SRSS-TBT connector is used for the interface. In UART interface mode, the greyed out signals are not available for use. The UART signals TxD, RxD, RTS and CTS use the voltage levels and signal polarity according to the RS-232 standard.

| No. | Name | Function | I/O | Conditions | State | Note |
|-----|-----------|--|--------|--------------|---|---------------------------|
| 1 | AIM/WAKEn | Recovery signal from Low Power state | In | | L: Recover from low power state H: No action | 100kΩ pull up on module |
| | | Aiming control signal in other states than Low Power | In | | L: Aiming LED on H: Aiming LED off | |
| 2 | Vcc | Power input | In | | 3.3V or 5.0V | |
| 3 | GND | System ground | | | | |
| 4 | USB- | Received data signal | In/Out | | | USB |
| 5 | TxD | Transmitted data signal | Out | | | RS-232 |
| 6 | USB+ | Received data signal | In/Out | | | USB |
| 7 | RxD | Received data signal | In | | | RS-232 |
| 8 | RTS | Communication control signal to host system | Out | | | RS-232 |
| 9 | BUZZERn | Buzzer | Out | | | 100kΩ pull up on module*2 |
| 10 | GR_LEDn | Good read LED | Out | | L: LED on H: LED off | 4.7kΩ pull up on module |
| | EX_ILLUM | Control of an external light source. | Out | Configured*1 | L: External Illumination On H: External Illumination Off | |
| 11 | CTS | Communication control signal from host system | In | | | RS-232 |
| 1 | TRIGn | Trigger | In | | L: Start operation H: No action | 100kΩ pull up on module |

*1 When EX_ILLUM is set, Good Read LED cannot be used.

*2 Tone/sound pressure is adjustable by PWM signal.

4.1.3 UART Basic Information

| Item | Description | Default |
|----------------|-------------------------------------|----------|
| Transfer speed | 300 to 921600 bps | 9600 bps |
| Data length | 7/8 bits | 8 bit |
| Parity bit | None/Even/Odd | None |
| Stop bit | 1/2 bits | 1 bit |
| Handshake | None, BUSY/READY, Modem, ACK/NAK | None |
| Other option | Flow control, Inter character delay | |

4.1.4 Baud Rate (Transfer Speed)

The baud rate is the rate at which bits are transmitted from the scan engine to the host and vice versa. Both the reader and the host must be set to the same baud rate.

Use these commands to configure the baud rate. To activate and save the new configuration, use "Z2" (save settings in non-volatile memory) after these commands.


Baud Rate Commands

| Command | Description | Default | Condition | Remark |
|---------|-------------|---------|--|-------------------------|
| K1 | 300 bps | | | Enabled only with "Z2"* |
| K2 | 600 bps | | | |
| K3 | 1200 bps | | | |
| K4 | 2400 bps | | | |
| K5 | 4800 bps | | | |
| K6 | 9600 bps | ✓ | | |
| K7 | 19200 bps | | | |
| K8 | 38400 bps | | | |
| K9 | 57600 bps | | | |
| SZ | 115200 bps | | | |
| [D90 | 230400 bps | | | |
| [D91 | 460800 bps | | Command packet Condition (See section 3.1.2: Command Packet Sending Precautions.) | |
| [D92 | 921600 bps | | | |

*You should configure these settings at "Custom Factory Default".

4.1.5 Character Format

The data characters are transferred in this format. A parity bit is added to every character so the total number of 1's in the data bits, together with the parity bit, is odd for odd parity and even for even parity.

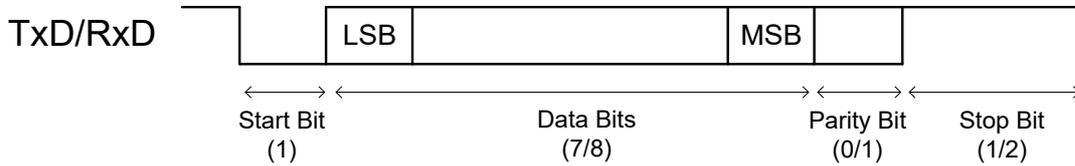

These commands are provided to set the number of data bits, type of parity bit, and number of stop bits. Use the Z2 command (save settings in non-volatile memory) after these commands to activate and save the new configuration.

Data Bit, Parity Bit, and Stop Bit Commands

| Item | Command | Description | Default | Remark |
|------------|---------|-------------|---------|----------------------------|
| Data bit | L0 | 7 data bits | | Enabled after sending "Z2" |
| | L1 | 8 data bits | ✓ | |
| Parity bit | L2 | No parity | ✓ | |
| | L3 | Even parity | | |
| | L4 | Odd parity | | |
| Stop bit | L5 | 1 stop bit | ✓ | |
| | L6 | 2 stop bits | | |

4.1.6 Handshaking (Flow Control)

The communication control method can be set using these commands. Use the "Z2" (save command in non-volatile memory) after these commands to activate and save the new configuration.


Handshaking Commands

| Command | Description | Remark |
|--------------|------------------------------|----------------------------|
| P0 (default) | No handshake | Enabled after sending "Z2" |
| P1 | Busy/ready | |
| P2 | Modem | |
| | | |

A) No Handshaking


The scan engine communicates regardless of the state of the host system.

Note: In this setting, the commands from the host system may not be received correctly.

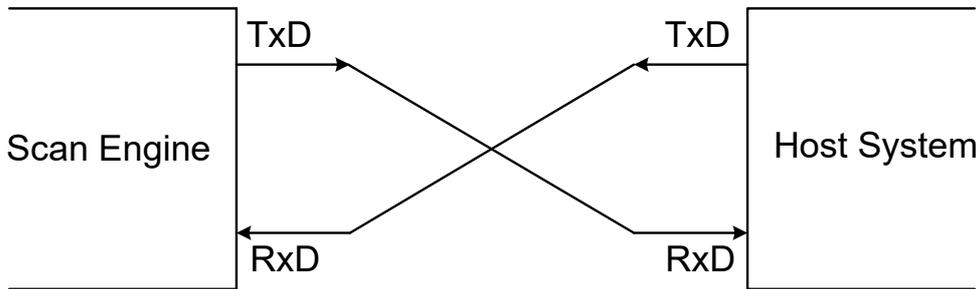


B) BUSY/READY

The scan engine and the host system notify each other when they are ready to receive data (BUSY/READY) via their RTS line. When they are connected, the CTS line can be used to check if the other side is busy (off) or ready to receive data (on).

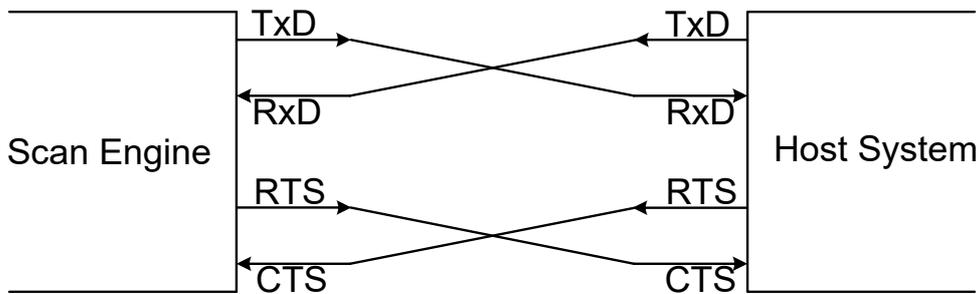


The scan engine's RTS is typically on (ready to receive data) except during the processing of received data, while transmitting data, and while it is busy processing 1D/2D menu codes. When the scan engine wants to send data, it first checks if its CTS line is on (to be sure that the host is ready to receive data). If the CTS line is off, the scan engine does not send the data but waits for a specific timeout period for the CTS line to be turned on. If the CTS line is not turned on within the time specified, the data transmission will be aborted.

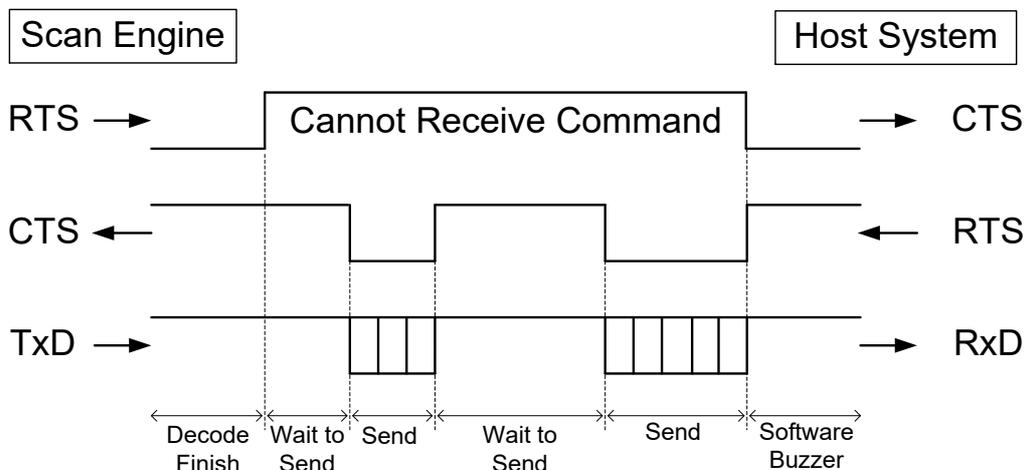

<CTS, TxD signal timing>

When the CTS line (RTS signal on the host side) is turned off during a TxD signal transmission, the scan engine stops the transmission. When the CTS signal is turned on during signal transmission, characters are transmitted.

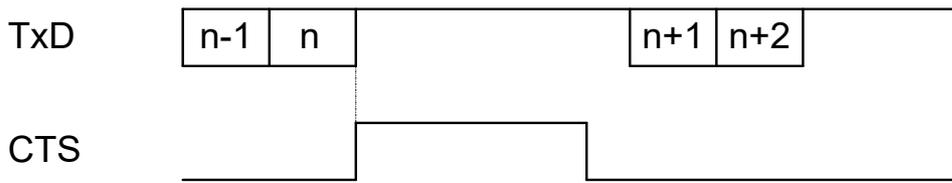


These menu codes (commands) are provided for the CTS line timeout setting. You need to use "Z2" (save settings in non-volatile memory) after these commands to activate and save the new configuration.

CTS Timeout Commands

| Command | Description | Remark |
|--------------|-----------------------------------|------------------------|
| I0 (default) | Flow Control timeout Indefinitely | Enabled only with "Z2" |
| I1 | Flow Control timeout 100 ms | |
| I2 | Flow Control timeout 200 ms | |
| I3 | Flow Control timeout 400 ms | |

C) MODEM

The scan engine's RTS is OFF as soon as power is supplied to the scan engine. The scan engine turns RTS ON when it wants to transmit data to the host. The host should respond with CTS ON when it is ready to receive data. While the host CTS is ON the scan engine is allowed to transmit data. When all data has been transmitted, the scan engine turns RTS OFF. In response, the host should turn OFF the scan engine's CTS. If, while RTS is ON, the CTS line is not ON for a certain configurable period, the scan engine will terminate the transmission and indicate an error with the buzzer

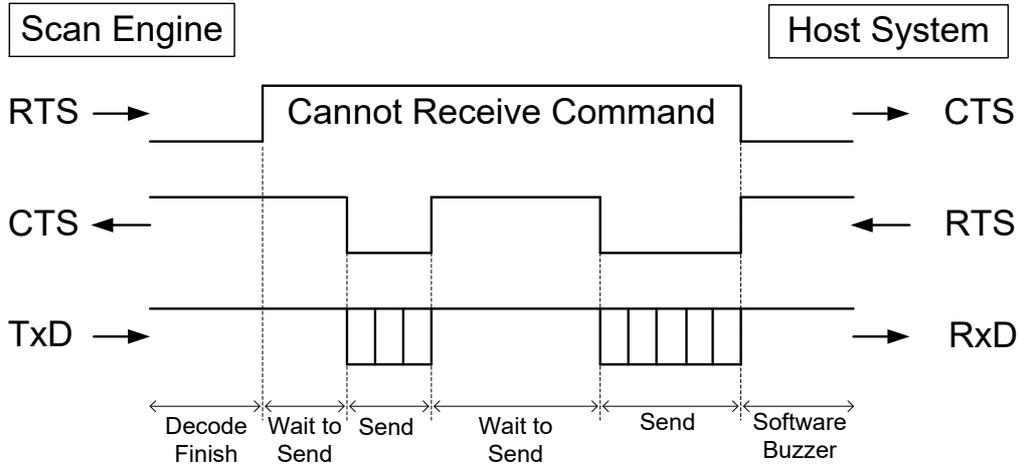

4.1.7 Inter Character Delay (UART)

Inter character delay introduces a configurable delay after each transmitted character. This function may be used if the host does not support flow control and is not capable of handling the received data.

Inter Character Delay Commands

| Command | Description | Remark |
|--------------|--------------|---------------------------|
| KA (default) | No delay | Activated only after "Z2" |
| KB | 20 ms delay | |
| KC | 50 ms delay | |
| KD | 100 ms delay | |

4.1.8 Troubleshooting UART

Use these possible solutions to troubleshoot UART problems.

| Problem | Possible Solutions |
|--|---|
| Cannot communicate No response when sending command | <ul style="list-style-type: none"> Verify communication settings. For example, see sections 4.1.4: Baud Rate (Transfer Speed) and 4.1.5: Character Format. After changing communication settings, send the Z2 command. Most communication settings are not applied until the Z2 command is sent. Verify the handshaking setting. See section 4.1.6 Handshaking (Flow Control). |
| Garbled characters | <ul style="list-style-type: none"> Verify communication settings. For example, see sections 4.1.4: Baud Rate (Transfer Speed) and 4.1.5: Character Format. Verify that the bar code to be read matches to the character code of the communication tool. |
| Line-break is doubled | Check the line-break setting of the communication tool. |

4.2 USB-COM

This chapter explains USB-COM interface related settings.

- 4.2.1 [Switching the Interface to USB-COM](#)
- 4.2.2 [USB Interface Signal](#)
- 4.2.3 [USB-COM Basic Information](#)
- 4.2.4 [Integration \(USB driver\)](#)
- 4.2.5 [Connection Confirm](#)
- 4.2.6 [Fixed USB-COM Port](#)
- 4.2.7 [Connection Method](#)
- 4.2.8 [COM to HID Output](#)
- 4.2.9 [Troubleshooting \(USB-COM\)](#)

4.2.1 Switch the Interface to USB

When switching the interface to USB-COM from UART or USB-HID, send this command or read a 2D menu code. Make sure the 12-pin FFC cable is connected to USB signals when using the USB-COM interface.

Caution: UART is standard in the scan engine's factory default setting. If the host side is a UART connection circuit, communication will fail.

Change to USB-COM

| Item | Command | Menu Code | Remark |
|--------------------------------|----------------|---|--------|
| Switching Interface to USB-COM | [X.Z[C01[X.ZZ2 |  @MENU_OPTO@ZZ@X.Z@C01@X.Z@ZZ@OTPO_UNEM@ | * |

* This setting will survive a firmware update.

4.2.2 USB Interface Signal

A JST BM12B-SRSS-TBT connector is used for the interface. In USB interface modes, the greyed out signals are not available for use.

| No. | Name | Function | I/O | Condition | State | Note |
|-----|-----------|--|--------|---------------------------|---|---------------------------------------|
| 1 | AIM/WAKEn | Recovery signal from Low Power state | In | | L: Recover from low power state H: No action | 100kΩ pull up on module |
| | | Aiming control signal in other states than Low Power | In | | L: Aiming LED on H: Aiming LED off | |
| 2 | Vcc | Power input | In | | 3.3V or 5.0V | |
| 3 | GND | System ground | | | | |
| 4 | USB- | Received data signal | In/Out | | | USB |
| 5 | TxD | Transmitted data signal | Out | | | RS-232 |
| 6 | USB+ | Received data signal | In/Out | | | USB |
| 7 | RxD | Received data signal | In | | | RS-232 |
| 8 | RTS | Communication control signal to host system | Out | | | RS-232 |
| 9 | BUZZERn | Buzzer | Out | | | 100kΩ pull up on module ^{*2} |
| 10 | GR_LEDn | Good read LED | Out | | L: LED on H: LED off | 4.7kΩ pull up on module |
| | EX_ILLUM | Control of an external light source. | Out | Config-ured ^{*1} | L: External Illumination On H: External Illumination Off | |

| | | | | | | |
|----|-------|---|----|--|------------------------------------|-------------------------|
| 11 | CTS | Communication control signal from host system | In | | | RS-232 |
| 1 | TRIGn | Trigger | In | | L: Start operation H: No action | 100kΩ pull up on module |

*1 When EX_ILLUM is set, Good Read LED cannot be used.

*2 Tone/sound pressure is adjustable by PWM signal.

4.2.3 USB-COM Basic Information

| Item | Description | Note |
|----------------------------------|---|------------------------------------|
| Transfer Speed | Full Speed USB 2.0 (FS mode) | |
| Required power supply capability | 500 mA | Actual current value is different. |
| Vendor ID | 065A | |
| Product ID | 9039 | |
| Suspend mode Remote wakeup | Used when the host system is using suspend. | Default: Valid |
| Other | CDC-ACM compliance | |
| Fixed COM number | Fixing COM number is possible. | Default: not fix |


4.2.4 Integration (USB Driver)

A USB driver is required to connect to the PC via USB-COM interface. Please download the USB driver from our website, and install it appropriately according to the attached documents.

4.2.5 Confirm the USB-COM Connection

For the USB-COM interface, confirm the connection:

1. Make sure your PC is running Windows 10.
2. Install the Opticon USB driver.
3. Connect the scan engine to the PC.
4. Right-click the Windows icon and click **Device Manager**.
5. Open "Ports(COM & LPT)."

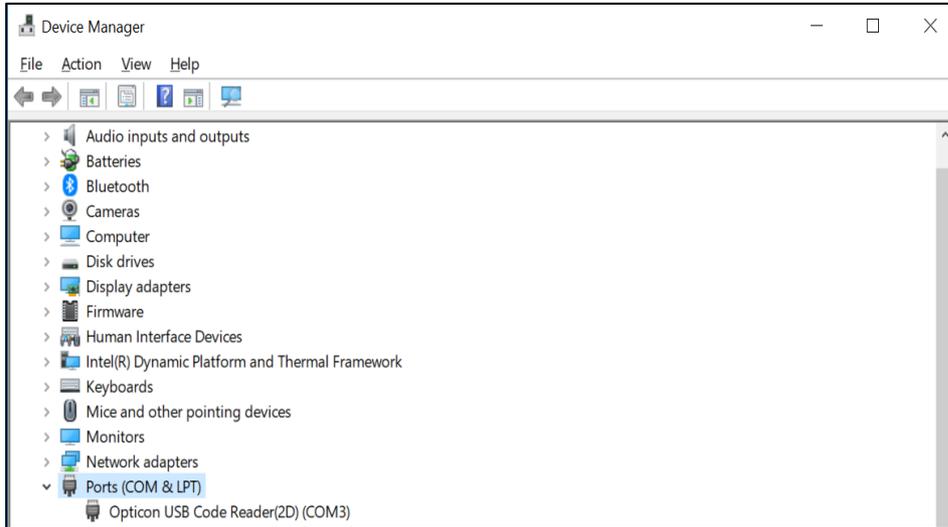

4.2.6 Fixed USB-COM Port

This option enables a fixed USB-COM Port number. The COM port number to which the USB connected Windows PC is assigned will always be the same port number.

Note: Fixed USB-COM Port settings will become active after a reboot and initialization of the scan engine.

Fixed USB-COM Port Number and Driver Selection Commands

| Command | | Description |
|---------|--------------|-------------------------------------|
| [EGC | Q0 (default) | Not to fix assigned COM port number |
| | Q1 | Fix assigned COM port number |

4.2.7 Connect to the Host PC

To connect to the host PC:

1. Start the tool to serial communicates (emulator or UniversalConfig).
2. Connect to the COM port confirmed at 4.2.3 Connection.



Note: For the Command packet, see section [3.1.1: Command Packet](#).

4.2.8 Troubleshooting USB-COM

Use these possible solutions to troubleshoot USB-COM problems.

| Problem | Possible Solution |
|--|---|
| Not recognized by the PC (Scan engine does not appear in the device manager) | <ul style="list-style-type: none"> • Check that USB cable is properly connected. • Ensure that connected USB port is operating properly. • If you are connecting to wireless devices, like Bluetooth, disconnect once. • Verify the USB port power supply capability. When using a laptop or hub, power supply capacity may not be sufficient. • Remove from the USB port at once, and after a while, insert again. • Insert to different port. |
| Error beep sounds and does not output by reading | <ul style="list-style-type: none"> • Try the possible solutions for the previous problem. • Open the COM port with the communication tool. |
| Cannot connect (Cannot open COM port) | <ul style="list-style-type: none"> • Verify the COM port number by device manager. For help, see section 4.2.5: Confirm the USB-COM Connection. • Close the tool and re-open it. Operation and countermeasures vary depending on the tool. Please refer to the tool help or manual. • Reboot the PC. |
| Garbled characters | Verify that the bar code to be read matches the character code of the communication tool. |
| Line-break is doubled | Check the line-break setting of the communication tool. |

4.3 USB-HID

This chapter explains USB-HID interface related settings.

- 4.3.1 [Switching the Interface to USB-HID](#)
- 4.3.2 [USB Interface Signal](#)
- 4.3.3 [USB-HID Basic Information](#)
- 4.3.4 [Connection Confirmation \(USB-HID\)](#)
- 4.3.5 [NumLock CapsLock control](#)
- 4.3.6 [Data Output Speed \(USB-HID\)](#)
- 4.3.7 [Inter Character Delay \(USB-HID\)](#)
- 4.3.8 [Keyboard Language](#)
- 4.3.9 [Multi Byte Characters Output Tutorial](#)
- 4.3.10 [Multi Byte Characters Output setting](#)
- 4.3.11 [Troubleshooting \(USB-HID\)](#)

4.3.1 Switching the Interface to USB-HID

When switching the interface to USB-HID from UART or USB-COM, send this command or read the 2D menu code. Make sure the 12-pin FFC cable is connected to USB signals when using the USB-COM interface.

Caution: UART is standard in the scan engine's factory default setting. If the host side is a UART connection circuit, communication will fail.

Change to USB-HID

| Item | Command | Menu Code | Remark |
|--------------------------------|--------------|--|--------------|
| Switching Interface to USB-HID | [X.ZSU[X.ZZ2 |  @MENU_OPTO@ZZ@X.Z@SU@X.Z@ZZ@OTPO_UNEM@ | Confirm host |

Change to USB-HID only, no Composite interface

| Item | Command | Menu Code | Remark |
|-------------------------------------|----------------|---|-------------------|
| Switching Interface to USB-HID only | [X.Z[BBL[X.ZZ2 |  @MENU_OPTO@ZZ@X.Z@BBL@X.Z@ZZ@OTPO_UNEM@ | No composite mode |

4.3.2 USB Interface Signal

A JST BM12B-SRSS-TBT connector is used for the interface. In USB interface modes, the greyed out signals are not available for use.

| No. | Name | Function | I/O | Condition | State | Note |
|-----|-----------|--|--------|-----------|---|-------------------------|
| 1 | AIM/WAKEn | Recovery signal from Low Power state | In | | L: Recover from low power state H: No action | 100kΩ pull up on module |
| | | Aiming control signal in other states than Low Power | In | | L: Aiming LED on H: Aiming LED off | |
| 2 | Vcc | Power input | In | | 3.3V or 5.0V | |
| 3 | GND | System ground | | | | |
| 4 | USB- | Received data signal | In/Out | | | USB |
| 5 | TxD | Transmitted data signal | Out | | | RS-232 |
| 6 | USB+ | Received data signal | In/Out | | | USB |
| 7 | RxD | Received data signal | In | | | RS-232 |
| 8 | RTS | Communication control signal to host system | Out | | | RS-232 |

| | | | | | | |
|----|----------|---|-----|---------------|---|---------------------------|
| 9 | BUZZERn | Buzzer | Out | | | 100kΩ pull up on module*2 |
| 10 | GR_LEDn | Good read LED | Out | | L: LED on H: LED off | 4.7kΩ pull up on module |
| | EX_ILLUM | Control of an external light source. | Out | Config-ured*1 | L: External Illumination On H: External Illumination Off | |
| 11 | CTS | Communication control signal from host system | In | | | RS-232 |
| 1 | TRIGn | Trigger | In | | L: Start operation H: No action | 100kΩ pull up on module |

*1 When EX_ILLUM is set, Good Read LED cannot be used.

*2 Tone/sound pressure is adjustable by PWM signal.

4.3.3 USB-HID Basic Information

| Items | Description | Notes |
|--|--|--|
| USB | USB2.0 Full Speed | |
| Required power supply capacity | 500 mA | Differs from actual power consumption. |
| Vendor ID | 065A | |
| Product ID | 9039 | |
| Num/Caps Lock control | Set when using NumLock/CapsLock | Initial value: No control |
| Data transmit speed | Use when outputting data with high speed. | Initial setting: 4 ms (Setting range 1 ms -16 ms) |
| Data transmit interval (Inter-character delay) | Use when data is missing. | Initial value: no interval |
| Suspend mode Remote wakeup | Use when host system is using suspend. | Initial value: Valid |
| Keyboard language | Set according to the keyboard language. | Initial value: English (USA) |
| Character code | Set according to reading symbol encode data. | Initial value: not use character code |
| Output mode | Set when outputting Chinese-character. | Initial value: output as it is |


4.3.4 Confirm the USB-HID Connection

USB-HID functions just by connecting to the PC.

To confirm the USB-HID connection:

- Make sure your PC is running Windows 10.
- Connect the scan engine to the PC.
- Right-click the Windows icon and click **Device Manager**.
- Open “Human interface device”. The “USB input device” is added.

Note: If you are using other USB connected device, such as a mouse or keyboard, multiple devices will be displayed.

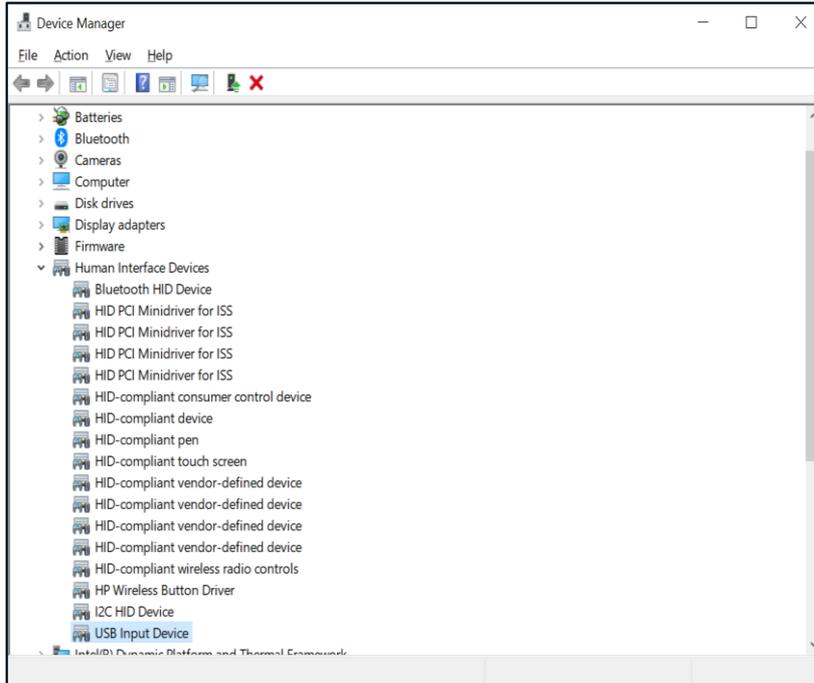

4.3.5 NumLock and CapsLock Control

Set NumLock and CapsLock control when sending data.

NumLock and CapsLock Control Commands

| Command | Description | Initial Setting | Notes |
|---------|---|-----------------|-------|
| RN | Numeric value does not use numeric keypad | ✓ | |
| RM | Numeric value use numeric keypad | | |
| /A | Follow NumLock status | | *1 |
| 5Q | No control | ✓ | |
| 8A | Invert CapsLock status | | *2 |
| 2U | CapsLock automatic control | | *3 |

*1. Only use the numeric keypad when NumLock is ON.

*2. When starting transmits, send CapsLock and invert status. Use this function when CapsLock is always ON. Return to CapsLock status when sending is completed.

*3. CapsLock status is controlled to display as the original string. Return to original CapsLock status when transmit is complete.

4.3.6 Data Output Speed (USB-HID)

Adjust data output speed in USB-HID. Selecting a shorter time makes the output faster. But, depending on the host system, outputting all characters may fail.

To enable this setting, you need to reboot after saving the setting.

USB-HID Data Transfer Interval Command

| Command | | | Command description | Default (Effective range) |
|---------|----|----|--|---------------------------|
| [E9M | Qa | Qb | Set transfer interval Interval: (10a+b) ms 「Unit」 | 4 ms 1 – 16 ms |

Example: Setting Data Output Speed

- Set the transmit interval to 1 ms (fastest). Command: [E9MQ1
- Set the transmit interval to 10 ms. Command: [E9MQ1Q0

4.3.7 Inter Character Delay (USB-HID)

The inter character delay introduces a configurable delay after each transmitted character. This function may be helpful if the host does not support flow control and is not capable of handling the received data at full speed.

Inter Character Delay Commands

| Command | Description |
|---------|--------------------|
| LA | No delay (default) |
| LB | Delay = 1 |
| LC | Delay = 2 |
| LD | Delay = 3 |
| LE | Delay = 4 |
| LF | Delay = 5 |
| LG | Delay = 6 |
| LH | Delay = 7 |
| LI | Delay = 8 |
| LJ | Delay = 9 |
| LK | Delay = 10 |

4.3.8 Keyboard Language

Set the keyboard language used on the host PC with the scan engine to be connect. Keyboard arrangement differs depending on the country or language. If the keyboard setting does not match, the output will be incorrect.

Keyboard Language Commands

| Command | Description |
|---------|-----------------|
| KE | USA (code page) |
| KV | UK |
| KG | German |
| KI | French |
| OW | Italian |
| KJ | Spanish |
| PI | Dutch |
| KK | Danish |
| PG | Finnish |
| PE | Norwegian |
| PD | Swedish |
| PH | Portuguese |
| BAZ | Brazilian |
| PL | Swiss (French) |
| PK | Swiss (German) |

4.3.9 Multi-Byte Character Output

| Command | Getter / Setter | Description |
|---------|---------------------------|---|
| C20 | ALL_VALUE | Output [ALT] with 4 digits. € Euro sign = [ALT]0128 |
| C20Q0 | ALL_VALUE | Output [ALT] with 4 digits. € Euro sign = [ALT]0128 |
| C20Q1 | ONLY_ASCII | No upper ASCII |
| C20Q2 | WITHOUT_MULTI_BYTE | Output [ALT] with 4 digits. € Euro sign = [ALT]0128 |
| C20Q3 | MULTI_BYTE_ALT_L | Linux style output for upper ASCII € Euro sign = [CTRL↓][SHIFT↓]u[CTRL↑][SHIFT↑]20AC[SPACE] |
| C20Q4 | MULTI_BYTE_ALT_N | Windows Word input codepoint [ALT]digits ¹ € Euro sign = [ALT]8364 |
| C20Q5 | MULTI_BYTE_ALT_N_ASIS | Windows Word input codepoint [ALT]digits ¹ € Euro sign = [ALT]8364 |
| C20Q6 | MULTI_BYTE_ALT_N_HEX | Windows upper ASCII input ² € Euro sign = [ALT]+20ac |
| C20Q7 | MULTI_BYTE_ALT_N_HEX_ASIS | Windows upper ASCII input ³ € Euro sign = 0020ac[ALT]X |

| | |
|----|--|
| 1. | <i>Windows application specific.</i> |
| 2. | <p>To use options <i>MULTI_BYTE_ALT_N_HEX</i> A windows registry key needs to be set. Issue: Windows 11 does not always work</p> <p>Registry setting enable hex numpad [HKEY_CURRENT_USER\Control Panel\Input Method] "EnableHexNumpad"="1"</p> <p>Registry setting disable hex numpad [HKEY_CURRENT_USER\Control Panel\Input Method] "EnableHexNumpad"="0"</p> <p>After registry setting change a reboot or logout/login is needed for the setting to take effect.</p> <p>When enabled the Windows OS will do the translation</p> |
| 3. | Some Windows application can work with 6 digit hex code [ALT]X to translate the Unicode character. This option is in Windows application specific but works in most UWP applications in Windows 11. |

4.3.10 Troubleshooting (USB-HID)

Use these possible solutions to troubleshoot USB-COM problems.

| Problem | Possible Solution |
|--|---|
| Output is not correct Garbled characters | <ul style="list-style-type: none"> • Make sure the keyboard language and output destination application are correctly configured. • If the host processing speed is not sufficient, insert an inter character delay. • If the control string is included, make sure that Ctrl + "any alphabet key" does not overlap with the shortcut key on the host side. |
| Line-break is doubled | Set the additional suffix setting based on the host application's line-break. |
| Cannot output images | Images cannot be transferred. |
| Scan engine does not appear in Device Manager. Restart unexpectedly Error beep sounds and data is not output when reading a bar code | <ul style="list-style-type: none"> • Make sure that the USB cable is properly connected. • Make sure that the connected USB port is operating properly. • Verify the USB port power supply capability. When using a laptop or hub, power supply capacity may not be sufficient. • Remove from the USB port at once, and after a while, insert again. • Insert to different port. |

4.3.11 Precautions

When emulating keyboard operation, the output destination environment affects the result, especially when using control character output (Ctrl + "any alphabet key") and multi-byte output setting. Carefully review the code to use and evaluate the output destination environments.

4.4 Data Buffer Mode

The Data Buffer Mode setting is common to all interfaces. Data Buffer Mode lets you specify whether to read an object during data output. When buffer mode is enabled, the scan engine can perform other operations, such as bar code scanning, while outputting decoded data. However, the reading performance may degrade during the data output. When buffer mode is disabled, the scan engine stops other operations until the completion of decoded data output.

Data Buffer Mode Commands


| Command | Description |
|----------------|---------------------|
| [D80 | Data buffer disable |
| [D81 (default) | Data buffer enable |

5 Power Management and Timing

This chapter describes power management and various timings of the scan engine.

- 5.1 Power Mode Transition
- 5.2 Current Consumption
- 5.3 Low Power
- 5.4 Recovery from Low Power Mode
- 5.5 Power ON /OFF Timing
- 5.6 Read Timing

5.1 Power Mode Transition

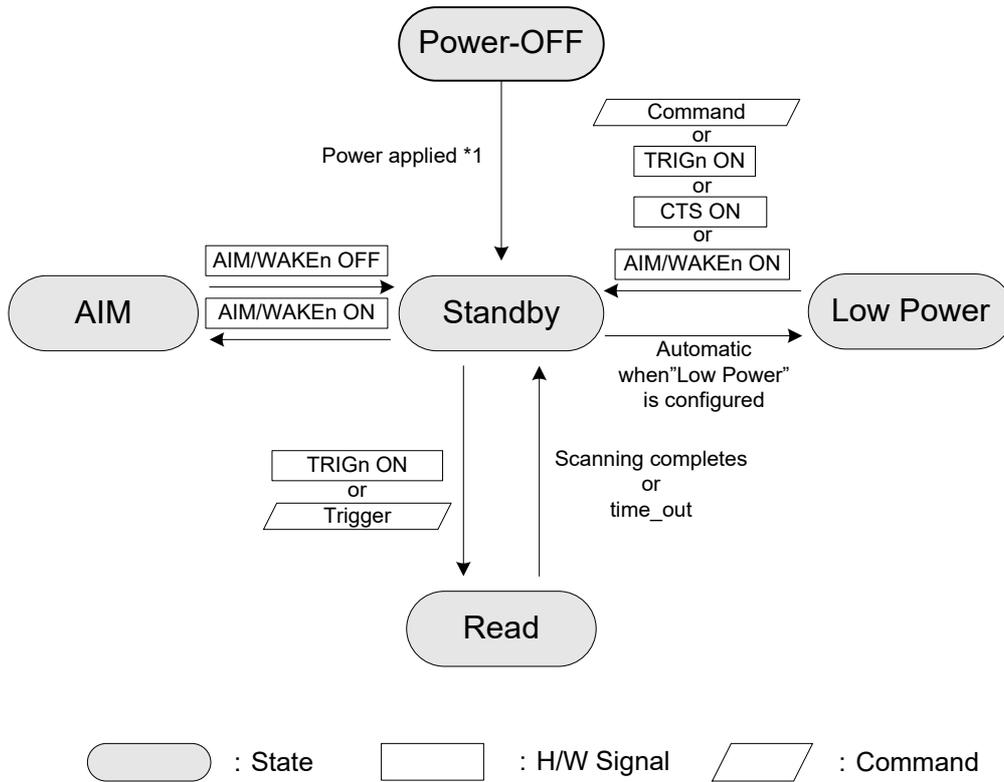

*1 These options adjust the start-up time: Fast Boot and Normal Boot

*2 When Low Power is enabled, the Q-250 automatically enters Low Power mode when Standby state passes the specified time.

Power Status

| Status | Description |
|-----------|---|
| Read | White LED illumination and green aiming light and process reading. |
| Standby | Ready to read. The state that can read immediately. |
| Low Power | Low current consumption status. The time to shift from standby is configurable. |
| AIM | With AIM signal is ON, green aiming lights. |

5.2 Current Consumption

Each electrical specifications of the scan engine are as follows.

5.2.1 Absolute Maximum Ratings

| Item | Name | Value |
|------------------------|----------------|--------------------------------------|
| Power supply | VCC | 0 ~ 5.5V |
| External trigger input | TRIG | 0 ~ 12V. Idle must be high or high Z |
| TxD and RTS output | TXD, RTS | -6V ~ 6V |
| RxD and CTS input | RXS, CTS | -25V ~ 25V |
| USB data lines | D-, D+ | 0 ~ 5.5V |
| Buzzer, LED outputs | BUZZER, GR_LED | 0 ~ 3.6V |

* Operation outside the Absolute Maximum Ratings may cause permanent device damage. Note that functional operation of the device is not guaranteed at these or any other conditions beyond those listed under Recommended Operating Conditions.

5.2.2 Recommended Operating Conditions

| Item | Name | Value |
|------------------------|--------------------|--|
| Power supply | VCC | 5.0V±10% |
| External trigger input | TRIG | Open drain: Low level 0V, high level max 12V or high Z |
| TxD and RTS output | TXD, RTS | Driven by the Q-250, 5.4V typical. |
| RxD and CTS input | Low level | -12V, according to RS232 spec. |
| | High level | +12V, according to RS232 spec. |
| | High/low threshold | 1V typical |
| USB data lines | D-, D+ | 0~3.3V, according to USB spec. |
| Buzzer, LED outputs | BUZZER, GR_LED | 0~3.3V, load resistance >= 5 kΩ |

5.2.3 Peak Current Consumption

| Item | Name | Value |
|-----------------------|--------------------------|-----------------|
| Bus-Power Class | Hi-Power | 500mA max |
| | Reading | 150mA (typical) |
| Current consumption*: | Max. with buzzer and LED | 300mA (typical) |
| | Standby | 100mA (typical) |

* Measured at 25°C with 5V power. Current consumption may vary depending on the Host.

5.3 Low Power

Low power mode helps to further reduce power consumption when in the Standby mode. Also, the contents set in the scan engine will not be disposed when shifting to the low power mode. The low power mode can only be used with the use of an external trigger.

5.3.1 Enable/Disable Low Power

The following commands are provided for the low power standby setting.


Low Power Mode Enable/Disable Commands

| Command | Description |
|---------|----------------------------------|
| [XSC | Disable low power mode (default) |
| [EB8 | Enable low power mode |

* When you enable low power mode, the initial value of the transition time is set to 5 seconds.

5.3.2 Transition Time

You can set the transition time t_1 to low power. The transition time t_1 means that the scan engine is in "Standby mode". After the transition time t_1 , low power mode becomes effective and the POWERDWN signal becomes high.

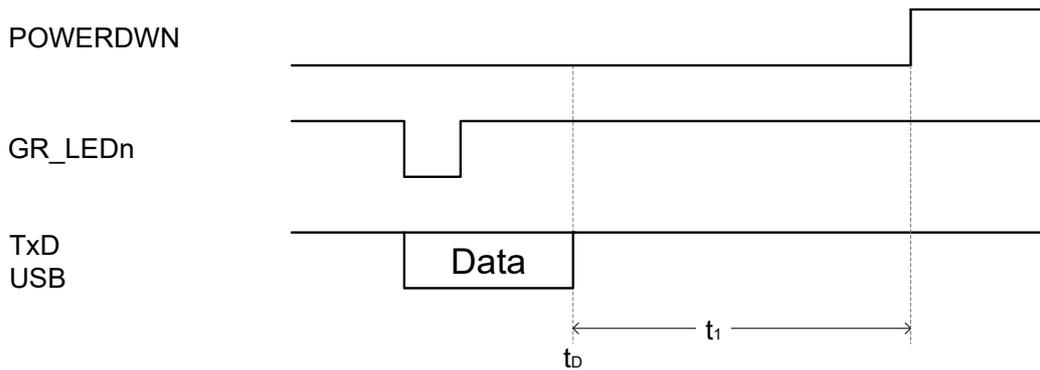

Low Power Transition Time

| Command | | | | | Description | Default |
|---------|----|----|----|----|--|-------------------|
| [EBA | Qa | Qb | Qc | Qd | Set low power transition time with numerical values. (1000a+100b+10c+d [s]) | 5 s (0 - 9999) |

* When 0, transition time is set to 150 ms.

Example: Command Input

Enable "low power mode" and set the transition time to low power to 3 seconds

```
<ESC>[EB8[EBAQ0Q0Q0Q3<CR>
```

Note: You should configure these setting at the factory default settings. For help, see section [3.3](#).

5.3.3 USB Low Power Mode Transition Condition

For USB, the scan engine transitions to low power mode when these conditions are met:

- The scan engine's low power mode is enabled.
- The scan engine passed the specified time (transition time) in standby state.
- The USB bus shifted to SUSPEND mode*¹.

*¹ USB bus can be placed in SUSPEND mode when effective USB communication, such as read data or command data is not performed for a certain period of time. The USB host device controls the management of this mode.

Using as USB-COM (USB Virtual COM)


By using Opticon USB Code Reader drive Version 3.0.0.0 or after and enabling USB Selective suspend function, shifting USB bus to the SUSPEND mode when valid communication is not placed is possible. Refer to Opticon USB Code Reader drive install manual.

Using as USB-HID (Key Code Input)

When connecting a scan engine and PC that has Windows OS installed, HID connection is done by the Windows inbox driver. By controlling the registry that controls the inbox driver, you can enable the Selective suspend function. For more information, see the Microsoft HID USB peripherals page ([https://msdn.microsoft.com/library/dn672268\(v=vs.85\).aspx](https://msdn.microsoft.com/library/dn672268(v=vs.85).aspx)).

5.3.4 USB Low Power Mode Communication Sequence

The scan engine detects USB bus shifting to SUSPEND mode and transitions to low power mode. This diagram illustrates the scan engine and USB host device communication sequence.

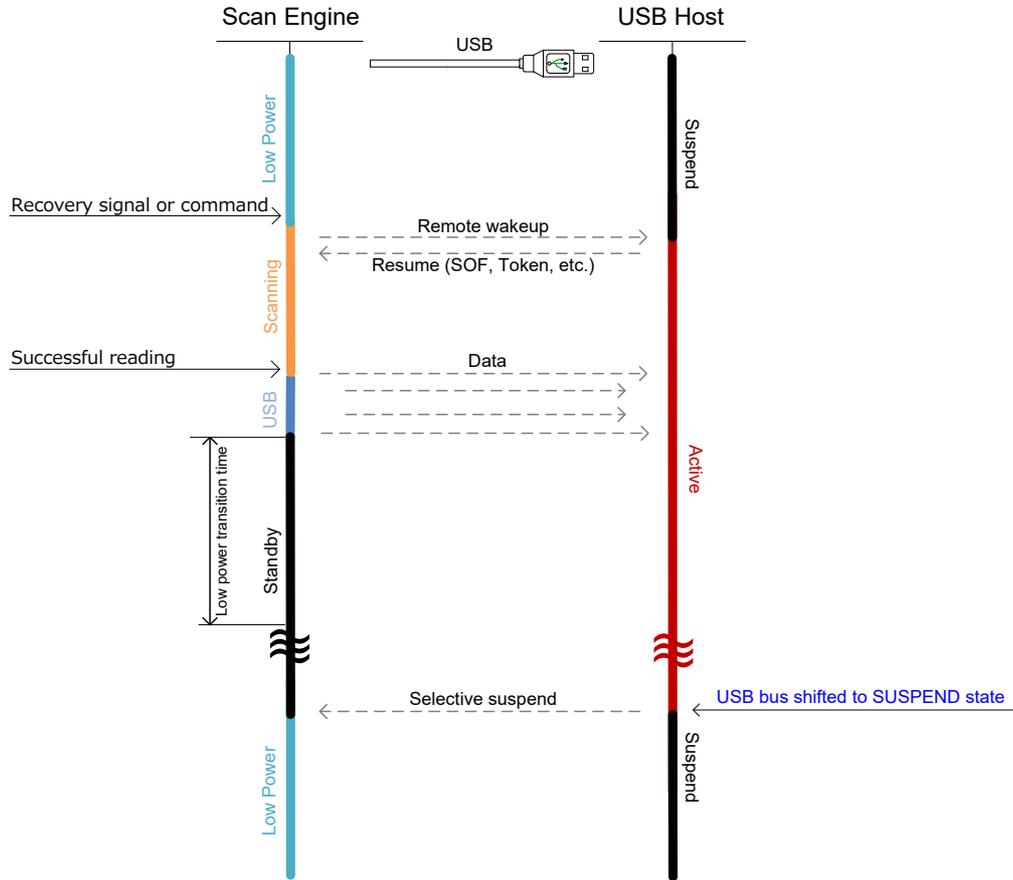


5.4 Recovery from Low Power Mode

To recover from low power mode, certain conditions, such as the signal to use and timing, must be met.

5.4.1 Recovery from Low Power Mode by Signal (UART)

To recover from low power mode, you can use a signal (TRIGn, CTS, and AIM/WAKEn). If additional commands are required, these commands will be acceptable from the time when the RTS or POWERDWN signal becomes low.

Example: Recover from Low Power Mode Using TRIGn Signal

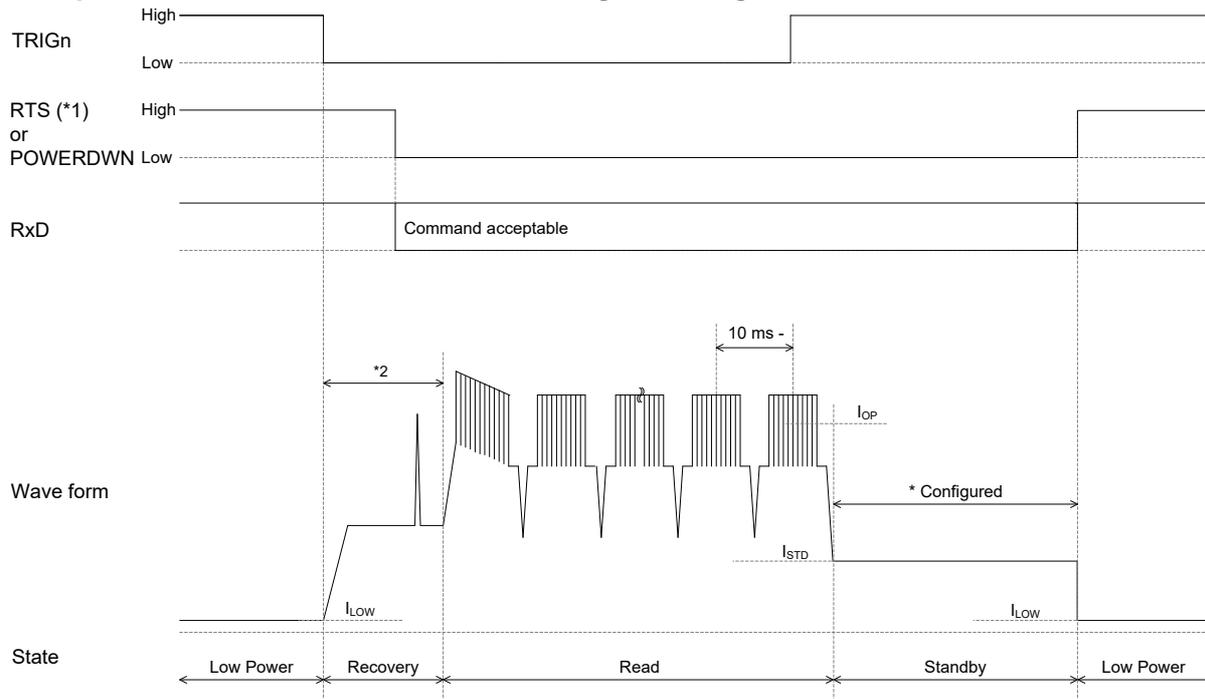

* To configure low power mode, see section [5.3: Low Power](#).

*1 When communication control is set to "MODEM", these signals cannot be used because the RTS signal becomes "High".

5.4.2 Recovery from Low Power Mode by Command (UART)


To recover from low power mode, you can use commands.

1. To start the recovery process, send Null or dummy data. The command becomes acceptable from the time the RTS or POWERDWN signal becomes low.
2. To start reading, send the trigger command "Z".

Note: If there is no RTS or POWERDWN signal, send the command 30 ms after starting recovery.

Example: Recover from Low Power Mode Using Command

If additional commands are required, confirm the RTS or POWERDWN signal and then send the commands.

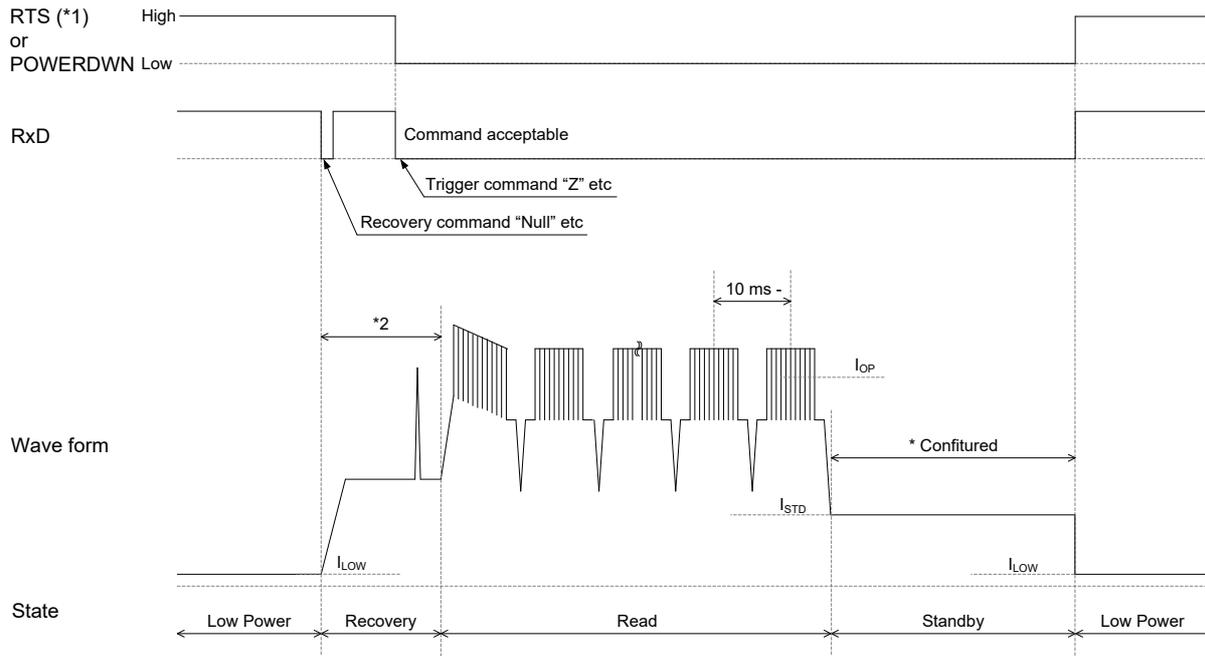


* To configure low power mode, see section [5.3: Low Power](#).

*1 When communication control is set to "MODEM", these signals cannot be used because the RTS signal becomes "High".

5.4.3 Recovery from Low Power Mode (USB)

To recover from low power mode, you can use a signal (TRIGn, CTS, and AIM/WAKEn) and a command. Recovery starts with a signal and becomes readable in about 43 ms. USB always accepts the command. USB shift to Active after sending the command.

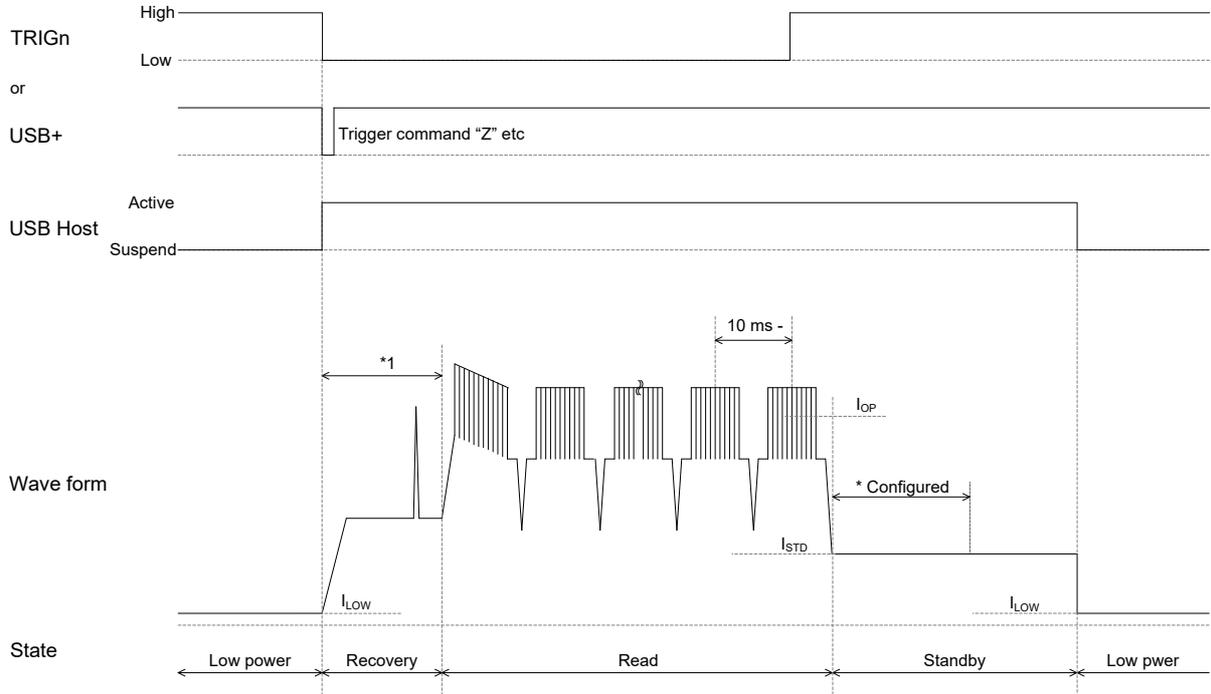


* To configure low power mode, see section [5.3: Low Power](#).

5.5 Power ON/OFF Timing

This section describes the power on/off timing of the scan engine.

5.5.1 Power-On Timing

Power-on timing indicates the time from power on until the scan engine can read bar codes.

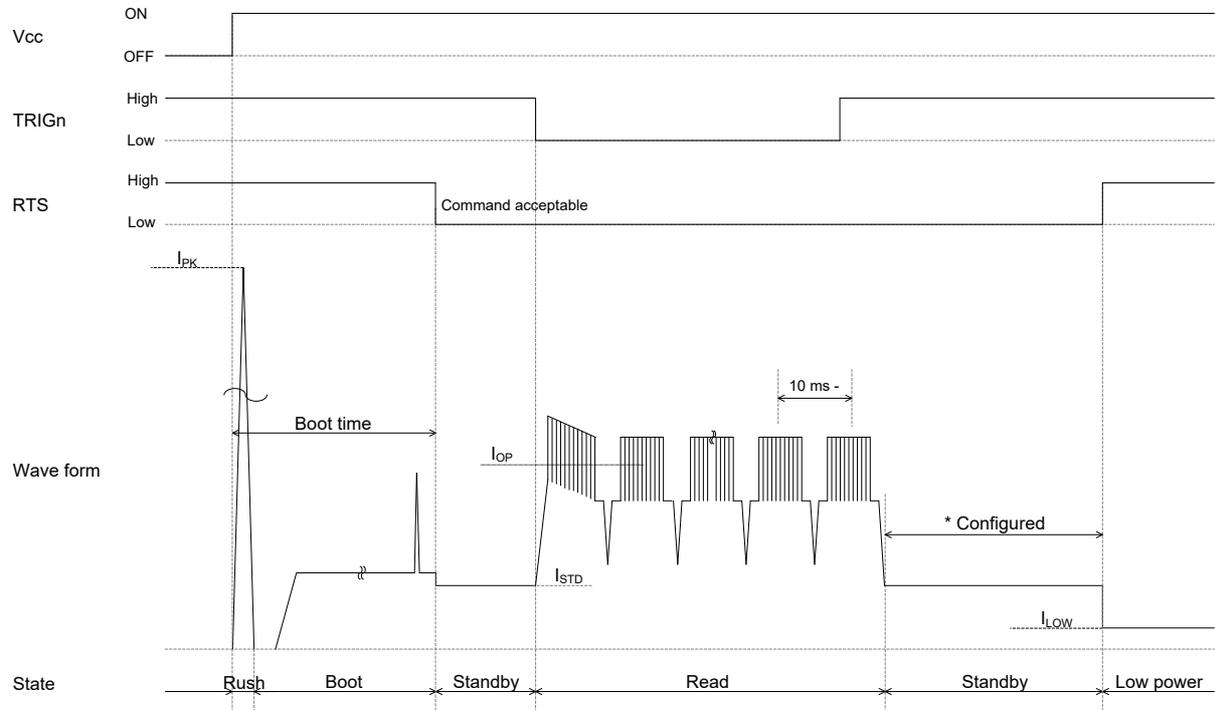

*1 When communication control is set to "MODEM", these signals cannot be used because the RTS signal becomes "High".

Startup Time Modes

(IF:UART/USB VCC = 3.3V/5.0V TA = 25°C)


| Mode | Condition | Min | Typ | Max | Unit |
|----------------|--------------|-----|-----|-----|------|
| Normal Boot | | - | 510 | - | ms |
| Fast Boot Mode | Configured*1 | | 425 | - | ms |

*For more information about fast boot mode, see section [3.4: Fast Boot Mode](#).

5.5.2 Power-Off Timing

When the power is turned off while an input signal to the scan engine is high, leakage current will be drawn from that signal. Therefore, all input signals to the scan engine should be set to “High impedance” or “Low”.

The interval between scan engine powers off to on, the time for 10 ms or more with Vcc 1V or lower is required.

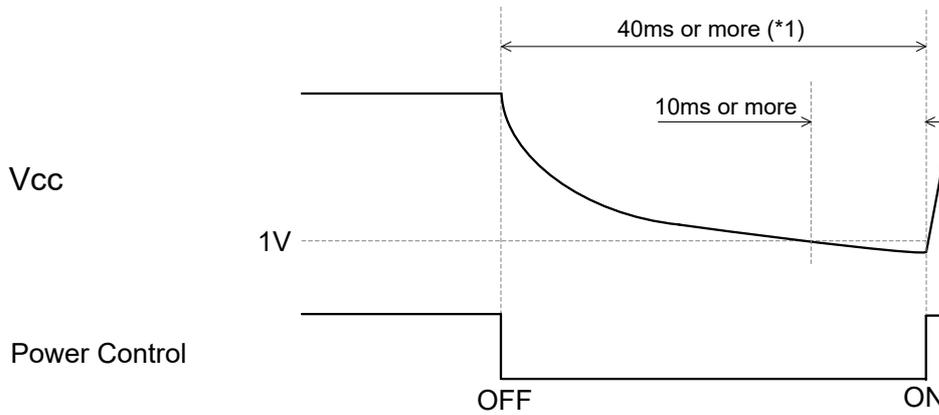

*1 For MEK-3100 circuit configuration, 40 ms or more is required.

Caution: For power off when saving configurations, the settings are stored in the scan engine:


- when the Z2 command is sent to save the parameters.
- after 1D or 2D menu codes are processed.

Writing the settings to the flash ROM can take up to 10 seconds. Make sure the power is not turned off during this period or the settings may be corrupted.

Note: When the Z2 command is sent, if the option “ACK/NAK for serial command” is enabled, the scan engine will send an ACK after writing the configuration data is completed. This function lets you get the correct timing.

5.6 Read Timing

The read timing of the scan engine is as follows.

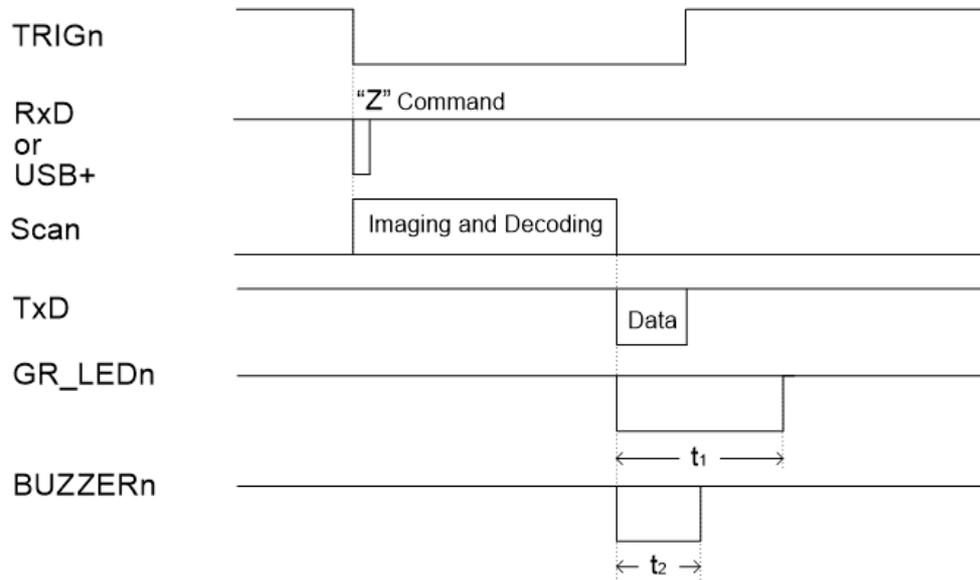

| Symbol | Description | Min | Typ | Max | Unit |
|--------|-----------------------|-----|-------------------|-----|------|
| t_1 | GR_LEDn signal period | | 200 ^{*1} | - | ms |
| t_2 | BUZZERn signal period | - | 50 ^{*2} | - | ms |

*1 GR_LEDn signal period can be set. See section [9.2: Good Read LED \(GR_LEDn Signal\)](#).

*2 BUZZERn signal period can be set. See section [9.1: Buzzer \(BUZZERn Signal\)](#).

5.6.1 Read Effective Time

Read effective time sets the reading time of 1 reading operation. Readout operation starts after the trigger signal is on or when the readout command “Z” is sent. If no data is output within the specified time, the readout operation stops.

Read Effective Time

| Command | Description |
|---------|---|
| Y0 | Trigger signal synchronization or “Z” “Y” command control (default) |
| Y1 | 1 second |
| Y2 | 2 seconds |
| Y3 | 3 seconds |
| Y4 | 4 seconds |
| Y5 | 5 seconds |
| Y6 | 6 seconds |
| Y7 | 7 seconds |
| Y8 | 8 seconds |
| Y9 | 9 seconds |
| YM | Read time infinite |
| YL | Read time 10 times |

Note: When auto trigger is set and the command “Y0” is set, the read effective time is automatically set by image processing.

Read effective time can also be set with a specific time in increments of 10 ms. To set read effective time with a specific time, enter the command followed by a 4-digit numeric command.

Read Effective Time Numeric Setting

| Command | | | | | Description | Default (Effective range) |
|---------|----|----|----|----|--|---------------------------|
| [EF7 | Qa | Qb | Qc | Qd | Set read effective time (1000a+100b+10c+d) [x10 ms] | Trigger synchronize |

Example: Setting Read Effective Time, Numeric Setting


Read effective time 500 ms

<Esc>[DF7Q0Q0Q5Q0<CR>

0050 x10 = 500 ms (This setting is in increments of 10 ms.)

5.6.2 Trigger Signal Control

By default, trigger signal synchronization is set to (Y0). The TRIGn signal determines the reading time. If TRIGn signal is active, the scan engine will read bar codes.

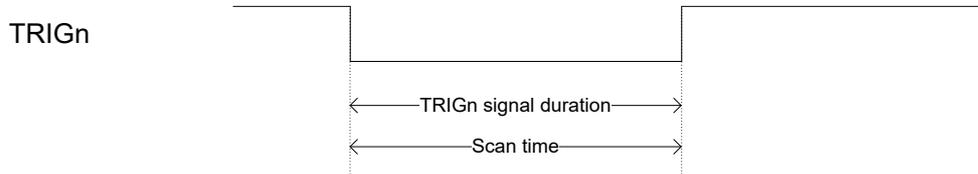


Effective Read Time


| Command | Description |
|--------------|---|
| +O (default) | Counting starts from TRIGn signal end |
| +P | Counting starts from TRIGn signal start |

Note: For more information, see section [5.6.1: Read Effective Time](#).

Counting starts from the TRIGn signal end.

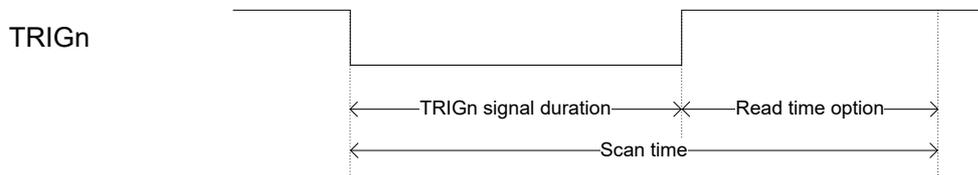


Counting starts from the TRIGn signal start.

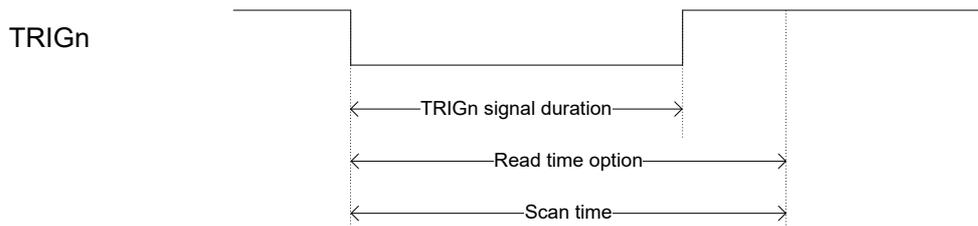


5.6.3 Command Trigger Control

When reading with a command, start reading with the trigger “Z” command and stop reading by sending the “Y” command.

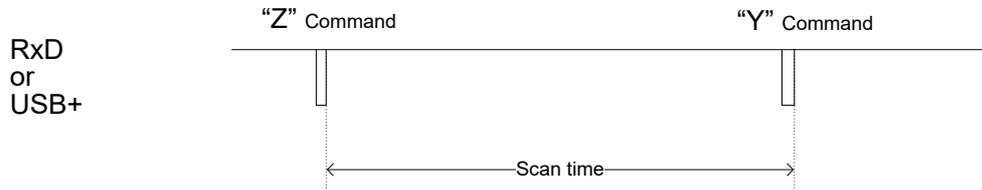

When effective read time is set, reading stops when the set time elapses. Reading also stops when the “Y” command is sent.

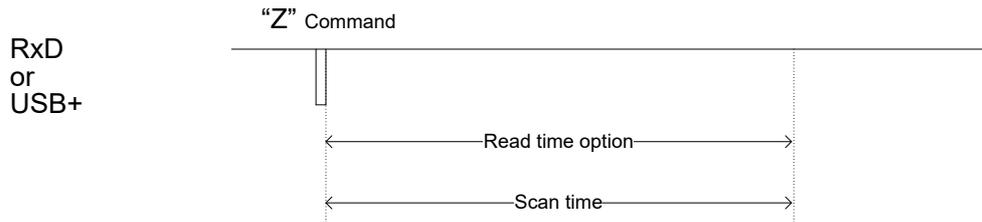


5.6.4 Trigger Delay

Trigger delay can start reading from after the trigger delay set time to the trigger.

Trigger Delay

| Command | | | | | Description | Default |
|---------|----|----|----|----|--|---------|
| [DEC | Qa | Qb | Qc | Qd | Trigger delay time (1000a+100b+10c+1d)x[10ms] | 0 ms |

Timing diagram of the trigger delay:

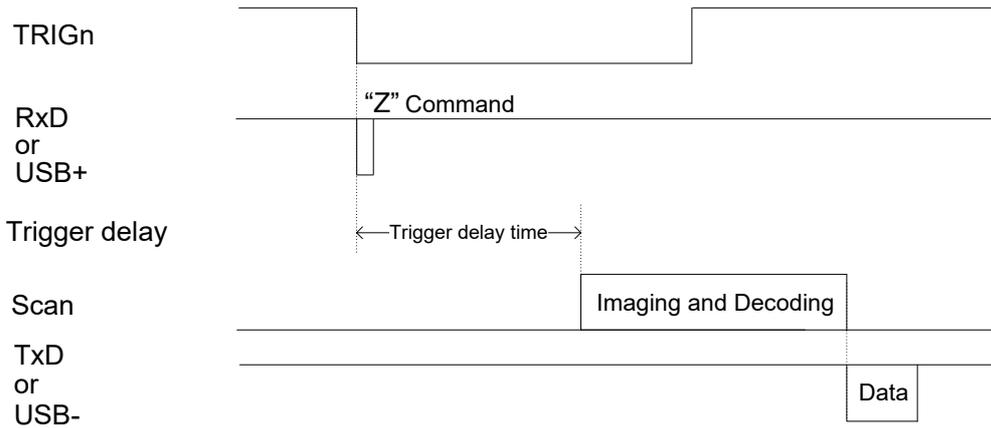

5.6.5 Decode Timeout

Decode timeout limits decode processing time for one image. When reading bar codes continuously, decoding a poor quality bar code image and peripheral symbols may take time. By limiting the decode time, the scan engine will try to decode the next image and may stabilize the reading.

Decode Timeout

| Command | | | | | | | Description | Default |
|---------|----|----|----|----|----|----|---|---------|
| [EAV | Q7 | A4 | Qa | Qb | Qc | Qd | Decode timeout (1000a+100b+10c+1d)x[1ms] | 0 ms * |

* Decode timeout = 0 means that the function is disabled and processes decoding for one image until the end. The processing time depends on the image.

6 Code Options

The code options for the scan engine let you configure the enabled bar code types, bar code specific options, and number of characters to be read.

For best reading performance, you should only enable the bar codes and options you need. These settings do not affect the reading of the 1D menu codes.

For more information, see section [10.3 Sample Codes](#).

- 6.1 Setting Readable Codes
- 6.2 Setting Code Common Options
- 6.3 Setting Code Specific Option
- 6.4 Setting Number of Characters

6.1 Setting Readable Codes

Configuration commands are classified by one of these categories:

- **Single:** Only the specified symbology will be enabled. All other symbologies will be disabled.
- **Multiple:** The specified symbology will be enabled in addition to the symbologies that are already enabled.
- **Disable:** The specified symbology will be disabled. All other enabled symbologies stay enabled.

6.1.1 1D Bar Codes

| Symbologies | Enable/Disable Command | | | Default | | | | | |
|--------------------|------------------------|----------|---------|---------|-------------|-------------------------|--------------------|----------|---|
| | Single | Multiple | Disable | Enable | Mini Length | Positive Negative Image | ST/SP Transmission | CD check | Suffix |
| UPC | J1 | R1 | [X4B | ✓ | - | Positive Image Only | - | ✓ | USB-HID "ENTER" USB-COM UART "CR" |
| UPC-A | [J1A | [R1A | [V1A | ✓ | - | | - | ✓ | |
| UPC-E | [J1B | [R1B | [V1B | ✓ | - | | - | ✓ | |
| EAN/JAN | J4 | R4 | [X4E | ✓ | - | | - | ✓ | |
| EAN/JAN-13 | JG | JU | [DDM | ✓ | - | | - | ✓ | |
| EAN/JAN-8 | JA | JO | [DDN | ✓ | - | | - | ✓ | |
| Code 39 | A2 | B2 | VB | ✓ | 1 | | x | x | |
| Tri-Optic | JD | JZ | [DDJ | ✓ | - | | | | |
| Codabar | A3 | B3 | VC | ✓ | 2 | | x | x | |
| Industrial 2 of 5 | J7 | R7 | [X4K | ✓ | 5 | | - | x | |
| Interleaved 2 of 5 | J8 | R8 | [X4L | ✓ | 6 | | - | x | |
| S-Code | RA | R9 | [DDK | | 5 | | | | |
| Code 128 | A6 | B6 | VE | ✓ | 1 | | - | ✓ | |
| Code 93 | A5 | B5 | VD | ✓ | 1 | | - | ✓ | |
| IATA | A4 | B4 | VH | ✓ | 5 | | - | x | |
| MSI/Plessey | A7 | B7 | VF | | 3 | | - | ✓ | |
| UK/Plessey | A1 | B1 | VA | | 2 | | - | ✓ | |
| Telepen | A9 | B9 | VG | | 1 | | - | ✓ | |
| Code 11 | [BLB | [BLC | [BLA | | 1 | | - | ✓ | |
| Matrix 2 of 5 | AB | BB | [DDL | | 5 | | - | x | |

* GS-128 will read as Code 128. To convert GS1-128 to GS1, see section [6.2.1: GS1 Convert](#).

6.1.2 Postal Code

| Symbologies | Enable/Disable command | | | Default | |
|----------------------------|------------------------|----------|---------|---------|----------------------|
| | Single | Multiple | Disable | Enable | Suffix |
| Chinese Post Matrix 2 of 5 | JE | JS | JT | | USB-HID "ENTER" |
| Korean Postal Authority | JL | WH | WI | | USB-COM UART "CR" |

6.1.3 GS1 DataBar

| Symbologies | Enable/Disable command | | | Default | |
|--|------------------------|----------|---------|---------|---|
| | Single | Multiple | Disable | Enable | Suffix |
| GS1 DataBar <ul style="list-style-type: none"> • GS1 DataBar Omnidirectional • GS1 DataBar Truncated • GS1 DataBar Stacked • GS1 DataBar Stacked Omnidirectional | J9 | JX | SJ | ✓ | USB-HID "ENTER" USB-COM UART "CR" |
| GS1 DataBar Limited | JJ | JY | SK | ✓ | |
| GS1 DataBar Expanded <ul style="list-style-type: none"> • GS1 DataBar Expanded • GS1 DataBar Expanded Stacked | JK | DR | SL | ✓ | |

Note: To convert to GS1, see section [6.2.1: GS1 Convert](#).

6.1.4 GS1 Composite Code

| Symbolologies | Enable/Disable command | | Default | |
|--|------------------------|---------|---------|---|
| | Multiple | Disable | Enable | Suffix |
| Composite GS1 DataBar <ul style="list-style-type: none"> • CC-A • CC-B • Limited CC-A • Limited CC-B • Expanded CC-A • Expanded CC-B | [BHE | [BHF | ✓ | USB-HID "ENTER" USB-COM UART "CR" |
| Composite GS1-128 <ul style="list-style-type: none"> • CC-A • CC-B • CC-C | | | ✓ | |
| Composite EAN <ul style="list-style-type: none"> • EAN-13 CC-A • EAN-13 CC-B • EAN-8 CC-A • EAN-8 CC-B | [D1V | [D1W | | |
| Composite UPC <ul style="list-style-type: none"> • UPC-A CC-A • UPC-A CC-B • UPC-E CC-A • UPC-E CC-B | | | | |

Notes:

- To convert to GS1, see section [6.2.1: GS1 Convert](#).
- When composite EAN or composite UPC is enabled, EAN or UPC only cannot be read.

6.1.5 2D Codes

| Symbologies | Enable/Disable Command | | | Default | |
|-----------------------|------------------------|----------|---------|---------|--|
| | Single | Multiple | Disable | Enable | Suffix |
| PDF417 | [BC3 | [BCF | [BCR | ✓ | USB-HID "ENTER" / USB-COM UART "CR" |
| MicroPDF417 | [BC4 | [BCG | [BCS | | |
| Codablock F | [D4R | [D4P | [D4Q | | |
| QR Code | [BC1 | [BCD | [BCP | ✓ | |
| Micro QR | [D38 | [D2U | [D2V | ✓ | |
| Data Matrix (ECC 200) | [BC0 | [BCC | [BCO | ✓ | |
| Aztec Code | [BC5 | [BCH | [BCT | ✓ | |
| Aztec Runes | [BF4 | [BF2 | [BF3 | | |
| Chinese-sensible code | [D4K | [D4L | [D4M | | |
| Maxi Code | [BC2 | [BCE | [BCQ | | |
| Dot Code | [DOC | [DOD | [DOE | | |

Note: To convert to GS1 and read GS1 QR codes and GS1 Data Matrix, see section [6.2.1: GS1 Convert](#).

6.1.6 OCR

ICAO Machine Readable Travel Documents Charts

| Documents | Enable/Disable command | | | Default | |
|-----------------------------|------------------------|--------|---------|---------|--|
| | Single | Enable | Disable | Enable | Suffix |
| Machine readable Passports | [DJ1 | [DJ2 | [DJ3 | | USB-HID "ENTER" / USB-COM UART "CR" |
| Machine readable Visa-A | [DJ4 | [DJ5 | [DJ6 | | |
| Machine readable Visa-B | [DJ7 | [DJ8 | [DJ9 | | |
| Official Travel Documents 1 | [DJA | [DJB | [DJC | | |
| Official Travel Documents 2 | [DJD | [DJE | [DJF | | |

Note: Because the format is fixed, ICAO travel documents can be read regardless of the image direction.

To free edit and read standard OCR fonts see section [6.2.7: OCR Free Edit](#). For advanced settings, see the "Data Edit Programming Manual".

6.1.7 Code Type Settings

| Symbologies | Initialize Command | Enable (Single) | Enable (Multiple) | Disable |
|--------------------|--------------------|--------------------|--------------------|---------|
| All 1D Bar Codes | [DX1 | [BCA* ¹ | [BCM* ¹ | [BCY |
| All 2D Codes | [DX2 | [BCB | [BCN | [BCZ |
| All Codes (1D, 2D) | [DX0* ² | A0* ³ | | B0 |

*1 Add-on code will also be added. The Add-on delay timer will be activated and requires a longer time to read.

*2 OCR will also be initialized.

*3 OCR and Add-on will not be added.

6.2 Setting Code Common Options

6.2.1 GS1 Convert

Because the FNC1 character is not included in ASCII, when it is used, variable length termination will not be transmitted when reading GS1 symbols (GS1-128, GS1 DataBar, GS1 DataBar Composite, GS1 DataMatrix, GS1 QR Code, GS1 Dot Code) with the default setting. For GS1 conversion, to analyse the GS1 data at the host, convert variable length data termination FNC1 to "Ctrl+" and key outputs for USB-HID. For USB-COM and RS-232C, you need to convert to GS(0x1D) and outputs. However, if the last of variable length data is AI data, FNC1 does not exist and GS is not output.

<Initial Setting Status>

| | | | | | | | |
|-----------------------------|----|---------------------------|---------------------------------|-----------------------------|-----|----|---------------------------------|
| FNC1 (non-output) | AI | Data (fixed length) | AI Data (variable length) | FNC1 (non-output) | ... | AI | AI Data (variable length) |
|-----------------------------|----|---------------------------|---------------------------------|-----------------------------|-----|----|---------------------------------|

<GS1 After Conversion>

For USB-HID

| | | | | | | | |
|---------------------------|----|---------------------------|---------------------------------|-------------------------------|-----|----|---------------------------------|
| AIM-ID (output) | AI | Data (fixed length) | AI Data (variable length) | Ctrl+] (key output) | ... | AI | AI Data (variable length) |
|---------------------------|----|---------------------------|---------------------------------|-------------------------------|-----|----|---------------------------------|

For USB-COM and UART

| | | | | | | | |
|---------------------------|----|---------------------------|---------------------------------|-----------------------------|-----|----|---------------------------------|
| AIM-ID (output) | AI | Data (fixed length) | AI Data (variable length) | GS(0x1D) (output) | ... | AI | AI Data (variable length) |
|---------------------------|----|---------------------------|---------------------------------|-----------------------------|-----|----|---------------------------------|

* For AIM-ID, see section [9.1.2: Good Read Buzzer](#).

GS1 Convert

| GS1 Conversion Supported Symbologies | Command | Command Description |
|---|---------------------------|------------------------|
| GS1-128 GS1 DataBar GS1 DataBar Composite GS1 Data Matrix GS1 QR Code GS1 Dot Code | [X/0 (initial setting) | Disable GS1 conversion |
| | [X/4 | Enable GS1 conversion |

To process and output GS1 conversion data in the scan engine:

- Use the Opticon application tool "UniversalConfig" to enable processing and outputting GS1 symbol data.




6.2.2 Positive and Negative Image of Bar Codes (1D Code Common)

Typically, bar codes are printed in black on a white background (normal/positive bar code). But there may be instances where they are printed in white on a black background (negative bar code).

Positive Image of Code 128



Negative Image of Code 128

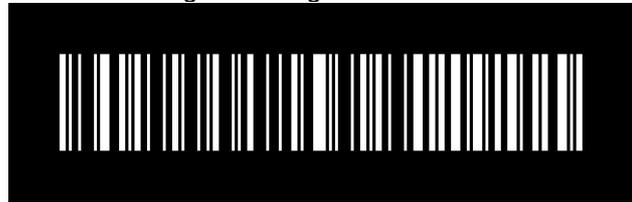


Positive and Negative Bar Code Image

| Code | Command | Description |
|------|---------|---|
| 1D | Q0 | Decode positive bar codes only. (default) |
| | Q1 | Decode negative bar codes only. |
| | Q2 | Decode positive bar codes and negative bar codes. |

Note: For best reading performance, only enable the required codes and options.

6.2.3 Smart Quiet Zone (1D Code)

The required margin on the left and right of the bar code is called the quiet zone. If the quiet zone is narrow or the flame line is too close, enabling the smart quiet zone will adjust to the maximum performance for reading various 1D bar codes. This setting does not comply with bar code standards, so the possibility of misreading may increase. If misreading occurs, disable this setting.

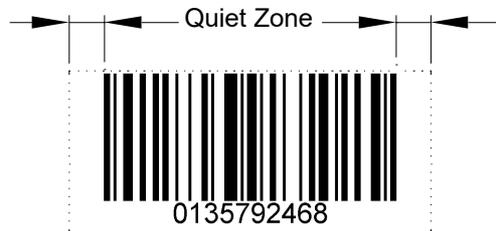

Smart Quiet Zone Enable/Disable Commands

| Item | Command | | Description |
|--------------------------|---------|-------|------------------------------------|
| Enable smart quiet zone | [DLY | Qa Qb | Enable the code specified by QaQb |
| Disable smart quiet zone | [DLZ | Qa Qb | Disable the code specified by QaQb |

1D Bar Code Settings for Smart Quiet Zone

| Symbologies | ab | Default |
|----------------------------|----|---------|
| EAN/UPC | 01 | ✓ |
| Code 39 | 02 | ✓ |
| Codabar | 03 | |
| Industrial 2 of 5 | 04 | |
| Interleaved 2 of 5 | 05 | |
| S-Code | 06 | |
| Code 128 | 07 | ✓ |
| Code 93 | 08 | ✓ |
| IATA | 09 | |
| MSI/Plessey | 10 | |
| UK/Plessey | 11 | |
| Telepen | 12 | ✓ |
| Code 11 | 13 | ✓ |
| Matrix 2 of 5 | 14 | |
| Chinese Post Matrix 2 of 5 | 15 | ✓ |

6.2.4 Redundancy (1D Code Common)

When redundancy is enabled, a 1D bar code must be scanned and decoded multiple times and the results must be the same before it is considered correctly decoded. The redundancy count is the number of times that the bar code must be scanned in addition to the first scan. Selecting a higher redundancy count reduces the probability of reading errors but makes the output response slower. The default setting can reliably read high-quality printed bar codes.

Note: This setting only affects reading 1D Bar Codes.

Redundancy Commands

| Command | Description |
|---------|--|
| X0 | Read 1 time, redundancy = 0 |
| X1 | Read 2 times, redundancy = 1 |
| X2 | Read 3 times, redundancy = 2 |
| X3 | Read 4 times, redundancy = 3 (default) |
| BS | Read 5 times, redundancy = 4 |
| BT | Read 6 times, redundancy = 5 |
| BU | Read 7 times, redundancy = 6 |
| BV | Read 8 times, redundancy = 7 |
| BW | Read 9 times, redundancy = 8 |

6.2.5 Add-On Waiting Time

The scan engine searches for valid UPC/EAN add-on codes within the selected amount of time. If an effective add-on code is found, the scan engine immediately sends the data. If there is nothing to read after the code, the scan engine sends the data without an add-on. If there is something to read after the code but it is not a valid add-on code, the scan engine ignores the code.

Supported codes:

- UPC 2 digits/5 digits add-on and GS1 composition symbol
- EAN/JAN 2 digits/5 digits add-on and GS1 composition symbol

Add-On Waiting Time Commands

| Command | Description |
|---------|---|
| XA | Add-on standby mode invalid |
| XB | Add-on standby mode 0.25 seconds |
| XC | Add-on standby mode 0.5 seconds (initial setting) |
| XD | Add-on standby mode 0.75 seconds |

6.2.6 ECI Protocol Output

ECI Protocol Output determines whether to output data related to ECI (Extended Channel Interpretation) protocol in 2D codes (QR Code, Data Matrix, Aztec Code, Maxi Code, and Dot Code).

If ECI protocol exists for data, the ECI number is indicated by a 6-digit number following the backslash and two backslashes indicating a backslash.

To not output ECI protocol, change the data career identifier to ID not use ECI protocol, delete the 6-digit number following the backslash, and replace the two backslashes with one backslash.

Supported codes: QR Code, Data Matrix, Aztec Code, Maxi Code, and Dot Code.

Example Output




```
Output:      ]Q2\000001test\\test
Not output:  ]Q1test\test
*Backslash: '\'
```

ECI Protocol Output Commands


| Command | Description |
|---------|--------------------------------------|
| [DLE | Do not output ECI protocol (default) |
| [DLF | Output ECI protocol |

6.2.7 OCR Free Edit

To read OCR standard format, use the UniversalConfig tool to configure OCR free edit to generate a setup QR code.

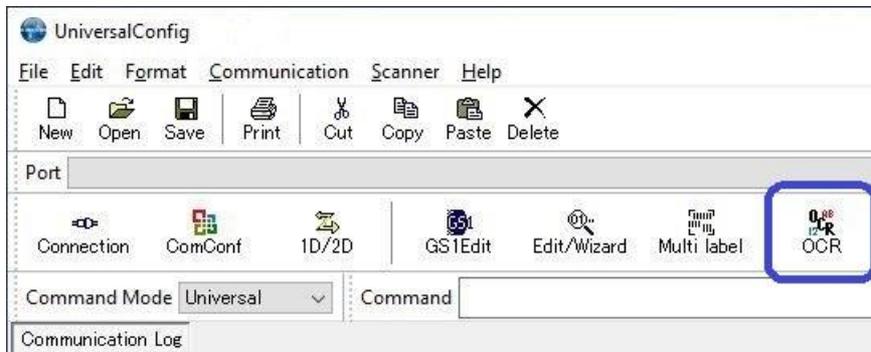

You can set up to 40 digits (2 rows) of numbers, alphabets, and symbols. For advanced settings, see the "Data Edit Programming Manual". For items that cannot be set, please contact your local sales office.

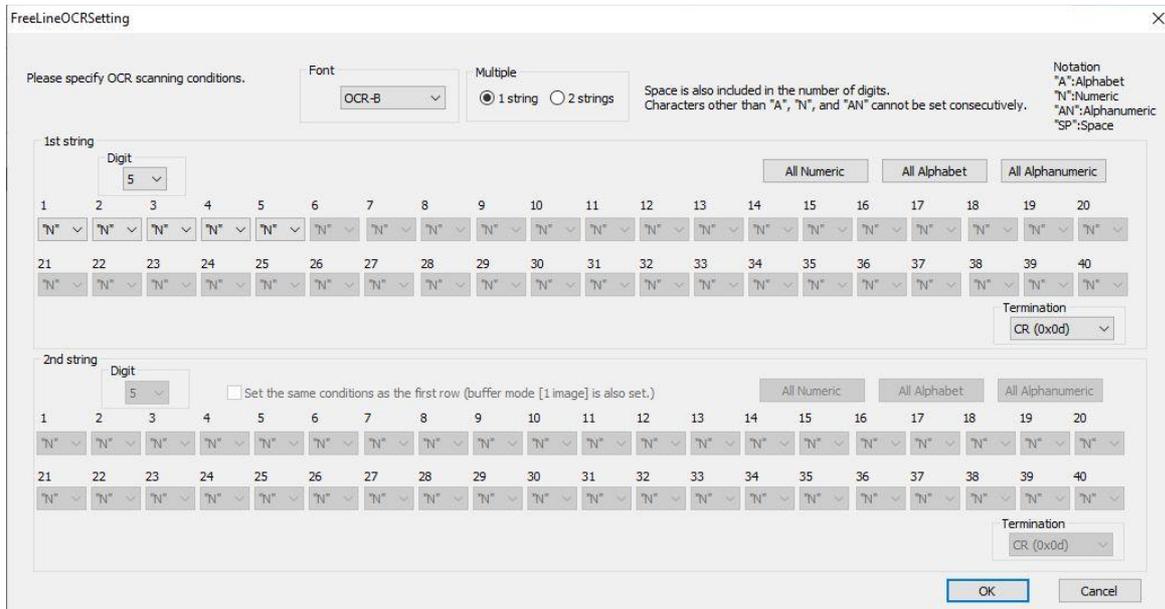

6.2.8 DPM (Dot Peen Making) Code Reading

DPM reading is used to read codes that are imprinted directly on metal or other materials in the form of dots.

DataMatrix in dot print



DataMatrix in negative dot print



Normal DataMatrix



The scan engine may not be able to read these codes due to specular reflection or contrast reduction due to materials or curved surfaces.

DPM Reading Commands

| Command | | Description |
|---------|--------------|---|
| [DPF | Q0 (default) | Do not read DMP patterns. |
| | Q1 | Execute processing of multiple DPM patterns. |
| | Q2 | Execute processing of multiple DPM patterns and fixate to the process where reading was successful. * |

* Fixating the DPM pattern process stabilizes the reading. To initialize the fixated process, resend [DPFQ2.

6.3 Setting Code Specific Options

6.3.1 UPC

UPC code is a bar code established by the United States Uniform Code Council Inc. and used by the distribution industry.



6.3.1.1 UPC-A

UPC-A Configuration

| Item | Overview |
|-------------------------------|---|
| Character set | Numeric (0 - 9) |
| Number of digits | 12 digits (11 digits +CD1 digit) fixed length |
| CD (check digit) check method | Modulus 10/Wait 3 |

UPC-A Transfer Data Format

| Leading "0" | Data 11 digits | CD 1 digit |
|-------------|----------------|------------|
|-------------|----------------|------------|

* If you set to 13 digits transfer data format that transfers a leading "0" and CD, the format becomes compatible with JAN/EAN-13.

UPC-A Add-On 2 Digits/5 Digits

UPC-A Add-On 2 Digits/5 Digits is a UPC-A bar code of plus a 2-digit or 5-digit supplemental code. When add-on is enabled. The add-on code must be within the reading range of the scan engine. If it is not within range, after the add-on waiting time the scan engine reads the code as UPC or EAN. When add-on is allowed and the scan engine is only reading UPC or EAN, reading response will decrease.

Transfer Data Format (UPC-A Add-On 2 Digits)

| Leading "0" | Data 11 digits | CD 1 digit | Add-on 2 digits |
|-------------|----------------|------------|-----------------|
|-------------|----------------|------------|-----------------|

Transfer Data Format (UPC-A Add-On 5 Digits)

| Leading "0" | Data 11 digits | CD1 digit | Add-on 5 digits |
|-------------|----------------|-----------|-----------------|
|-------------|----------------|-----------|-----------------|

UPC-A CD Transfer/Front "0" Transfer

Use this command to determine whether to transmit a CD (check digit) and a leading "0". If you set the 13 digits transfer data format that transfers a leading "0" and CD, the format becomes compatible with JAN/EAN-13.

6.3.1.2 UPC-E



UPC-E Configuration

| Item | Overview |
|-------------------------------|---|
| Character set | Numeric (0 - 9) |
| Number of digits | 7 digits (6 digits + CD 1 digit) fixed length |
| CD (check digit) check method | Modulus 10/Wait 3 |

Transfer Data Format

| | | |
|-------------|---------------|-------------|
| Leading "0" | Data 6 digits | CD 1 digits |
|-------------|---------------|-------------|

UPC-E Add-On 2 Digits/5 Digits

UPC-E Add-On 2 Digits/5 Digits is a UPC-E bar code plus a 2-digit or 5-digit supplemental code.

Transfer Data Format (UPC-E Add-On 2 Digits)

| | | | |
|-------------|---------------|------------|-----------------|
| Leading "0" | Data 6 digits | CD 1 digit | Add-on 2 digits |
|-------------|---------------|------------|-----------------|

Transfer Data Format (UPC-E Add-On 5 Digits)

| | | | |
|-------------|---------------|------------|-----------------|
| Leading "0" | Data 6 digits | CD 1 digit | Add-on 5 digits |
|-------------|---------------|------------|-----------------|

UPC-E CD Transfer/Front "0" Transfer

Use this command to determine whether to transmit a CD (check digit) and a leading "0". If you set the 8-digit transfer data format that transfers a leading "0" and CD, the format becomes compatible with JAN/EAN-8.

Convert UPC-E to UPC-A Format

You can convert UPC-E to UPC-A format.

UPC-A and UPC-E Settings

| Code | Item | Command | Description | Default |
|-------|--|---------|--|---------|
| UPC-A | UPC-A Leading zero CD transmission | E2 | UPC-A, Leading zero, transmit CD | |
| | | E3 | UPC-A, No leading zero, transmit CD | ✓ |
| | | E4 | UPC-A, Leading zero, do not transmit CD | |
| | | E5 | UPC-A, No leading zero, do not transmit CD | |
| | Add-on 2 digits | J2 | Enable single UPC Add-on 2 | |
| | | R2 | Enable UPC Add-on 2 | |
| | | [X4C | Disable UPC Add-on 2 | ✓ |
| | Add-on 5 digits | J3 | Enable single UPC Add-on 5 | |
| | | R3 | Enable UPC Add-on 5 | |
| | | [X4D | Disable UPC Add-on 5 | ✓ |
| UPC-E | UPC-E Leading zero CD transmission | E6 | UPC-E , Leading zero, transmit CD, transfer digits 8 digits | |
| | | E7 | UPC-E , No leading zero, transmit CD, transfer digits 7 digits | ✓ |
| | | E8 | UPC-E , Leading zero, do not transmit CD, transfer digits 7 digits | |
| | | E9 | UPC-E , No leading zero, do not transmit CD, transfer digits 6 digits | |
| | UPC-A, E conversion | 6Q | Transmit UPC-E | ✓ |
| | | 6P | Transmit as UPC-A | |

6.3.2 EAN/JAN

EAN/JAN-13 and EAN/JAN-8 are standardized, common product symbols in the distribution industry. The 13-digit version is the standard version and the 8-digit version is the shortened version.

6.3.2.1 EAN/JAN-13



EAN/JAN-13 Configuration

| Item | Overview |
|-------------------------------|---|
| Character set | Numeric (0 - 9) |
| Number of digits | 13 digits (12 digits +CD1 digit) fixed length |
| CD (check digit) check method | Modulus 10/Wait 3 |

Transfer Data Format

| | |
|----------------|------------|
| Data 12 digits | CD 1 digit |
|----------------|------------|

EAN/JAN-13 Add-On 2 Digits/5 Digits

EAN/JAN-13 Add-On 2 Digits/5 Digits is an EAN/JAN -13 bar code plus a 2-digit or 5-digit supplemental code. When add-on is enabled. The add-on code must be within the reading range of the scan engine. If it is not within range, after the add-on waiting time the scan engine reads the code as UPC or EAN. When add-on is allowed and the scan engine is only reading UPC or EAN, **reading response will decrease.**

Transfer Data Format (EAN/JAN -13 Add-On 2 Digits)

| | | |
|----------------|------------|-----------------|
| Data 12 digits | CD 1 digit | Add-on 2 digits |
|----------------|------------|-----------------|

Transfer Data Format (EAN/JAN -13 Add-On 5 Digits)

| | | |
|----------------|------------|-----------------|
| Data 12 digits | CD 1 digit | Add-on 5 digits |
|----------------|------------|-----------------|

EAN/JAN -13 CD Transfer

Use this command to determine whether to transfer EAN/JAN-13 CD (check digit).

EAN-13 Forced Add-On

You can force EAN-13 with leading 3 digits (378/379/529/414/419/434/439/977/978) to be handled as "with add-on". When enabled, the bar code without the add-on (which is the condition of leading 3 digits) cannot be read.

ISBN Conversion

When ISBN conversion is enabled, it converts data with an EAN-13 leading "978" or "979". ISBN conversion re-calculates the CD by omitting the leading 3 digits and outputs 10 digits. If CD is 10, X is output.

Examples:

- ISBN conversion of EAN-13 "9791230671184"; converts to "1230671188" and outputs this data.
- ISBN conversion of EAN-13 "9780123782830"; converts to "012378283X" and outputs this data.

ISSN Conversion

When ISSN conversion is enabled, it converts data with an EAN-13 leading "977". ISSN conversion recalculates the CD by omitting leading 3 digits and outputs 8 digits.

ISMN Conversion

When ISMN conversion is enabled, it converts data with an EAN-13 leading "9790". ISMN conversion converts the leading 4 digits to "M" and outputs 10 digits. When ISMN conversion is disabled and ISBN conversion is enabled, EAN-13 with a leading "9790" will be converted to ISBN format.

Example:

- ISMN conversion of EAN-13 "9790230671187"; converts to "M230671187" and outputs this data.

6.3.2.2 EAN/JAN-8



EAN/JAN-8 Configuration

| Item | Overview |
|-------------------------------|--|
| Character set | Numeric (0-9) |
| Number of digits | 8 digits (7 digits + CD1 digit) fixed length |
| CD (check digit) check method | Modulus 10/Wait 3 |

Transfer Data Format

| | |
|---------------|------------|
| Data 7 digits | CD 1 digit |
|---------------|------------|

EAN/JAN -8 Add-on 2 Digits/5 Digits

EAN/JAN-8 Add-On 2 Digits/5 Digits is an EAN/JAN-8 bar code plus a 2-digit or 5-digit supplemental code. When add-on is enabled. The add-on code must be within the reading range of the scan engine. If it is not within range, after the add-on waiting time the scan engine reads the code as UPC or EAN. When add-on is allowed and the scan engine is only reading UPC or EAN, **reading response will decrease.**

Transfer Data Format (EAN/JAN-8 Add-On 2 Digits)

| | | |
|---------------|------------|-----------------|
| Data 7 digits | CD 1 digit | Add-on 2 digits |
|---------------|------------|-----------------|

Transfer Data Format (EAN/JAN-8 Add-On 5 Digits)

| | | |
|---------------|------------|-----------------|
| Data 7 digits | CD 1 digit | Add-on 5 digits |
|---------------|------------|-----------------|

EAN/JAN -8 CD Transfer

Use this command to determine whether to transfer EAN/JAN-8 CD (check digit).

EAN/JAN-13 Optional Settings

| Symbologies | Item | Command | Description | Default |
|-----------------|-----------------|----------------------|--|---|
| EAN/JAN-13 | CD Transmission | 6K | Transmit EAN/JAN -13 CD | ✓ |
| | | 6J | Do not transmit EAN/JAN-13 CD | |
| | Add-on 2 digits | JH | Singly enable EAN/JAN -13 Add-on 2 digits | |
| | | JV | Add enable EAN/JAN -13 Add-on 2 digits | |
| | | [X4N | Disable EAN/JAN -13 Add-on 2 digits | |
| | Add-on 5 digits | JL | Singly enable EAN/JAN -13 Add-on 5 digits | |
| | | JW | Add enable EAN/JAN -13 Add-on 5 digits | |
| | | [X4P | Disable EAN/JAN -13 Add-on 5 digits | |
| | EAN -13 | EAN-13 Forced add-on | -G | When EAN-13 starts at 378/379/529; enable EAN forced add-on |
| -H | | | When EAN-13 starts at 378/379/529; disable EAN forced add-on | ✓ |
| -C | | | When EAN-13 starts at 434/439/414/419/977/978; enable EAN forced add-on | |
| -D | | | When EAN-13 starts at 434/439/414/419/977/978; disable EAN forced add-on | ✓ |
| ISBN Conversion | | IB | Disable ISBN conversion | ✓ |
| | | IA | Enable ISBN conversion | |
| | | IK | When possible, enable ISBN conversion | |
| ISSN Conversion | | HN | Disable ISSN conversion | ✓ |
| | | HO | Enable ISSN conversion | |
| | | 4V | When possible, enable ISSN conversion | |
| ISMN Conversion | | IO | Disable ISMN conversion | ✓ |
| | | IP | Enable ISMN conversion | |
| | | IQ | When possible, enable ISMN conversion | |

EAN/JAN-8 Optional Settings

| Symbologies | Item | Command | Description | Default |
|-------------|-----------------|---------|---|---------|
| EAN/JAN-8 | CD Transmission | 6I | Transmit EAN/JAN-8 CD | ✓ |
| | | 6H | Do not transmit EAN/JAN-8 CD | |
| | Add-on 2 digits | JB | Singly enable EAN/JAN-8 Add-on 2 digits | |
| | | JP | Add enable EAN/JAN-8 Add-on 2 digits | |
| | | [X4M | Disable EAN/JAN-8 Add-on 2 digits | |
| | Add-on 5 digits | JC | Singly enable EAN/JAN-8 Add-on 5 digits | |
| | | JQ | Add enable EAN/JAN-8 Add-on 5 digits | |
| | | [X4O | Disable EAN/JAN-8 Add-on 5 digits | |

6.3.3 Code 39 and It. Pharm

Code 39 is a bar code developed by Intermec and has been standardized as ISO/IEC 16388. It is mainly used in the industrial fields.



CODE39

Code 39 Configurations

| Item | Overview |
|-----------------|--|
| Character set | Numeric (0 - 9) Symbol (-, Space \$ / + %) Alphabet (A to Z) |
| Start/Stop code | * |
| Digits | Variable length |

Transfer Data Format

| | | | |
|-------------------|----------------------|----|------------------|
| Start code “*” | Data Variable length | CD | Stop code “*” |
|-------------------|----------------------|----|------------------|

Calculate Code 39 CD

This command determines whether to check the CD (check digit) is configurable.

Transfer Code 39 CD

Whether to transfer CD (check digit) or not is configurable.

Transfer Code 39 Start/Stop Code

Whether to transfer Start/Stop code or not is configurable.

Code 39 Conversion Settings

| Setting | Description |
|--------------------------------------|---|
| Standard Code 39 | Sends the data character as is. |
| Full ASCII Code 39 | Converts the correct combination of the data character to Full ASCII and transmits it. If an incorrect combination is found in the character, it will not be transmitted. |
| When Possible Full ASCII Code 39 | Converts the specified combination of the data character to Full ASCII and transmits it. If a combination is incorrect, it will be transmitted without converting, as is. |
| Italian Pharmaceutical | Converts Code 39 data to Italian Pharmaceutical format. Italian Pharmaceutical format is fixed length containing 1 digit of mandatory check digit after 8 digits of numeric data. When not converting to Italian Pharmaceutical, the bar code will not be sent. |
| When Possible Italian Pharmaceutical | Convert Code 39 data to Italian Pharmaceutical format. When not converting to Italian Pharmaceutical, the bar code will be sent as standard Code 39. |

Code 39/It. Pharm Optional Settings

| Item | Command | Description | Default |
|-----------------------|---------|---|---------|
| CD check | C1 | Do not check CD | ✓ |
| | C0 | Check CD | |
| CD transmission | D9 | Transmit Code 39 CD | ✓ |
| | D8 | Do not transmit Code 39 CD | |
| ST/SP transmission | D1 | Do not transmit ST/SP | ✓ |
| | D0 | Transmit ST/SP | |
| Full ASCII conversion | D5 | Normal Code 39 | ✓ |
| | D4 | Full ASCII Code 39 | |
| | +K | Full ASCII Code 39 if possible | |
| It. Pharm | D6 | It. Pharmaceutical only | |
| | D7 | It. Pharmaceutical if possible | |
| | DA | Do not transmit leading A for It. Pharm | ✓ |
| | DB | Transmit leading A for It. Pharm | |
| Concatenation | +M | Disable concatenation | ✓ |
| | +L | Enable concatenation | |

6.3.4 Codabar

Codabar is a relatively early-stage bar code developed by Monarch Marking Company in 1972, following 2 of 5.



Codabar Configurations

| Item | Overview |
|-------------------------------|--|
| Character set | Numeric (0 - 9) Symbol (- \$: / , +) |
| Start/Stop code | A, B, C, or D |
| Digits | Variable length |
| CD (check digit) check method | Check digits are generally not often used. |

Transfer Data Format

| | | | |
|--------------------|----------------------|----|------------------|
| Start code 1 digit | Data Variable length | CD | Stop code 1digit |
|--------------------|----------------------|----|------------------|

Codabar (NW-7) Read Mode

| Mode | Description |
|---------------|--|
| Standard mode | Consists of 1 bar code. |
| ABC mode | Acronym for the American Blood Commission. This mode consists of 2 side-by-side bar codes. (Margin is necessary.) When the bar code's first stop character and the second start character is D, it will be concatenated and sent. Two D characters will not be sent. |
| CX mode | Consists of 2 side-by-side bar codes. (Margin is necessary.) When the bar code's first stop character is C and the second start character is B, it will be concatenated and sent. B and C characters will not be sent. |

Codabar CD Check

In Codabar, Modulus 16 is generally used.

Codabar CD Transfer

Determines if transferring the CD (check digit) is configurable.

Start / Stop Code Transfer

Determines if transferring the start/stop code is configurable. It can also convert the code and transfer when transferring the start/stop code.

Codabar Optional Settings

| Item | Command | Description | Default |
|--------------------|---------|--|---------|
| CD check | H7 | Do not check CD | ✓ |
| | H6 | Check CD | |
| CD transmission | H8 | Transmit Codabar CD | ✓ |
| | H9 | Do not transmit Codabar CD | |
| ST/SP transmission | F0 | Do not transmit Start/Stop code | ✓ |
| | F1 | Start/Stop code: ABCD/TN*E | |
| | F2 | Start/Stop code: abcd/tn*e | |
| | F3 | Start/Stop code: ABCD/ABCD | |
| | F4 | Start/Stop code: abcd/abcd | |
| | HJ | Start/Stop code: <DC1><DC2><DC3><DC4> /<DC1><DC2><DC3><DC4> | |
| Space insertion | HE | Disable space insertion | ✓ |
| | HD | Enable space insertion | |
| ABC, CX conversion | HA | Enable only Codabar normal mode | ✓ |
| | H4 | Enable only ABC code | |
| | H5 | Enable only CX code | |
| | H3 | Enable Codabar/ABC and CX | |

6.3.5 Interleaved 2 of 5 and S-Code

Interleaved 2 of 5 is a symbol standardized by ISO/IEC 16390 as the standard distribution symbol ITF.



Interleaved 2 of 5 Configurations

| Item | Overview |
|-------------------------------|-------------------------------|
| Character set | Numeric (0 - 9) |
| Start/Stop code | Hidden character |
| Digits | Variable length (even number) |
| CD (check digit) check method | Modulus 10/Wait 3 |

Transfer Data Format

| | |
|----------------------|----|
| Data variable length | CD |
|----------------------|----|

Interleaved 2 of 5 CD Check

Determines if checking the CD (check digit) is configurable. This setting also configures whether to check Interleaved 2 of 5, Industrial 2 of 5, S-Code, and Matrix 2 of 5 CD.

Interleaved 2 of 5 CD Transmit

Determines if transferring the CD (check digit) is configurable. This setting also configures whether to transfer Interleaved 2 of 5, Industrial 2 of 5, S-Code, and Matrix 2 of 5 CD.

Industrial 2 of 5 Space Check

Determines whether to enable/disable the space (inter-character gap) check of Industrial 2 of 5.

Interleaved 2 of 5 and Industrial 2 of 5 Optional Settings

| Code | Item | Command | Description | Default |
|--------------------|-------------------|---------|--|---------|
| | CD check | G0 | Do not check CD | ✓ |
| | | G1 | Check CD | |
| Interleaved 2 of 5 | CD transmission | E0 | Transmit CD | ✓ |
| | | E1 | Do not transmit CD | |
| S-Code | Space check | GK | Disable space check for Industrial 2 of 5 | |
| | | GJ | Enable space check for Industrial 2 of 5 | ✓ |
| | S-Code conversion | GH | Do not transmit S-Code as Interleaved 2 of 5 | ✓ |
| | | GG | Transmit S-Code as Interleaved 2 of 5 | |

6.3.6 Code 128

Code 128 was developed by Computer Identix Inc. in the USA in 1981. Code 128 is a symbol standardized as USS-CODE128. Because it can encode ASCII128 characters, it is called Code 128.



0135792468

Code 128 Configurations

| Item | Overview |
|-------------------------------|---|
| Character set | ASCII128 character Function character (FNC1 – 4) Code set selection character (A, B, C and Shift) |
| Start/Stop code | Hidden character Start pattern 3 types (A,B and C), Stop pattern 1type |
| Digits | Variable length |
| CD (check digit) check method | Modulus 103 |

Transfer Data Format

| |
|------------------------|
| Data (variable length) |
|------------------------|

GS1 Conversion

You can disable or enable GS1-128 GS1 conversion. For more information, see section [6.2.1: GS1 Convert](#).

Concatenation of Code 128

When Code 128 data has a leading FNC2 character, you cannot concatenate the data. To concatenate the data, you need to omit the leading FNC2.

When the scan engine reads a bar code that does not contain the leading FNC2 character, it concatenates the data to the end of the data that is buffering to the scan engine and sends the entire buffer.

The reading time is updated each time a label is read. If the reading is not completed within the reading time, the buffered data will be discarded.

A maximum of 400 characters can be concatenated.

Code 128 Optional Settings

| Item | Command | Description | Default |
|----------------|---------|----------------------------|---------|
| GS1 conversion | OF | Disable GS1-128 | ✓ |
| | JF | Enable GS1-128 only | |
| | OG | Enable GS1-128 if possible | |
| Concatenation | MP | Disable concatenation | ✓ |
| | MO | Enable concatenation | |

6.3.7 IATA

The standards for bar codes and magnetic stripes on boarding passes are published by the International Air Transport Association (IATA).

IATA Settings

| Item | Command | Description | Default |
|-----------------|---------|--------------------|---------|
| CD check | 4H | Do not check CD | ✓ |
| | 4I | Check FC/SN only | |
| | 4J | Check FC/CPN/SN | |
| | 4K | Check FC/CPN/AC/SN | |
| CD transmission | 4M | Do not transmit CD | |
| | 4L | Transmit CD | ✓ |

6.3.8 MSI/Plessey

MSI/Plessey is a numeric-only, variable-length symbology that is a variant of Plessey Code, which was originally developed by the Plessey Company of England in 1971. This bar code is used on shelves in supermarkets, as well as warehouses and other storage facilities for inventory purposes.

MSI/Plessey Settings

| Item | Command | Description | Default |
|-----------------|---------|----------------------------|---------|
| CD check | 4A | Do not check CD | |
| | 4B | Check 1 CD = MOD 10 | ✓ |
| | 4C | Check 2 CD = MOD 10/MOD 10 | |
| | 4D | Check 2 CD = MOD 10/MOD 11 | |
| | 4R | Check 2 CD = MOD 11/MOD 10 | |
| | 4S | Check 2 CD = MOD 11/MOD 11 | |
| CD transmission | 4G | Do not transmit CD | |
| | 4E | Transmit CD 1 | ✓ |
| | 4F | Transmit CD 1 and CD 2 | |

6.3.9 UK/Plessey

UK/Plessey Code, originally developed by the Plessey Company of England in 1971 is a continuous, variable-length symbology that is used to encode hexadecimal data.

UK/Plessey Settings

| Item | Command | Description | Default |
|-----------------|---------|---------------------------|---------|
| CD transmission | 4O | Not transmit CD | |
| | 4N | Transmit CD | ✓ |
| Space insertion | DO | Disable space insertion | ✓ |
| | DN | Enable space insertion | |
| X conversion | DP | Conversion A -> X disable | ✓ |
| | DQ | Conversion A -> X enable | |

6.3.10 Telepen

Telepen is designed to express all 128 ASCII characters without using shift characters for code switching, and using only two different widths for bars and spaces.

Telepen Settings

| Item | Command | Description |
|------------------------|--------------|--------------|
| Conversion output mode | D2 (default) | Numeric mode |
| | D3 | ASCII mode |

6.3.11 Code 11

Code 11 was developed by Intermecc in 1977 and is primarily used in telecommunications.

Code 11 Settings

| Item | Command | Description | Default |
|-----------------|---------|----------------------|---------|
| CD check | BLF | Do not check CD | |
| | BLG | Check 1CD | |
| | BLH | Check 2CD | |
| | BLI | Check auto 1 or 2 CD | ✓ |
| CD transmission | BLJ | Do not transmit CD | ✓ |
| | BLK | CD transmit | |

6.3.12 Korean Postal Authority

The Korean Postal Authority bar code encodes a 6-digit Zip code plus a mod 10 check digit.

Korean Postal Authority Settings

| Item | Command | Description | Default |
|---------------------|---------|------------------------------|---------|
| CD transmission | *+ | CD transmit | |
| | *- | Do not transmit CD | ✓ |
| Transmit dash | *. | Transmit dash | ✓ |
| | */ | Do not transmit dash | |
| Upside-down reading | *9 | Upside-down reading enabled | |
| | *8 | Upside-down reading disabled | ✓ |

6.3.13 GS1 DataBar

GS1 DataBar (formerly RSS) is a relatively new bar code, developed close to GS1 and standardized by ISO/IEC 24724:2011. It has 3 types and 7 kinds. GS1 DataBar can hold information in a smaller space and is often used to label fresh foods.



GS1 DataBar Configuration

| Item | Overview |
|---------------|---|
| Character set | GS1 DataBar Omnidirectional and GS1 DataBar Limited: Numeric (0 - 9) GS1 DataBar Expanded: capital/small character alphabet, numbers, 20 types symbol, function character (FNC1) |
| Digits | GS1 DataBar Omnidirectional and GS1 DataBar Limited: Application identifier "01" and 14 digits GS1 DataBar Expanded: number 74 digits and alphabet 41 digits |
| Check sum | Check sum is always checked, but not sent. GS1 DataBar Omnidirectional: Modulus 79 GS1 DataBar Limited: Modulus 89 GS1 DataBar Expanded: Modulus 211 |
| CD check | GS1 DataBar Omnidirectional and GS1 DataBar Limited: Modulus 10/ Wait 3 |

Transfer Data Format (GS1 DataBar Omnidirectional and GS1 DataBar Limited)

| | | |
|---------|------------------|--------------|
| AI "01" | Data (13 digits) | CD (1 digit) |
|---------|------------------|--------------|

Transfer Data Format (GS1 DataBar Expanded)

| |
|----------------------|
| Data (1 - 74 digits) |
|----------------------|

GS1 Conversion

You can disable or enable GS1 DataBar's GS1 conversion. For more information, see section [6.2.1: GS1 Convert](#).

6.3.14 Composite GS1 DataBar

Composite GS1 DataBar is a bar code developed by GS1 for medical use and standardized by ISO/IEC 24723. The 2D bar code symbol is included above a GS1 DataBar, GS1-128 or UPC/EAN to encode additional data.

(17) 201607 (10) ABCCA

 (01) 1 4512345 67890 3

Composite GS1 DataBar Configuration

| Item | Overview |
|------------------|--|
| Character set | ASCII value 0 - 127 (ISO 646) ASCII value 128 - 255 (ISO 8859, Alphabet No.1, Extend ASCII) Using ECI: many other character sets |
| Composite | CC-A is a revised version of MicroPDF417. CC-B is normal MicroPDF417. CC-C is normal PDF417. |
| Maximum digits | CC-A: 56 characters CC-B: 338 characters CC-C: 2361 characters |
| Symbol size | 1D part: refer to GS1 DataBar and UPC/EAN Composite part: CC-A and CC-B are the same as MicroPDF417. CC-C is the same as PDF417. |
| Error correction | 1D part: error detection only Composite part: Reed Solomon error correction |
| Link flags | GS1 DataBar and GS1-128 composite have link flags. UPC/EAN composite does not have link flags. |

Transfer Data Format (CC-A)

| | |
|-------------------------|--------------------------------|
| 1D data (1 – 74 digits) | Composite data (1 – 56 digits) |
|-------------------------|--------------------------------|

Transfer Data Format (CC-B)

| | |
|-------------------------|---------------------------------|
| 1D data (1 – 74 digits) | Composite data (1 – 338 digits) |
|-------------------------|---------------------------------|

Transfer Data Format (CC-C)

| | |
|-------------------------|----------------------------------|
| 1D data (1 – 74 digits) | Composite data (1 – 2361 digits) |
|-------------------------|----------------------------------|

GS1 Conversion

You can disable or enable Composite GS1 DataBar conversion. For more information, see section [6.2.1: GS1 Convert](#).

6.3.15 PDF417

PDF417 is a stacked linear barcode developed by Symbol Technologies, and is standardized by ISO/IEC 15438:2006. PDF417 is used for international logistics, ID cards (overseas), and parts labelling.



PDF417 sample



Micro PDF417 sample

PDF417 Configurations

| Item | Overview |
|--------------------------------|---|
| Character set | ASCII value 0 – 127 (ISO 646) ASCII value 128 – 255 (ISO 8859-1, Alphabet No.1, Extended ASCII) For Macro PDF417: many other character sets |
| Maximum digits (PDF417) | Text compression: 1850 characters Byte compression: 1108 characters Numeric compression: 2710 characters |
| Maximum digits (MicroPDF417) | Text compression: 250 characters Byte compression: 150 characters Numeric compression: 366 characters |
| Symbol size (PDF417) | Number of lines: 3 - 90 Number of rows: 1 - 30 |
| Symbol size (MicroPDF417) | Number of lines: 4 - 44 Number of rows: 1 - 4 |
| Error correction (PDF417) | Error correction level 8. The option for error detection only. |
| Error correction (MicroPDF417) | Number of code words for error correction is fixed by the symbol and cannot be changed. |

Transfer Data Format

| |
|------------------------|
| Data (variable length) |
|------------------------|

MicroPDF417

For MicroPDF417, the default is not valid. To enable the setting, see section [6.1.5: 2D Codes](#).

6.3.16 QR Code

QR code is a matrix type 2D code developed by DENSO WAVE INC. and is standardized to ISO/IEC 18004:2000. QR code supports high-speed reading and is used in a wide range of fields.



QR Code

QR Code Configurations

| Item | Overview |
|-----------------------------------|--|
| Character set | Numeric data (Numbers 0-9) Alphanumeric data (Numbers 0-9, Capital letters A-Z, 9 special characters: space, \$, %, *, +, -, ., /, :) 8-bit byte data (Latin characters based on JIS X 0201, character set of 8-bit code for Katakana characters.) Chinese characters (Character specified by the shift-coded expression of JIS X 0208) |
| Maximum digits | Alphanumeric data: 4296 characters 8 bit data: 2953 characters Numeric data: 7089 characters Chinese character data: 1817 characters |
| Symbol size | Minimum: 21 x 21 module Maximum: 177 x 177 module |
| Error correction | Reed Solomon error correction level 4, L:7% M:15% Q:25% H:30% |
| Negative barcode, mirror printing | Negative and mirror printed QR code is readable. |
| Concatenated code | Outputs after reading all concatenated codes. |

Transfer Data Format

| |
|------------------------|
| Data (variable length) |
|------------------------|

GS1 Conversion

You can disable or enable GS1 QR code conversion. For more information, see section [6.2.1: GS1 Convert](#).

ECI Protocol Output

You can enable or disable output of QR code ECI protocol data. For more information, see section [6.2.6: ECI Protocol Output](#).

Micro QR Code

Micro QR code is a variant of QR code. Micro QR codes have a restricted size and capacity to limit the data.



Micro QR

Micro QR Code Configurations

| Item | Overview |
|-----------------------------------|---|
| Character set | Numeric data (numbers 0-9) Alphanumeric data (numbers 0-9, capital characters A-Z, 9 special characters: space, \$, %, *, +, -, ., /, :) 8-bit byte data (Latin character based on JIS X 0201, character set of 8-bit code for Katakana character.) Chinese characters (Character specified by the shift-coded expression of JIS X 0208) |
| Maximum digits | Alphanumeric data: 21 characters 8-bit data: 15 characters Numeric data: 35 characters Chinese character data: 9 characters |
| Symbol size error correction | Version M1: 11 x 11 module – Error detection only Version M2: 13 x 13 module – Reed Solomon error correction 2 steps (L, M) Version M3: 15 x 15 module – Reed Solomon error correction 2 steps (L, M) Version M4: 17 x 17 module – Reed Solomon error correction 3 steps (L, M, Q) |
| Negative barcode, mirror printing | Negative and mirror printed QR codes are readable. |

Transfer Data Format

| |
|------------------------|
| Data (variable length) |
|------------------------|

6.3.17 Data Matrix

Data Matrix is a matrix type 2D code developed by Idymatrix Corporation and is standardized in ISO/IEC 16022. Data Matrix has an L-shaped finder and a symbol capable of miniaturizing. It is mainly used for industrial purposes but is used in a wide range of fields at overseas.



Data Matrix RectangleMatrixCode

Data Matrix Configurations

| Item | Overview |
|------------------------------------|---|
| Character set | ASCII value 0 – 127 (ISO 646) ASCII value 128 – 255 (ISO 8859-1, Alphabet No.1, Expand ASCII) Using ECI: many other character sets |
| Maximum digits (ECC200 square) | Alphanumeric data: 2335 characters 8-bit data: 1556 characters Numeric data: 3116 characters |
| Maximum digits (ECC200 rectangle) | Alphanumeric data: 98 characters 8-bit data: 47 characters Numeric data: 72 characters |
| Symbol size (ECC200) | Even rows and even columns, square or rectangle. Square: minimum 10 x 10, maximum 144 x 144 module Rectangle: minimum 8 x 18, maximum 16 x 48 module (6 patterns) |
| Error correction (ECC200) | Set automatically. |
| Negative bar code, mirror printing | Negative and mirror printed Data Matrix are readable. |

Transfer Data Format

| |
|------------------------|
| Data (variable length) |
|------------------------|

ECC 000-140

You can enable or disable (default) ECC 000-140.

GS1 Conversion

You can disable or enable GS1 Data Matrix conversion. For more information, see section [6.2.1: GS1 Convert](#).

ECI Protocol Output

You can enable or disable output of Data Matrix ECI protocol. For more information, see section [6.2.6: ECI Protocol Output](#).

6.3.18 Aztec Code

Aztec Code is a matrix type 2D code developed by Welch Allyn Company. Aztec Code has a fender in the center of the code and does not require a quiet zone. Aztec Code is mainly used for tickets and in the medical industry.



Aztec code

Aztec Code Configurations

| Item | Overview |
|--------------------------|--|
| Character set | ASCII value 0 – 127 (ISO 646) ASCII value 128 – 255 (ISO 8859-1, Alphabet No.1, Expand ASCII) Using ECI: many other character sets |
| Maximum number of digits | Alphanumeric data: 3067 characters Number: 3832 characters Byte: 1914 characters |
| Symbol size | Minimum: 15 x 15 module Maximum: 151 x 151 module |
| Error correction | The selectable error correction level is 5% to 95% of the data area. |

Transfer Data Format

| |
|------------------------|
| Data (variable length) |
|------------------------|

ECI Protocol Output

You can enable or disable output of Aztec Code ECI protocol. For more information, see section [6.2.6: ECI Protocol Output](#).

6.4 Setting Number of Characters

To read fixed-length bar codes, you should configure the scan engine for the fixed number of characters. The scan engine will verify that codes read are of the correct length and reject codes that do not have the specified length. The advantage of setting a fixed length is that it provides protection against spurious short scans of codes, which is possible with code types that do not provide sufficient security against partial scans (e.g. Interleaved 2 of 5). The length checking is done on the code data and is not affected by options such as (do not) transmit start/stop character or check digit. Setting the number of characters does not affect fixed-length codes, such as EAN-13.

6.4.1 Fixed Length ON, Minimum/Maximum Length for Selected Codes

This option enables fixed length and minimum/maximum length checking for each code type and will only affect the specified code types.

Fixed-Length Configuration Commands

| Command | | Description | Default (valid range) | | |
|--|--|---|-----------------------|----|----|
| Specify Code | Input length of digits | Fixed length for selected codes Length: (1000a+100b+10c+d) | (0 - 8000) | | |
| See section 6.4.2: Command List: Fixed Length ON/Minimum/Maximum Length. | <table border="1"> <tr> <td>Qa</td> <td>Qb</td> <td>Qc</td> <td>Qd</td> </tr> </table> | | | Qa | Qb |
| Qa | Qb | Qc | Qd | | |

Fixed-Length Configuration Examples

| Example | Command |
|--|-------------------------------|
| Fix Code 39 length to 6 digits | <ESC>[DC1Q6<CR> |
| Fix Code 39 length to 6 digits and 12 digits | <ESC>[DC1Q0Q0Q0Q6Q0Q0Q1Q2<CR> |
| Fix Code 39 length to 6 digits and Interleaved 2 of 5 to 12 digits | <ESC>[DC1Q6[DC4Q1Q2<CR> |
| Clear fixed length for Code 39 | <ESC>[DC1<CR> |
| Set minimum length for Interleaved 2 of 5 to 4 digits | <ESC>[DB4Q4<CR> |
| Clear minimum length for Interleaved 2 of 5 | <ESC>[DB4<CR> |
| Set maximum length for Code 39 to 12 digits | <ESC>[DA1Q1Q2<CR> |
| Clear max length for Code 39 | <ESC>[DA1<CR> |
| Set max length for PDF417 to 20 digits and QR code 125 digits | <ESC>[DALQ2Q0[DAJQ1Q2Q5<CR> |

6.4.2 Command List: Fixed Length ON/Minimum/Maximum Length

To set the length of each bar code, enter the appropriate command followed by the value of the length of each code. When you reset the settings, the length currently set becomes the default.

Fixed Length Commands

| Code Type | Fixed Length | Min Length | Max Length |
|----------------------------|--------------|------------|------------|
| Reset settings | [DC0 | [XQG | [XNG |
| Code 39 | [DC1 | [DB1 | [DA1 |
| Codabar | [DC2 | [DB2 | [DA2 |
| Industrial 2 of 5 | [DC3 | [DB3 | [DA3 |
| Interleaved 2 of 5 | [DC4 | [DB4 | [DA4 |
| Code 93 | [DCD | [DBD | [DAD |
| Code 128 | [DCB | [DBB | [DAB |
| MSI/Plessey | [DC8 | [DB8 | [DA8 |
| IATA | [DC7 | [DB7 | [DA7 |
| PDF417 | [DCL | [DBL | [DAL |
| QR code | [DCJ | [DBJ | [DAJ |
| Data Matrix | [DCH | [DBH | [DAH |
| Dot Code | [DCU | [DBU | [DAU |
| Maxi code | [DCK | [DBK | [DAK |
| Aztec code | [DCI | [DBI | [DAI |
| MicroPDF417 | [DCM | [DBM | [DAM |
| RSS-Expanded (GS1 DataBar) | [DCF | [DBF | [DAF |
| Composite | [DCG | [DBG | [DAG |
| GS1-128 | [DCC | [DBC | [DAC |
| S-Code | [DC5 | [DB5 | [DA5 |
| UK/Plessey | [DCA | [DBA | [DAA |
| Matrix 2 of 5/Chinese Post | [DC6 | [DB6 | [DA6 |
| Telepen | [DC9 | [DB9 | [DA9 |
| Codablock F | [DCO | [DBO | [DAO |
| Code 11 | [DCE | [DBE | [DAE |
| Chinese Sensible Code | [DCN | [DBN | [DAN |

7 String Options

This chapter describes changes that can be made to the transmitted data string.

7.1 Case Conversion

7.2 Prefix/Suffix

7.1 Case Conversion

Decoded data may be converted to either all lower case or all upper case, or the case may be exchanged. These options may be used if the host requires upper or lower case characters only.

Upper Case/Lower Case Conversion Examples

| Description | AbCd |
|------------------------------|------|
| No case conversion (default) | AbCd |
| Convert to upper case | ABCD |
| Convert to lower case | abcd |
| Exchange case | aBcD |

Upper Case/Lower Case Conversion Commands

| Command | Description |
|--------------|-----------------------|
| YZ (default) | No case conversion |
| YW | Convert to upper case |
| YX | Convert to lower case |
| YY | Exchange case |


7.2 Prefix/Suffix (Appending Character Function)

Additional functions can place informational characters just before the decoded data (pre-data) or be transmitted immediately after the data (post-data).

Output Format:

- Prefix/suffix (up to 4 digits). Specified characters can be added in front of or at the end of the data for each specific symbology. By default, the prefix is empty and the suffix of all codes is a "CR" character. Prefix/suffix cannot be set when using OCR Free Edit or Data Edit Reading. For more information, see sections [6.2.7: OCR Free Edit](#) and [8.5.2: Data Edit Reading](#).
- Preamble/Postamble (up to 8 digits). Specified characters can be added in front of or at the end of the data for all codes. By default, the prefix and suffix are empty.

| Preamble | Prefix for Each Code | Decoded Data | Suffix (*1) for Each Code | Postamble |
|--------------|----------------------|--------------|---------------------------|--------------|
| Max 8 digits | Max 4 digits | | Max 4 digits | Max 8 digits |

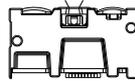

Note: By default, <CR> is added to the suffix with all codes "RZ" command.

Program Values

| Value | Description |
|--|---|
| ASCII (See section 7.2.3: ASCII Prefix/Suffix Values) | All 128 characters. |
| Code identification | The code identification is transmitted in OPTICON ID, ISO15424 standard, or AIM-ID. |
| Code length | The code length is the number of characters after the output format that is configured with options in section 6.3: Setting Code Specific Options . |
| Code coordinate | The code coordinate is transmitted as the pixel coordinate of the image sensor. |
| Code tilt angle | The tilt angle of the read code can be added to the prefix and suffix. |
| Scan time | The scan time is the time from the trigger pull until the data output starts. |
| Bank Number | The current operating bank number can be added to the prefix and suffix. |

7.2.1 Set Prefix/Suffix

To add a Prefix/Suffix, use the Prefix/Suffix commands. You can also set a Prefix/Suffix with a menu bar code or 2D menu code.

Notes:

- The prefix and suffix setting commands clear the current values and configure new ones. The default suffix CR is also cleared.
- To clear the default suffix CR, scan the RZ menu code (set suffix for all codes) without codes for the suffix or the PR menu code (clear suffix).
- When the number of configured prefix/suffix characters exceeds the maximum limit (4 digits), the configuration will be ignored.

Prefix/Suffix Commands

| Command | | | Description | Default |
|---|------------------|-----------------------|--------------------------------|---|
| Set Commands | Value Commands | See Section | Set character to Prefix/Suffix | All codes Suffix USB-HID: "Enter" USB-COM: "CR" UART: "CR" |
| See section 7.2.2: Prefix/Suffix Settings . | ASCII | 7.2.3 | | |
| | Code ID | 7.2.4 | | |
| | Code Length | 7.2.5 | | |
| | Code Coordinates | 7.2.6 | | |
| | Code Tilt Angle | 7.2.7 | | |
| | Scan Time | 7.2.8 | | |
| | Bank Number | 7.2.9 | | |

Example: To set "C39:" as the prefix and "CR" and "LF" as the suffix for Code 39, set this command:
<ESC>M40CQ3Q96AO41M1J<CR>

7.2.2 Prefix/Suffix Settings

All Codes Prefix/Suffix

| Prefix Command | Suffix Command |
|----------------|----------------|
| RY | RZ |

Note: By default, “CR” (“Enter” for USB-HID) is added to the suffix of all bar codes. To clear “CR” or “Enter”, send the “RZ” command only.

Individual Bar Code Prefix/Suffix Commands

| Bar Code | Prefix Command | Suffix Command |
|----------------------------|----------------|----------------|
| UPC-A | N1 | N6 |
| UPC-A add-on | M0 | O0 |
| UPC-E | N2 | N7 |
| UPC-E add-on | M1 | O1 |
| EAN-13 | N3 | N8 |
| EAN-13 add-on | M2 | O2 |
| EAN-8 | N4 | N9 |
| EAN-8 add-on | M3 | O3 |
| Code 39 | M4 | O4 |
| Tri-optic | MC | PN |
| Codabar | M5 | O5 |
| Industrial 2 of 5 | M6 | O6 |
| Interleaved 2 of 5 | M7 | O7 |
| S-Code | MB | OB |
| Matrix 2 of 5 | GL | GM |
| Chinese Post Matrix 2 of 5 | | |
| IATA | I8 | I9 |
| MSI/Plessey | N0 | N5 |
| Telepen | L8 | L9 |
| UK/Plessey | MA | OA |
| Code 128 | M9 | O9 |
| GS1-128 | [XMX | [XOX |
| Code 11 | [BLD | [BLE |
| Korean Postal Authority | *\$ | *% |

Individual Bar Code Prefix/Suffix Commands (continued)

| Bar Code | Prefix Command | Suffix Command |
|-----------------------------|----------------|----------------|
| Intelligent Mail Barcode | [D5I | [D5J |
| POSTNET | [D6D | [D6E |
| PLANET | [DG5 | [DG6 |
| Japan Postal | [D5S | [D5T |
| Netherlands Kix Code | [D5N | [D5O |
| UK Postal (Royal Mail) | [DGA | [DGB |
| 4-state Mailmark barcode | [DGV | [DGW |
| Australian Postal | [D6P | [D6Q |
| GS1 DataBar | OE | PQ |
| GS1 DataBar | [D6J | [D6G |
| GS1 DataBar Limited | [D6K | [D6H |
| GS1 DataBar Expanded | [D6L | [D6I |
| GS1 Composite code | RR | RS |
| Codablock F | [D4S | [D4T |
| Data Matrix | MD | PO |
| Dot Code | [DOF | [DOG |
| Aztec | [BF0 | [BF1 |
| Chinese Sensible Code | [D4N | [D4O |
| QR Code | MK | PW |
| Maxi Code | ML | PX |
| PDF417 | OC | PY |
| MicroPDF417 | OD | PZ |
| Machine Readable Passports | [DJJ | [DJP |
| Machine Readable Visas-A | [DJK | [DJQ |
| Machine Readable Visas-B | [DJL | [DJR |
| Official Travel Documents 1 | [DJM | [DJS |
| Official Travel Documents 2 | [DJN | [DJT |
| ISBN | [DJO | [DJU |

Preamble/Postamble Commands

| Code | Preamble Command | Postamble Command |
|--------------------|------------------|-------------------|
| Preamble/Postamble | MZ | PS |

7.2.3 ASCII (Prefix/Suffix Values)

| ASCII | Command | ASCII | Command | ASCII | Command | ASCII | Command |
|-------------|---------|-------|---------|-------|---------|-------------------|---------|
| <SPACE > | 5A | A | 0A | a | \$A | ^@ (NULL) | 9G |
| ! | 5B | B | 0B | b | \$B | ^A (SOH) | 1A |
| " | 5C | C | 0C | c | \$C | ^B (STX) | 1B |
| # | 5D | D | 0D | d | \$D | ^C (ETX) | 1C |
| \$ | 5E | E | 0E | e | \$E | ^D (EOT) | 1D |
| % | 5F | F | 0F | f | \$F | ^E (ENQ) | 1E |
| & | 5G | G | 0G | g | \$G | ^F (ACK) | 1F |
| ' | 5H | H | 0H | h | \$H | ^G (BEL) | 1G |
| (| 5I | I | 0I | i | \$I | ^H (BS) | 1H |
|) | 5J | J | 0J | j | \$J | ^I (HT) | 1I |
| * | 5K | K | 0K | k | \$K | ^J (LF) | 1J |
| + | 5L | L | 0L | l | \$L | ^K (VT) | 1K |
| , | 5M | M | 0M | m | \$M | ^L (FF) | 1L |
| - | 5N | N | 0N | n | \$N | ^M (CR) | 1M |
| . | 5O | O | 0O | o | \$O | ^N (SO) | 1N |
| / | 5P | P | 0P | p | \$P | ^O (SI) | 1O |
| : | 6A | Q | 0Q | q | \$Q | ^P (DLE) | 1P |
| ; | 6B | R | 0R | r | \$R | ^Q (DC1) | 1Q |
| < | 6C | S | 0S | s | \$S | ^R (DC2) | 1R |
| = | 6D | T | 0T | t | \$T | ^S (DC3) | 1S |
| > | 6E | U | 0U | u | \$U | ^T (DC4) | 1T |
| ? | 6F | V | 0V | v | \$V | ^U (NAK) | 1U |
| @ | 6G | W | 0W | w | \$W | ^V (SYN) | 1V |
| [| 7A | X | 0X | x | \$X | ^W (ETB) | 1W |
| \ | 7B | Y | 0Y | y | \$Y | ^X (CAN) | 1X |
|] | 7C | Z | 0Z | z | \$Z | ^Y (EM) | 1Y |
| ^ | 7D | 0 | Q0 | | | ^Z (SUB) | 1Z |
| _ | 7E | 1 | Q1 | | | ^[(ESC) | 9A |
| ` | 7F | 2 | Q2 | | | ^ \ (FS) | 9B |
| { | 9T | 3 | Q3 | | | ^] (GS) | 9C |
| | 9U | 4 | Q4 | | | ^^ (RS) | 9D |
| } | 9V | 5 | Q5 | | | ^ _ (US) | 9E |
| ~ | 9W | 6 | Q6 | | | DEL (ASCII127) | 9F |
| | | 7 | Q7 | | | | |
| | | 8 | Q8 | | | | |
| | | 9 | Q9 | | | | |

7.2.4 Code ID

To add Code ID, send the Code ID command after the prefix/suffix setting command.

Code ID Command

| Command | Description | Default |
|---------|---|---------|
| \$2 | Code identification using OPTICON ID | |
| \$1 | Code identification using AIM ID/ ISO 15424 | |

Use one of these methods to add Code ID:

- Use OPTICON Code ID. For more information, see section [10.1.1: Opticon Code ID Prefix/Suffix Values](#).
- AIM/ISO Code ID. For more information, see section [10.1.2: Code Option AIM/ISO15424 Code ID Prefix/Suffix Values](#). The code identifier is transmitted in ISO 15424 format:

]cm

where:

] is ASCII value decimal 93
 c is the code character
 m is modifier character

Example: Add "<OPTICON Code ID>" to the all codes prefix.

Configure with this command:

<ESC>RY\$2<CR>

7.2.5 Code Length

For 1D bar codes, the code length is transmitted as 2 digits, excluding prefix and suffix characters. For 2D bar codes the code length is transmitted as 6 digits. You can also send the length as 6 digits for both 1D and 2D bar codes. These direct input characters count as 1 entry of the 4 permissible entries for a prefix and suffix.

You can add code length by sending a Code Length command after the prefix/suffix setting command.

Code Length Commands

| Command | Description |
|---------|--------------------------------|
| \$3 | Code length (1D/2D: 2/6 digit) |
| \$6 | Code length (1D/2D: 6/6 digit) |

Example: Set the prefix for all codes to <Code length (1D/2D: 2/6 digit)>:

Configure with this command:

<ESC>RY\$3<CR>

8 Read Options

This chapter describes the read options for the scan engine.

- 8.1 Read Modes
- 8.2 Manual Trigger
- 8.3 Auto Trigger
- 8.4 Illumination and Aiming
- 8.5 Batch Reading/Data Edit Function
- 8.6 Tuning Function
- 8.7 Bank Function

8.1 Read Modes

Code reading starts when the trigger signal (TRIGn) is pulled low, when the trigger command ("Z") is received, or when an object is detected while in auto trigger mode.

8.1.1 Read Modes

Read modes includes "single read", "multiple read 1" and "multiple read 2".

Read Mode Commands

| Item | Command | Description |
|---------------|--------------|---|
| Single Read | S0 (default) | Single read in a single trigger |
| Multiple Read | S1 | Multiple read in a single trigger, the scan engine reads the same data. |

8.1.1.1 Single Read


The scan engine starts reading after a trigger pull and continues reading until a bar code is successfully decoded or until the read time expires. For more information, see section [5.6.1: Read Effective Time](#).

8.1.1.2 Multiple Read

The scan engine starts reading after a trigger pull and keeps reading (even after a bar code is successfully decoded) until the read time expires. The same bar code cannot be read twice unless another bar code is read in between or when "Double read reset time" has past.

If the same bar code remains in the same position in the image, the bar code will not be read even if the double read reset time is canceled.

Example: Read multiple codes sequentially with a single trigger pull.

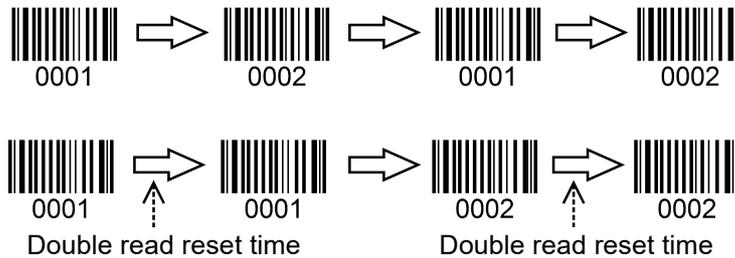

8.2 Auto Trigger

When auto trigger is enabled, the scan engine automatically detects an object in front of it and starts reading.

8.2.1 Normal Auto Trigger

There are two modes for auto trigger

- Presentation auto trigger mode: for applications where the scan engine is fixed and bar codes are presented.
- Handheld auto trigger mode: for applications where the scan engine is not fixed.

Auto Trigger Commands

| Item | Command | Description | Default |
|--------------|---------|-----------------------------------|---------|
| Auto trigger | +F | Disable presentation auto trigger | |
| | +I | Enable presentation auto trigger | ✓ |

8.2.2 Auto Trigger Sensitivity

The detection sensitivity varies with the ambient environment and made need to be adjusted.

Auto Trigger Sensitivity

| Command | Description |
|----------------|-------------|
| [XMF | Sensitive |
| [XMH (default) | Normal |
| [XMJ | Insensitive |

8.2.3 Double Read Reset Time

In auto trigger mode, set the time before the same bar code can be decoded again. When a code with different data is read, this command is reset.

Double Read Reset Time

| Command | | | | | Description | Default (valid range) |
|---------|----|----|----|----|--|--------------------------|
| [D3R | Qa | Qb | Qc | Qd | Double read reset time (1000a+100b+10c+d) [10 ms] | 700 ms (0 - 9999) |

Note: When 0 seconds is set, the same bar code will not be decoded.

8.3 Illumination and Aiming

Warm white illumination for reading and Green LED aiming can be enabled or disabled.

8.3.1 Reading LED Illumination

Warm White LED illumination can be enabled or disabled. You can also set the illumination method and brightness for reading bar codes.

LED Illumination Mode

| Command | Description |
|----------------|--|
| [D39 | LED illumination → Enable |
| [D3A | LED illumination → Disable When illumination is disabled, reading performance may decrease. Reading performance may improve when reading only the code displayed on the LCD screen. |
| [D3B | LED illumination → Automatic switching In this mode, floodlight ON and OFF are alternated. The scan engine remembers the illumination in which a bar code was read and is prioritized for subsequent reading. This function is recommended when reading a target where specular reflection easily occurs. |
| [D3Q (default) | LED illumination → Prevent specular reflection Disable illumination only when specular reflection from the LED illumination occurs and read the bar code. |

9 Indicator Options

This chapter describes the options for Buzzer and Good Read LED.

- 9.1 Buzzer (BUZZERn Signal)
- 9.2 Good Read LED (GR_LEDn Signal)
- 9.3 Good Read Aiming
- 9.4 Indicator in General

9.1 Buzzer (BUZZERn Signal)

BUZZERn controls the buzzer tone and sound pressure with the PWN signal.

9.1.1 Buzzer Loudness

Buzzer loudness is applied to all buzzers.

Buzzer Loudness Commands

| Command | Description |
|--------------|---------------------------|
| T0 (default) | Buzzer loudness : Maximum |
| T1 | Buzzer loudness : Loud |
| T2 | Buzzer loudness : Normal |
| T3 | Buzzer loudness : Minimum |

9.1.2 Good Read Buzzer

The good read buzzer is activated when a bar code is successfully read. The good read buzzer can be disabled or enabled with three types of tones and five durations.

Buzzer Disable/Enable Commands

| Command | Description |
|--------------|----------------|
| W0 | Disable buzzer |
| W8 (default) | Enable buzzer |

Buzzer Duration Commands

| Command | Description |
|--------------|-------------------------|
| W7 (default) | Buzzer duration: 50 ms |
| [EFW | Buzzer duration: 75 ms |
| W4 | Buzzer duration: 100 ms |
| W5 | Buzzer duration: 200 ms |
| W6 | Buzzer duration: 400 ms |

Buzzer Tone Commands

| Command | Description |
|--------------|------------------------------------|
| W1 (default) | Middle frequency buzzer (3000 Hz) |
| W2 | 2 steps buzzer (high - low buzzer) |
| W3 | 2 steps buzzer (low - high buzzer) |

Note: The good read buzzer tone (frequency) can be set with numerical parameters by entering the command followed by a 4-digit numerical command.

Buzzer Tone Frequency Commands

| Command | | | | | Description | Default |
|---------|----|----|----|----|--|-----------------------|
| [DF0 | Qa | Qb | Qc | Qd | Numerical setting of buzzer tone frequency (1000a+100b+10c+d)[Hz] | 3000 Hz (1 - 9999) |

9.1.3 Start-Up Buzzer

The start-up buzzer determines whether the scan engine emits a beep when it is powered on.

Start-Up Buzzer Commands

| Command | Description | Remark |
|--------------|------------------------|------------------------|
| GD (default) | Disable startup buzzer | Enabled only with "Z2" |
| GC | Enable startup buzzer | Enabled only with "Z2" |

9.1.4 Intermediate Buzzer

When one bar code is decoded, an intermediate buzzer sounds to indicate that the bar code had been decoded but has not yet meet the conditions to output data.

For example, if five-codes reading is set in buffer mode, the intermediate buzzer sounds after the decoding of the 1st, 2nd, 3rd, and 4th bar codes. A good read buzzer finally sounds when the last code is decoded and the data is output. Data is not output when the 1st to 4th bar codes are decoded, but reading each code can be confirmed by the intermediate buzzer. When the good read buzzer is disabled, this setting is forcibly disabled.

Intermediate Buzzer Commands

| Command | | Description |
|---------|--------------|-----------------------------|
| [EBY | Q0 | Disable intermediate buzzer |
| | Q1 (default) | Enable intermediate buzzer |

Note: Intermediate buzzer frequency is 5000 Hz (5 KHz), duration 10 ms.

9.2 Good Read LED (GR_LEDn Signal)

You can configure Status LED settings to successfully read bar code. This section assumes that a LED is connected to the GR_LEDn pin. Note that a transistor is required in most cases due to the limited output current that the scan engine can supply through this pin.

9.2.1 Good Read LED

The good read LED lights up after a code was successfully decoded. This can be disabled or set for several durations.

Good Read LED Commands

| Command | Description |
|--------------|----------------------------|
| T4 | Disable indicator |
| [XTH | Indicator duration: 60 ms |
| [XT8 | Indicator duration: 100 ms |
| T5 (default) | Indicator duration: 200 ms |
| T6 | Indicator duration: 400 ms |
| T7 | Indicator duration: 800 ms |

9.3 Indicator in General

You can configure common settings for both buzzer and good read LED.

9.3.1 Indicator Timing

The indicators can be activated after decoding a bar code and before or after transmitting the data.

Indicator Timing Commands

| Command | Description | Remark |
|--------------|--------------------------|---------------------|
| VY (default) | Before data transmission | soon after decoding |
| VZ | After data transmission | |

10 Appendix

This appendix contains useful reference data.

10.1 Code ID Table

10.2 Q-250 Specification Overview

10.3 Sample Codes

10.1 Code ID Table

These Code ID values can be added to the prefix/suffix.

10.1.1 Opticon Code ID Prefix/Suffix Values

| Code | Code ID | Symbology | Code ID |
|------------------------|---------|-----------------------------|---------|
| UPC-A | C | Code 128 | T |
| UPC-A +2 | F | GS1-128 | |
| UPC-A +5 | G | GS1 DataBar | |
| UPC-E | D | CC-A | m |
| UPC-E +2 | H | CC-B | n |
| UPC-E +5 | I | CC-C | l |
| EAN-13 | B | Korean Postal Authority | c |
| EAN-13 +2 | L | Intelligent mail | 0 |
| EAN-13 +5 | M | Postal-TNT, KIX | 1 |
| EAN-8 | A | Japanese postal code | 2 |
| EAN-8 +2 | J | Postnet | 3 |
| EAN-8 +5 | K | Australia postal code | 4 |
| Code 39 | V | US Planet | 6 |
| Code 39 Full ASCII | W | UK Postal (Royal mail) | 7 |
| Italian Pharmaceutical | Y | 4-state Mailmark barcode | 8 |
| Codabar | R | Codablock F | E |
| Codabar ABC | S | Data Matrix | t |
| Codabar CX | f | Dot Code | k |
| Industrial 2 of 5 | O | Aztec | o |
| Interleaved 2 of 5 | N | Aztec Runes | |
| S-Code | g | Chinese Sensible Code | e |
| Matrix 2 of 5 | Q | QR Code | u |
| Chinese Post | w | Micro QR Code | j |
| Code 93 | U | Maxi Code | v |
| IATA | P | PDF417 | r |
| MSI/Plessey | Z | MicroPDF417 | s |
| Telepen | d | ICAO Travel Documents (OCR) | 9 |
| UK/Plessey | a | ISBN and Other OCR Font B | z |
| Code 11 | b | | |

10.1.2 Code Option AIM/ISO15424 Code ID Prefix/Suffix Values

| AIM/ISO15424 Code ID | | | |
|----------------------------|---------|--------------------------|---------|
| Symbology | Code ID | Symbology | Code ID |
| UPC-A |]E0 | UK/Plessey |]P0 |
| UPC-A +2 |]E3 | Code 128 |]C0 |
| UPC-A +5 |]E3 | GS1-128 |]C1 |
| UPC-E |]E0 | Code 93 |]G0 |
| UPC-E +2 |]E3 | Code 11 |]H* |
| UPC-E +5 |]E3 | |]X0 |
| EAN-13 |]E0 | Korean Postal Authority |]X0 |
| EAN-13 +2 |]E3 | Intelligent Mail Barcode |]X0 |
| EAN-13 +5 |]E3 | POSTNET |]X0 |
| EAN-8 |]E4 | GS1 DataBar |]e0 |
| EAN-8 +2 |]E7 | CC-A |]e1 |
| EAN-8 +5 |]E7 | CC-B |]e1 |
| Code 39 |]A* | CC-C |]e1 |
| Code 39 Full ASCII |]A* | GS1 DataBar with CC-A |]e0 |
| Tri-Optic |]X0 | GS1 DataBar with CC-B |]e0 |
| Code 39 lt. Pharmaceutical |]X0 | GS1 DataBar with CC-C |]e0 |
| Codabar |]F* | Codablock F |]O* |
| Codabar ABC |]F* | DataMatrix |]d* |
| Codabar CX |]X0 | Dot Code |]J** |
| Industrial 2 of 5 |]S0 | Aztec |]z* |
| Interleaved 2 of 5 |]I* | |]X0 |
| S-Code |]X0 | QR Code |]Q* |
| Matrix 2 of 5 |]X0 | Micro QR Code |]Q* |
| Chinese Post |]X0 | Maxi Code |]U* |
| IATA |]R* | PDF417 |]L0 |
| MSI/Plessey |]M* | MicroPDF417 |]L0 |
| |]X0 | OCR |]X0 |
| Telepen |]B* | | |

Notes:

* These Code IDs are described differently depend on code type. For more information, see the next table.

** These Code IDs are described differently depend on code type.

| Code Option |]AIM-ID | Code Option |]AIM-ID |
|--|---------|---|---------|
| Code 39 Option AIM/ISO15424 Code ID: A* | | | |
| Normal Code 39 (D5) Do not check CD (C1) Transmit CD (D9) |]A0 | Full ASCII Code 39 (D4) or Full ASCII Code 39 if pos. (+K) Do not check CD (C1) Transmit CD (D9) |]A4 |
| Normal Code 39 (D5) Check CD (C0) Transmit CD (D9) |]A1 | Full ASCII Code 39(D4) or Full ASCII Code 39 if pos. (+K) Check CD (C0) Transmit CD (D9) |]A5 |
| Normal Code 39 (D5) Do not check CD (C1) Do not transmit CD (D8) |]A2 | Full ASCII Code 39(D4) or Full ASCII Code 39 if pos. (+K) Do not check CD (C1) Do not transmit CD (D8) |]A6 |
| Normal Code 39 (D5) Check CD (C0) Do not transmit CD (D8) |]A3 | Full ASCII Code 39 (D4) or Full ASCII Code 39 if pos. (+K) Check CD (C0) Do not transmit CD (D8) |]A7 |
| Codabar Option AIM/ISO15424 Code ID: F* | | | |
| Codabar normal mode (HA) Do not check CD (H7) Transmit CD (H8) |]F0 | Codabar normal mode (HA) Do not check CD (H7) Do not transmit CD (H9) |]F4 |
| Codabar ABC (H4) or (H3) Do not check CD (H7) Transmit CD (H8) |]F1 | Codabar ABC (H4) or (H3) Do not check CD (H7) Do not transmit CD (H9) |]F5 |
| Codabar normal mode (HA) Check CD (H6) Transmit CD (H8) |]F2 | Codabar normal mode (HA) Check CD (H6) Do not transmit CD (H9) |]F6 |
| Codabar ABC (H4) or (H3) Check CD (H6) Transmit CD (H8) |]F3 | Codabar ABC (H4) or (H3) Check CD (H6) Do not transmit CD (H9) |]F7 |
| Interleaved 2 of 5 Option AIM/ISO15424 Code ID: I* | | | |
| Do not check CD (G0) Transmit CD (E0) |]I0 | Do not check CD (G0) Do not Transmit CD (E1) |]I2 |
| Check CD (G1) Transmit CD (E0) |]I1 | Check CD (G1) Do not Transmit CD (E1) |]I3 |

| Code Option | JAIM-ID | Code Option | JAIM-ID |
|--|-------------------|---|------------|
| IATA Option AIM/ISO15424 Code ID: R* | | | |
| Do not check CD (4H) Transmit CD (4L) | JR0 | Do not check CD (4H) Do not transmit CD (4M) | JR2 |
| Check FC and SN only (4I) or Check CPN,FC and SN (4J) or Check CPN,AC,FC and SN (4K) Transmit CD (4L) | JR1 | Check FC and SN only (4I) or Check CPN,FC and SN (4J) or Check CPN, AC, FC and SN (4K) Do not transmit CD (4M) | JR3 |
| MSI/Plessey Option AIM/ISO15424 Code ID: M*/X0 | | | |
| Check 1CD = MOD 10 (4B): (4B) + Transmit CD1 (4E) or (4B) + Do not transmit CD (4G) or (4B) + Transmit CD1 and CD2 (4F) | JM0 JM1 JX0 | Check 2CD's = MOD 10/MOD 11 (4D): (4D) + Transmit CD1 (4E) or (4D) + Do not transmit CD (4G) or (4D) + Transmit CD1 and CD2 (4F) | JX0 |
| Check 2CD's = MOD 10/MOD 10 (4C): (4C) + Transmit CD1 (4E) or (4C) + Not transmit CD (4G) or (4C) + Transmit CD1 and CD2 (4F) | JX0 | Check 2CD's = MOD 11/MOD 10 (4R): (4D) + Transmit CD1 (4E) or (4D) + Do not transmit CD (4G) or (4D) + Transmit CD1 and CD2 (4F) | JX0 |
| Telepen Option AIM/ISO15424 Code ID: B* | | | |
| Telepen (numeric or ASCII only): ASCII mode (D3) Numeric mode (D2) | JB0 JB1 | Telepen (numeric followed by ASCII): ASCII mode (D3) Numeric mode (D2) | JB0 JB2 |
| Telepen (ASCII followed by numeric) (not supported): ASCII mode (D3) Numeric mode (D2) | JB0 JB2 | | |
| Code 11 Option AIM/ISO15424 Code ID: H*/X0 | | | |
| Check 1CDs (BLG) or Check auto 1 or 2CDs (BLI) (length > 12) Transmit CD _(s) (BLK) | JH0 | Check 1CDs (BLG) or Check 2CDs (BLH) or Check auto 1 or 2CDs (BLI) (length > 12) Do not Transmit CD _(s) (BLJ) | JH3 |
| Check 2CDs (BLH) or Check auto 1 or 2CDs (BLI) (length > 12) Transmit CD _(s) (BLK) | JH1 | Do not check CD (BLF) Do not transmit CD (BLJ) | JX0 |
| Codablock F Option AIM/ISO15424 Code ID: O* | | | |
| FNC1 not used | JO4 | FNC1 in 1st position | JO5 |

| Code Option |]AIM-ID | Code Option |]AIM-ID |
|--|---------|---|---------|
| DataMatrix Options AIM/ISO15424 Code ID: d* | | | |
| ECC000-ECC140 |]d0 | ECC200, supporting ECI protocol |]d4 |
| ECC200 |]d1 | ECC200, FNC1 in 1st or 5th position and supporting ECI protocol |]d5 |
| ECC200, FNC1 in 1st or 5th position |]d2 | ECC200, FNC1 in 2nd or 6th position and supporting ECI protocol |]d6 |
| ECC200, FNC1 in 2nd or 6th position |]d3 | | |
| Aztec Options AIM/ISO15424 Code ID: z* | | | |
| No structure/other |]z0 | Structured append header included, FNC1 following an initial letter or pair of digits |]z8 |
| FNC1 preceding 1st message character |]z1 | | |
| FNC1 following an initial letter or pair of digits |]z2 | Structured append header included and ECI protocol implemented |]z9 |
| ECI protocol implemented |]z3 | | |
| FNC1 preceding 1st message character and ECI protocol implemented |]z4 | Structured append header included, FNC1 preceding 1st message character, ECI protocol implemented |]zA |
| FNC1 following an initial letter or pair of digits, ECI protocol implemented |]z5 | | |
| Structured append header included |]z6 | Structured append header included, FNC1 following an initial letter or pair of digits, ECI protocol implemented |]zB |
| Structured append header included and FNC1 preceding 1st message character |]z7 | | |
| QR Code Option AIM/ISO15424 Code ID: Q* | | | |
| Model 1 |]Q0 | Model 2, ECI protocol implemented FNC1 in first position |]Q4 |
| Model 2, ECI protocol not implemented |]Q1 | | |
| Model 2, ECI protocol implemented |]Q2 | Model 2, ECI protocol not implemented FNC1 in second position |]Q5 |
| Model 2, ECI protocol not implemented FNC1 in first position |]Q3 | | |
| | | Model 2, ECI protocol implemented FNC1 in second position |]Q6 |
| Maxi Code Option AIM/ISO15424 Code ID: U* | | | |
| Symbol in mode 4 of 5 |]U0 | Symbol in mode 4 of 5, ECI protocol implemented |]U2 |
| Symbol in mode 2 of 3 |]U1 | Symbol in mode 2 of 3, ECI protocol implemented |]U3 |

10.2 Q-250 Specification Overview

Q-250 specifications overview is as follows.

10.2.1 Common Specification Overview

| Item | | Specification | | Note | |
|----------------------------|-----------------------|--|--|---|---------|
| Control Section | CPU | CPU: MIPS Based, Dual core | | Core clock: 1.2GHz | |
| | DDR3 RAM | 1Gbit (128Mbyte) | | DDRCLK:1333 MHz | |
| | Flash ROM | 128Mbit (16Mbyte) | | | |
| Interface | USB | Full Speed 12Mbps (HID/COM) data port plus 12Mbps (COM) command port | | Bus powered, 500mA mode | |
| Indicator | LED | 2 red LEDs and 2 green LEDs | | Underneath the semi translucent dome | |
| | Buzzer | Loudness / tone adjustable | | | |
| Optical Section | Scanning method | | Monochrome CMOS area sensor | Frame rate: 120 fps | |
| | Scanning light source | | 8 white LEDs | Underneath the translucent dome for diffuse illumination. | |
| | Effective pixels | | 0.30 million pixels (H: 640 x V: 480) | | |
| | View angles | | Horizontal: 84.0° Vertical: 68.0° Diagonal: 96.0° | Lens EFI 1.02mm | |
| | Focal point | | Approx 2.5cm above the housing | | |
| Supported 1D Symbolologies | Symbolologies | 1D | All UPC/ENA/JAN including Addon, Code 39, Codabar, Industrial 2 of 5, Interleaved 2 of 5, Code 93, Code 128, GS1-128, MSI/Plessey, Code 11, UK Plessey, Telepen, Matrix 2 of 5 | | |
| | | Postal | Korean Postal Authority code, Chinese Post Matrix 2 of 5, Japanese Postal, Intelligent Mail Barcode, Postnet, Planet, Netherlands KIX Code, Australian Postal, UK Postal, 4-State Mailmark Barcode | | |
| | Minimum resolution | | Code 39 : 0.1 mm | | PCS 0.9 |
| | Curvature | | Radius \geq 20 mm (12-digit UPC) | | |
| | Barcode width | | Possible to read: Code 39 with 100 mm width and resolution 0.2mm (DOF: 127 mm) | | |
| | Motion tolerance | | Possible to read: UPC 100% moving at 3 m/s (DOF: 87 mm) | | |
| | Depth of field (mm) | Code 39 | Resolution (0.127) Resolution (0.254) Resolution (0.508) | TBD | |
| | | Code 128 | Resolution (0.20) | TBD | |
| UPC | | Resolution (0.33) | TBD | | |
| GS1/Composite | Symbolologies | GS1 DataBar , GS1 DataBar Limited , GS1 DataBar Expanded Composite GS1 DataBar, Composite GS1-128, Composite EAN , Composite UPC | | GS1 DataBar: formerly called "RSS" | |
| | Minimum resolution | GS1 DataBar Composite Code | TBD | PCS 0.9 | |

| Item | | Specification | | Note |
|------------------------------|----------------------------|--|---|--|
| Supported 2D Symbologies | Symbologies | | (micro)PDF417, Codablock F, (micro)QR Code, DataMatrix (ECC 200), MaxiCode, Aztec Code, Chinese Sensible Code | Disable Code 128 when Codablock F is enabled. |
| | Minimum resolution (mm) | | PDF417 QR Code Data Matrix | TBD |
| | Depth of field (mm) | PDF417 | Resolution (0.169) Resolution (0.254) | |
| | | QR Code | Resolution (0.169) Resolution (0.381) | |
| Data Matrix | | Resolution (0.169) Resolution (0.254) | | |
| Common | Scan angle | | Pitch $\pm 65^\circ$ Skew $\pm 65^\circ$ Tilt 360° | |
| | Minimum PCS | | 0.2 or more | MRD: 13% or more |
| Image capture | Image data format | | Windows Bitmap, JPEG | |
| | Shades of gray | | 1024, 256, 16, 2 | |
| | Range of output image | | Select top/bottom (column) and left/right (row) | |
| | Resolution of output image | | Full, 1/2, 1/4 | |
| | Interface of output image | | USB-COM or RS232 | |
| | Transfer time | | USB-COM: Around 80 frames/sec RS232: About 1 frame/sec | Resolution: Full |
| Power | Operating voltage | | $5V \pm 10\%$ | |
| | Current consumption | Reading | 370mA (typ) | Ambient temperature: 25°C |
| | | Auto trigger | 260mA (typ) | |
| | | Standby | 90mA (typ) | |
| Environmental Specifications | Temperature | Operating | -5 to 70 °C | |
| | | Storage | -30 to 60 °C | |
| | Humidity | Operating | 5 to 90% (no condensing, no frost) | |
| | | Storage | 5 to 90% (no condensing, no frost) | |
| | Ambient light immunity | Fluorescent | 10,000 lx or less | UPC 100% Optical axis angle: 75° Distance: 90 mm |
| | | Sunlight | 100,000 lx or less | |
| | Vibration | | 10 Hz to 100 Hz, acceleration of 19.6 m/s ² , 60 minutes per cycle, repeat once in each X, Y and Z-direction | |
| | Drop | | - | |
| Dust and drip proof | | - | | |

| Item | | Specification | Note | |
|-------------------|---|-------------------------------------|--|---------------------------------------|
| Regulatory | This scanner is an Exempt Risk Group LED product. | | | |
| | LED safety | IEC 62471:2006 Exempt Group | | |
| | EMI/RFI | EN55032 / FCC Class-B | For residential, commercial, and light-industrial environments | |
| | Product safety | CE Marking | | |
| | Electromagnetic compatibility (EMC) | EN55024 (EN61000-6-1) Class-B | For residential, commercial, and light-industrial environments | |
| Immunity Test | ESD immunity | No damage | Air discharge (direct): ± 15 kV | Condition: IEC:61000-4-2 compliant |
| | | No malfunction | Contact discharge (direct / indirect): ± 6 kV Air discharge (direct): ± 8 kV | |
| | Radio-frequency electromagnetic field. Amplitude modulation | Frequency | 80 to 1000 MHz | Condition: IEC61000-4-3 compliant |
| | | Level | 3 V/m | |
| | | AM | 80% (AM) | |
| | Fast transient | Voltage | Alternating-current input cable: ± 1 kV | Condition: IEC61000-4-4 compliant |
| | | Pulse | 5 / 50 ns (Tr / Tw) | |
| | | Frequency | 5 kHz | |
| | Surge | Pulse | 1.2 / 50 ns (Tr / Th) | Condition: IEC61000-4-5 compliant |
| | | Voltage | From L to P : ± 2 kV (closed-loop voltage) From L to L : ± 1 kV (closed-loop voltage) | |
| | Radio-frequency common mode | Frequency | 0.15 to 80 MHz | Condition: IEC61000-4-6 compliant |
| | | Level | 3 V | |
| | | AM | 80% (AM) | |
| | Power frequency magnetic field | Frequency | 50 and 60 Hz | Condition: IEC61000-4-8 compliant |
| | | Level | 3 A/m | |
| | Voltage dip, momentary voltage drop, fluctuation | Dip 1 | Drop 30%, 0.5 cycles (both half cycles tested) | Condition: IEC61000-4-11 compliant |
| | | Dip 2 | Drop 60%, 5 cycles | |
| Momentary drop | | Drop > 95%, 250 cycles | | |
| Physical Features | Dimensions | Approx. 68.0 × 77.0 × 39.1 (WDH mm) | Excluding cable | |
| | Weight | Approx. 100g | Excluding cable | |
| | Housing color | Black | | |

10.2.2 Technical Specifications

The conditions for technical specifications are as follows, unless otherwise specified in each section.

Conditions

| | |
|----------------------------------|---|
| Ambient Temperature and Humidity | Room temperature, room humidity |
| Ambient Light | 100 to 500 lux |
| Angles | Pitch: $\alpha = 0^\circ$, Skew: $\beta = +15^\circ$, Tilt: $\gamma = 0^\circ$ |
| Curvature | $R = \infty$ |
| USB Power Supply Voltage | 5.0 V |
| PCS (1D and 2D) | 0.9 or higher |
| Scanning Test | Accept the performance with 90% or more success rate for 10 tries of scan. One reading should be 2 seconds. |
| Barcode Test Sample (1D and 2D) | Specified at section 8.1 |

All measurements are done without specular (mirror-like) reflection of the illumination LEDs.

Reading Depth of Field

| Resolution | Code | No. of Digits | Depth of field (mm) (Certified value) | | Depth of field (mm) (Typ) | |
|------------|-------------|---------------|---------------------------------------|-----|---------------------------|-----|
| | | | Near | Far | Near | Far |
| 0.127mm | Code 39 | 4 digits | 10 | 75 | | |
| 0.254mm | Code 39 | 7 digits | 10 | 115 | | |
| 0.508mm | Code 39 | 4 digits | | | | |
| 0.20mm | Code 128 | 16 digits | | | | |
| 0.33mm | UPC/EAN | 12 digits | | | | |
| 0.169mm | PDF417 | 58 digits | | | | |
| 0.254mm | PDF417 | 58 digits | | | | |
| 0.169mm | QR Code | 44 digits | 15 | 40 | | |
| 0.381mm | QR Code | 44 digits | 5 | 115 | | |
| 0.169mm | Data Matrix | 40 digits | | | | |
| 0.254mm | Data Matrix | 40 digits | | | | |

10.2.3 Q-250 Detailed View

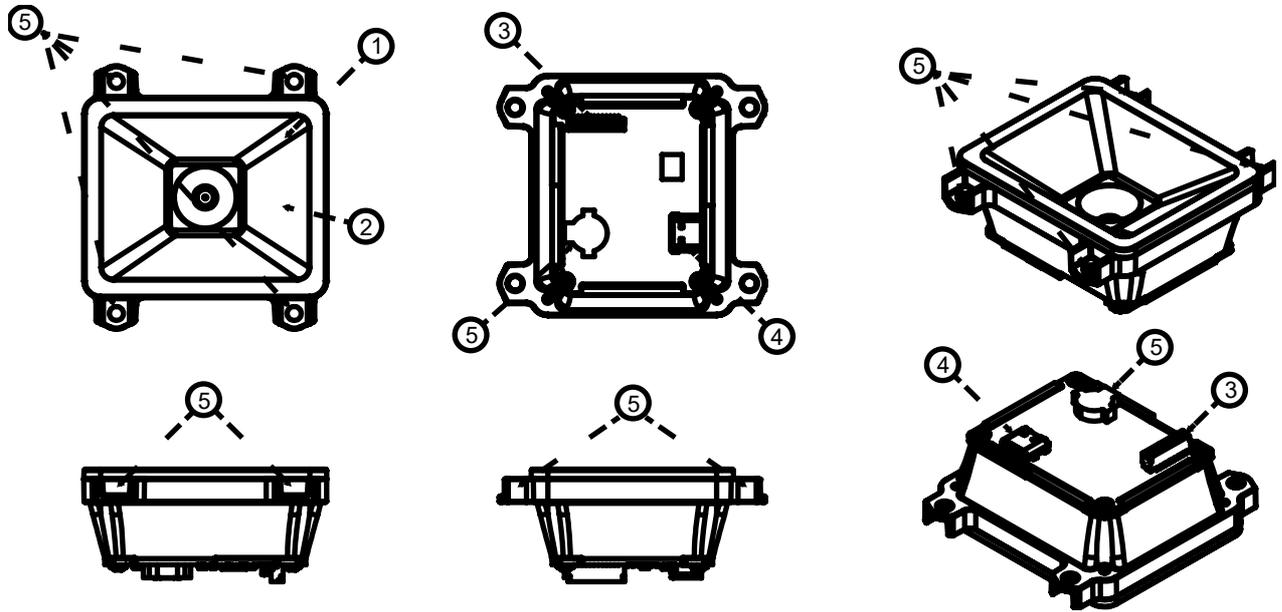





Figure 1: Detailed View of Q-250

| No. | Name | Description |
|-----|----------------------------|--|
| 1 | Illumination dome | Underneath the semi-translucent dome there are 4 illumination LED's |
| 2 | Status LED | Underneath the semi-translucent dome. Red indicates scanning. Green is good read. |
| 3 | USB/RS232 Interface header | Header for providing power to the scanner and connecting an USB or RS232 interface |
| 4 | USB-C Interface | USB-C socket for providing power to the scanner and USB interface |
| 5 | Mounting holes | Ø ±3.5mm |


10.3 Sample Codes

10.3.1 1D Code



UPC

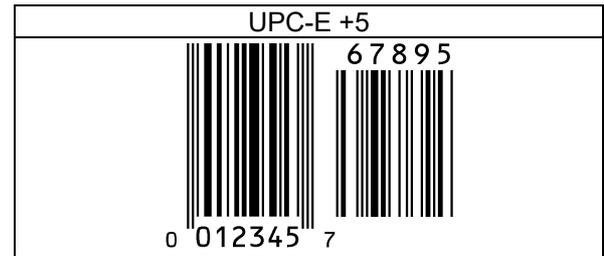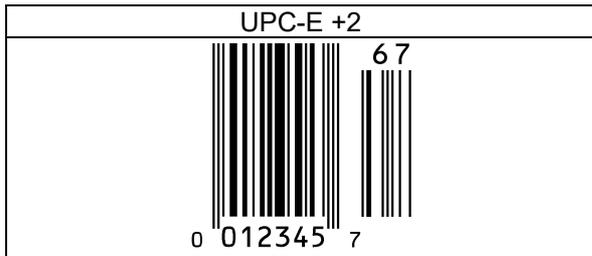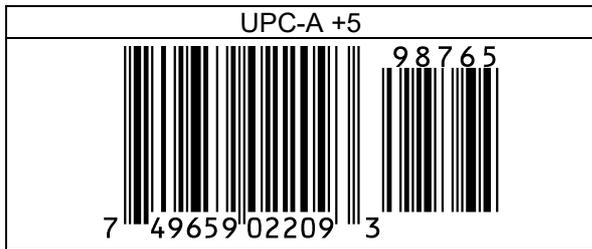


EAN/JAN

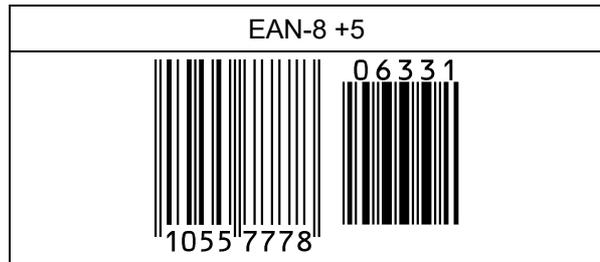


Code 39

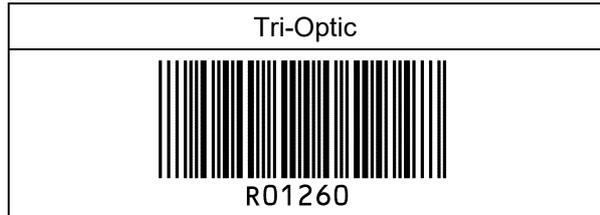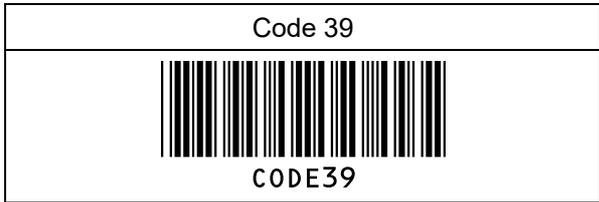

Codabar

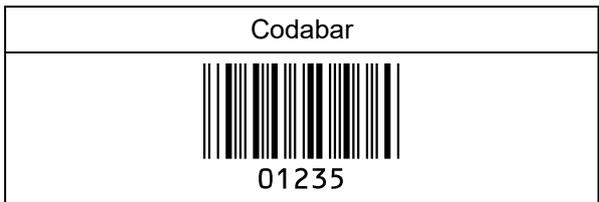


Industrial 2 of 5 / Interleaved 2 of 5

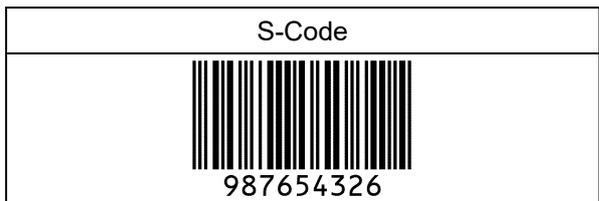

Code 128



Code 93

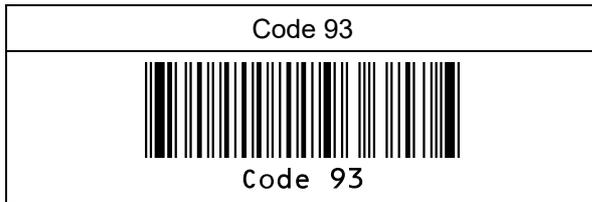

IATA



MSI/Plessey



UK/Plessey




Telepen



Code11



Matrix 2 of 5

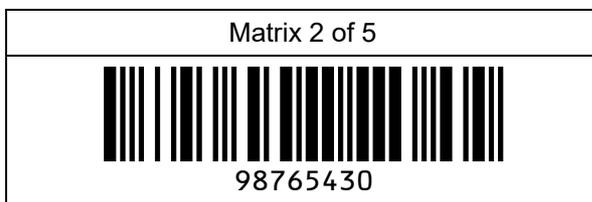

10.3.2 Postal Code

| | |
|---|--|
| Chinese Post Matrix 2 of 5  01647100611 | Korean Postal authority  345-678 |
| Intelligent Mail Barcode  94765432101234567890 | |
| POSTNET  012340 | |
| PLANET  012345678905 | |
| Japan Postal  33500024-12-17 | |
| Netherland KIX Code  3992RK28 | |
| Australian Postal  56439111ABA9 | |
| UK Postal(Royal mail)  12345678 | |
| 4-State Mailmark Barcode  41038422416563762EF61AH8T | |

10.3.3 GS1 DataBar

GS1 DataBar Omnidirectional



0165473728281919

GS1 DataBar Truncated



0100012345678905

GS1 DataBar Stacked



(01)04912345678904

GS1 DataBar Stacked Omnidirectional



(01)04912345678904

GS1 DataBar Limited




(01)04912345678904

GS1 DataBar Expanded



(01)04912345678904
(17)200815
(10)0145678

GS1 DataBar Expanded Stacked

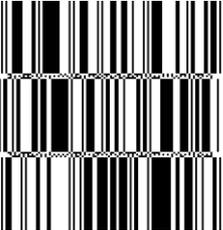

(01)04912345678904
(17)200815
(10)0145678
(21)0802

10.3.4 GS1 Composite Code

CC-A

(17) 120903
(10) cca



(01) 0 4912345 67890 4

CC-B

(17) 120903
(10) ccb
(240) 123456789omnidirectionalccb



(01) 0 4912345 67890 4

Limited CC-A

(17) 170330 (10) ABCCA



(01) 1 4512345 67890 3

Limited CC-B

(17) 170330
(10) ABCCB
(240) 12345678limitedccb



(01) 1 4512345 67890 3

Expanded CC-A

(17) 890805
(10) CCA



(01) 00000123000017

Expanded CC-B

(17) 890805
(10) CCB
(240) 1U16C19A876B54T3210expandedccb



(01) 00000123000017

Composite GS1-128

CC-A

(17) 201231 (10) GS1128CCA



(01) 2 0012345 67890 9

CC-B

(17) 201231
(10) GS1128CCB
(240) 123456789 gs1-128_ccb



(01) 2 0012345 67890 9

CC-C

(17) 201231
(10) GS1128CCC



(01) 2 0012345 67890 9

Composite EAN

EAN-13 CC-A

0123456789548
 (17) 120304
 (10) EANCCA



EAN-13 CC-B

0123456789548
 (17) 120304
 (10) EANCCB
 (240) 21U16C19A876B54T3210ean13cc-b



EAN-8 CC-A

12345670
 (17) 160401
 (10) EAN8CCA



EAN-8 CC-B

12345670
 (17) 170408
 (10) EAN8CCB
 (240) 12345678ean8ccb



Composite UPC

UPC-A CC-A

314159265358
 (17) 170809
 (10) UPCACCA



UPC-A CC-B

314159265358
 (17) 170809
 (10) UPCACCB
 (240) 21U16C19A876B54T3210UPCACCB



UPC-E CC-A

01234565
 (17) 040104
 (10) UPCECCA




UPC-E CC-B

01234565
 (17) 040104
 (10) UPCECCB
 (240) 12345678upceccb



10.3.5 2D Code
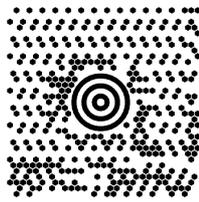
| | |
|---|---|
| <p>PDF417</p>  <p>PDF417 sample</p> | <p>MicroPDF417</p>  <p>Micro PDF417 sample</p> |
| <p>Codablock F</p>  <p>123406</p> | <p>QR Code</p>  <p>QR Code</p> |
| <p>Micro QR</p>  <p>Micro QR</p> | <p>Data Matrix(ECC 200)</p>  <p>Data Matrix</p> |
| <p>Data Matrix(ECC 140)</p>  <p>Data Matrix ECC140</p> | <p>DMRE (Datamatrix Rectangular Extension)</p>  <p>1234</p> |
| <p>Aztec Code</p>  <p>Aztec code</p> | <p>Aztec Runes</p>  <p>025</p> |
| <p>Chinese-sensible code (Han Xin Code)</p>  <p>12345678</p> | <p>Maxi Code</p>  <p>12345678</p> |

